

[Manuals.plus](#) /

› [TICWELL](#) /

› TICWELL Professional Vertical Garment Steamer User Manual

TICWELL LS-758S

TICWELL Professional Vertical Garment Steamer

Model: LS-758S

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always unplug the steamer from the electrical outlet immediately after use and before cleaning.
- Do not leave the steamer unattended while it is operating.
- Use the appliance only for its intended use as described in this manual.
- To reduce the risk of electric shock, do not immerse the steamer in water or other liquids.
- Do not operate the steamer with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the steam hose and nozzle away from children.
- Always ensure the water tank is securely in place before operating.
- Use distilled or demineralized water to prevent mineral buildup and extend the life of the steamer.
- Wear the provided protective gloves when handling the hot steam head.

PRODUCT OVERVIEW

Familiarize yourself with the components of your TICWELL Professional Vertical Garment Steamer.



Image: The TICWELL Professional Vertical Garment Steamer, showcasing its compact main unit with wheels and the adjustable stand with hanger and steam head holder.

Components Diagram



Image: A detailed diagram labeling the key components of the steamer, including the hanger, steam head holder, stainless steel pole, steam level dial, trouser stretcher, steam nozzle, removable water tank, and main body.

1. **Hanger / Hanger Hook:** For hanging garments during steaming.
2. **Steam Head Holder:** Securely holds the steam head when not in use.
3. **Stainless Steel Pole:** Adjustable pole for varying heights.
4. **Steam Levels Dial:** Controls the steam output and self-cleaning function.
5. **Trousers Stretcher:** Accessory for steaming trousers and other flat items.
6. **Steam Nozzle:** The part that emits steam.
7. **Removable Water Tank:** Holds up to 2.4 liters of water.

8. **Main Body:** Contains the heating element and water pump.

SETUP

Follow these steps to set up your steamer for first use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble the Pole:** Insert the stainless steel pole sections into the main body and secure them.
3. **Attach Hanger and Holder:** Place the hanger and steam head holder onto the top of the pole.
4. **Fill Water Tank:** Remove the 2.4L water tank from the main unit. Unscrew the cap and fill with distilled or demineralized water. Do not overfill.



Image: The large 2.4L removable water tank being filled, demonstrating its capacity.

5. **Insert Water Tank:** Place the filled water tank back into the main body, ensuring it is seated correctly.
6. **Connect Hose:** Attach the steam hose to the designated port on the main unit. Ensure it is securely fastened.
7. **Plug In:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Learn how to effectively use your garment steamer for various fabrics.

Steam Levels and Pre-heating

- The steamer features 4 powerful steam levels, including three adjustable steam settings (I, II, III) and a self-cleaning mode.
- Turn the steam levels dial to your desired setting. The steamer will pre-heat rapidly in approximately 20 seconds.
- The maximum steam temperature reaches 150 °C (302 °F).

4 LEVELS

3-powerful steam

1-Self-cleaning function



20S

Fast pre-heating

90°

Swivel head to
switch between flat
and vertical ironing



Image: The steamer's control dial indicating different steam levels (Off, I, II, III, Clean) and highlighting the fast 20-second pre-heating time and 302°F maximum temperature.

Steaming Garments

1. Hang the garment on the provided hanger.
2. Select the appropriate steam level for your fabric type.
 - Level I: Delicate fabrics (silk, chiffon)
 - Level II: Medium fabrics (cotton, linen)
 - Level III: Heavy fabrics (wool, denim)

3. Hold the steam head a few inches away from the fabric and move it slowly up and down. For stubborn wrinkles, gently press the steam head against the fabric.
4. The ceramic heating panel and ten-hole steam outlet ensure uniform heat and efficient wrinkle removal.
5. For continuous steam, press the steam trigger on the handle.
6. Always wear the protective gloves provided to avoid burns from hot steam or the steam head.



4 LEVELS

Four steam modes



20 SEC

Fast preheating



302 °F

Maximum temperature of steam



Before



After

* Do not touch the ironing panel during use



Image: A visual comparison of a wrinkled shirt (Before) and the same shirt after being steamed with the TICWELL steamer (After), demonstrating effective wrinkle removal.

90° Swivel Head for Vertical and Horizontal Steaming

The steam head can be rotated 90 degrees to switch between vertical and horizontal steaming, offering versatility for different garment types and steaming preferences.



90° Rotatable Head

Easily switch between horizontal and vertical ironing



Image: A sequence of images demonstrating how to rotate the steam head 90 degrees by pressing and sliding, allowing for both vertical and horizontal steaming.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steamer.

Self-Cleaning Function

- The steamer includes a self-cleaning mode to reduce dirt and mineral residue buildup.
- To activate, turn the steam levels dial to the “Clean” setting. Follow the instructions in the manual for the specific self-cleaning procedure.
- It is recommended to perform the self-cleaning function regularly, especially if you notice reduced steam output or mineral deposits.

Draining and Storage

- After each use, unplug the steamer and allow it to cool completely.
- Remove the water tank and empty any remaining water.
- Wipe down the exterior of the steamer with a soft, damp cloth.
- Store the steamer in a cool, dry place, away from direct sunlight.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No steam or low steam output.	◦ Water tank is empty. ◦ Steamer not pre-heated. ◦ Mineral buildup in the heating element or nozzle. ◦ Hose kinked or blocked.	◦ Refill the water tank. ◦ Allow 20 seconds for pre-heating. ◦ Perform the self-cleaning function. Use distilled water. ◦ Straighten the hose and check for blockages.
Water leaking from the steam head.	◦ Condensation in the hose. ◦ Steamer not hot enough. ◦ Overfilling the water tank.	◦ Hold the hose upright to allow condensation to drain back into the unit. ◦ Allow the steamer to fully pre-heat before use. ◦ Do not overfill the water tank.
Steamer not turning on.	◦ Not plugged in correctly. ◦ Power outlet issue.	◦ Ensure the power cord is securely plugged into a working outlet. ◦ Test the outlet with another appliance.

SPECIFICATIONS

Brand	TICWELL
Model Number	LS-758S

Color	White
Capacity	2.4 Liters
Power	1600 Watts
Voltage	230 Volts
Item Weight	4.95 Kilograms
Package Dimensions	37.4 x 37.29 x 35.2 cm

WARRANTY AND SUPPORT

TICWELL is committed to customer satisfaction. If you have any questions or require support, please do not hesitate to contact us.

We aim to respond to all inquiries within 24 hours.

For assistance, please refer to the contact information provided with your purchase or visit the official TICWELL website.

© 2024 TICWELL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

