



Manuals.plus /

› Lemax /

› Lemax Rustic Water Tower #03526 Instruction Manual

## Lemax 03526

# Lemax Rustic Water Tower #03526 Instruction Manual

Model: 03526

## 1. INTRODUCTION

---

This manual provides essential information for the safe and proper use, setup, and maintenance of your Lemax Rustic Water Tower #03526. This decorative piece is designed to enhance your Christmas village display with its charming design and festive details. Please read this manual thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

- This product is for indoor decorative use only. Do not expose to water or extreme temperatures.
- Keep out of reach of small children and pets. This item contains small parts that could be a choking hazard.
- Do not attempt to modify or disassemble the product. This may cause damage and void any warranty.
- Place the item on a stable, flat surface to prevent tipping.

## 3. PACKAGE CONTENTS

---

Verify that all components are present upon unpacking:

- 1 x Lemax Rustic Water Tower #03526

*Note: This product is non-electrical and does not require batteries or external power.*

## 4. SETUP

---

The Lemax Rustic Water Tower #03526 is designed for immediate display with minimal setup.

1. Carefully remove the water tower from its packaging.
2. Place the water tower on a flat, stable surface within your Christmas village display. Ensure it is not near any heat sources or in direct sunlight to prevent fading or damage.
3. Adjust its position as desired to integrate it into your scene.



Figure 1: Front view of the Lemax Rustic Water Tower #03526, featuring a red and green design with a Santa Claus painting and a yellow star on top.



Figure 2: Side view of the Lemax Rustic Water Tower #03526, showing the detailed red support structure and green water tank.

## 5. OPERATING

---

This model is a non-electrical decorative piece and does not feature any operational functions such as lights or moving parts. Its charm comes from its detailed craftsmanship and visual appeal within your village.

## 6. MAINTENANCE

---

- **Cleaning:** Gently wipe the surface with a soft, dry cloth to remove dust. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the water tower in its original packaging or a protective container in a cool, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

---

As a non-electrical item, troubleshooting is minimal. If the item appears damaged, inspect it for any visible cracks or breaks. For significant damage, refer to the warranty information.

## 8. SPECIFICATIONS

---

<b>Product Dimensions</b>	4.69 x 4.33 x 9.49 inches
<b>Item Weight</b>	7 ounces
<b>Model Number</b>	03526
<b>Manufacturer</b>	Lemax
<b>Year Released</b>	2021
<b>Village Collection</b>	Vail Village
<b>Power Source</b>	Non-Electrical

## 9. WARRANTY AND SUPPORT

---

For warranty information, product support, or to inquire about replacement parts, please contact Lemax customer service directly. Refer to the product packaging or the official Lemax website for the most current contact details and warranty policies.