

Altec Lansing IMT7002-BLK

Altec Lansing SoundRover Wireless Trolley Bluetooth Speaker User Manual

Model: IMT7002-BLK

Brand: Altec Lansing

INTRODUCTION

The Altec Lansing SoundRover Wireless Trolley Bluetooth Speaker is a versatile and powerful audio system designed for various occasions, from parties and karaoke to outdoor gatherings. This manual provides essential information on setting up, operating, and maintaining your SoundRover speaker to ensure optimal performance and longevity.

WHAT'S IN THE Box

- Altec Lansing SoundRover Wireless Trolley Bluetooth Speaker
- Wireless Microphone
- AC Power Cable (for charging and continuous power)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the key components and features of your SoundRover speaker.

Front View and LED Lights



Figure 1: Front view of the SoundRover speaker, showcasing the main speaker and the dynamic LED light ring. The speaker features 7 LED light modes that beat, strobe, and pulse with your music, enhancing the party atmosphere.

Control Panel (Rear View)



Figure 2: The rear control panel includes power switch, AC input, antenna, USB power out, microphone input, auxiliary input, and adjustable knobs for mic level, bass, treble, and master volume. A digital display shows current mode and battery indicator.

Portability Features



ALTEC
LANSING

Figure 3: The SoundRover is designed for easy transport with an integrated carry handle and smooth-rolling wheels, making it convenient to move for any event.

Included Wireless Microphone



Figure 4: The package includes a wireless microphone, perfect for karaoke, public announcements, or amplifying your voice during events.

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied AC power cable to the AC INPUT port on the rear panel and plug it into a standard wall outlet (100-240V AC 60Hz). The battery indicator will show charging status. A full charge provides approximately 6 hours of playtime.

2. Powering On/Off

Locate the POWER switch on the rear control panel. Slide the switch to the "ON" position to power on the speaker. Slide to "OFF" to power off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by "bt" on the display).
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "SoundRover" from the list of devices.
4. Once paired, the speaker will emit an audible confirmation, and the "bt" indicator will stabilize.

4. Connecting the Microphone

Plug the wireless microphone's cable into the "MIC IN" jack on the rear panel. Adjust the "MIC LEVEL" knob to control the microphone's volume.

5. Using Aux-In

For non-Bluetooth devices, connect an auxiliary cable (not included) from your device's audio output to the "AUX IN" port on the rear panel. The speaker will automatically switch to Aux mode.

6. Using USB Power Out

The "USB POWER OUT" port (5V 1A) can be used to charge your smartphone or other USB-powered devices while the speaker is on.

OPERATING INSTRUCTIONS

Adjusting Audio Levels

- **Volume:** Use the "VOLUME" knob on the rear panel to adjust the overall sound output.
- **Bass:** Turn the "BASS" knob to increase or decrease the low-frequency sounds.
- **Treble:** Turn the "TREBLE" knob to increase or decrease the high-frequency sounds.
- **Mic Level:** Adjust the "MIC LEVEL" knob to control the microphone's volume independently.

Changing Light Modes

Press the "LIGHT MODES" button on the control panel to cycle through the 7 different LED light modes. Press and hold the button to turn the lights off.



Figure 5: The speaker's LED lights can be customized to beat, strobe, or pulse, adding a visual element to your audio experience.

Using the Microphone for Karaoke/PA

With the microphone connected, you can sing along to music playing via Bluetooth or Aux-In, or use it for public announcements. Adjust the "MIC LEVEL" for desired microphone volume.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the Altec Lansing SoundRover Bluetooth Speaker with Microphone in use, highlighting its features for parties and events.

FM Radio Function

Extend the antenna on the rear panel for better reception. Press the "FM/LINE" button to switch to FM radio mode. Use the "PREV" and "NEXT" buttons to tune to different stations. Press and hold "HOLD/FM SCAN" to auto-scan and save available stations.

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the AC power cable is securely connected and plugged into a working outlet. Check if the battery is charged.
No sound from speaker.	Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, Aux) is selected.
Bluetooth device cannot pair.	Make sure the speaker is in Bluetooth pairing mode. Ensure your device's Bluetooth is enabled and within range. Try unpairing and re-pairing.
Microphone not working.	Check if the microphone is properly plugged into the "MIC IN" jack. Adjust the "MIC LEVEL" knob. Ensure the microphone's power switch (if applicable) is on.

SPECIFICATIONS


Feature	Detail
Model Name	SoundRover
Speaker Type	Woofer
Speaker Maximum Output Power	180 Watts
Connectivity Technology	Bluetooth, FM
Battery Life	Up to 6 Hours (rechargeable)
USB Power Out	5V 1A (for smartphone charging)
Included Components	Wireless Microphone, USB ports for smartphone charging
Product Dimensions	15.75"D x 19.5"W x 30"H
Item Weight	34.1 pounds

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Altec Lansing website. Keep your purchase receipt as proof of purchase for any warranty claims.

Note: Product specifications and features are subject to change without notice.

Documents - Altec Lansing – IMT7002-BLK

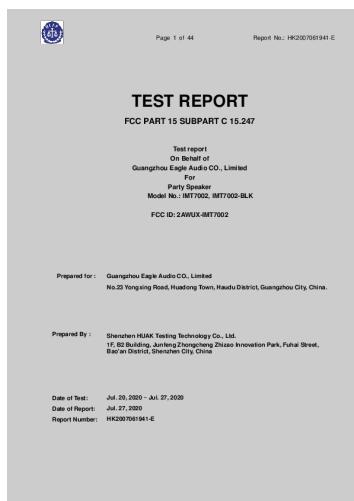

[\[pdf\] Test Report](#)

Measurement Report Kent Nei IMT7002 FCC ID 15 247 Test BT EDR Guangzhou Eagle Audio CO

Limited Party Speaker 2AWUX 2AWUXIMT7002 imt7002

Page 1 of 44 Report No.: HK2007061941-E TEST REPORT FCC PART 15

SUBPART C 15.247 Test report On Behalf of Guangzhou Eagle Audio CO., Limited

For Party Speaker Model No.: IMT7002, **IMT7002-BLK** FCC ID: 2AWUX-IMT7002

Prepared for : Guangzhou Eagle Audio CO., Limited No.23 Yongxing Road, Huadong Town...

lang:en score:20 filesize: 3.96 M page_count: 44 document date: 2020-08-03