

[Manuals.plus](#) /

› [Tupperware](#) /

› Tupperware 38121 Cake Decorating Cream Bag Instruction Manual

Tupperware 38121

Tupperware 38121 Cake Decorating Cream Bag Instruction Manual

INTRODUCTION

Thank you for choosing the Tupperware 38121 Cake Decorating Cream Bag. This versatile tool is designed to assist you in creating beautifully decorated cakes, pastries, and desserts. With its 400 ml capacity and five interchangeable nozzles, it offers flexibility for various decorating techniques. This manual provides essential information for the proper setup, operation, and maintenance of your decorating bag to ensure optimal performance and longevity.



This image shows the white Tupperware cake decorating cream bag laid flat, with five translucent plastic nozzles and a connector piece arranged to its left. The Tupperware logo is visible on a black tag attached to the bag.

SETUP

1. **Prepare the Bag:** Ensure the decorating bag is clean and dry before use.
2. **Select a Nozzle:** Choose one of the five provided nozzles based on your desired decorating pattern.
3. **Attach the Nozzle:** Insert the chosen nozzle from the inside of the bag through the opening at the tip. Secure it by screwing the outer ring onto the bag from the outside, ensuring a tight fit to prevent leakage.
4. **Fill the Bag:** Fold down the top edges of the bag to create a wider opening. Use a spatula to carefully fill the bag with your desired cream, icing, or batter. Do not overfill; leave enough space at the top to twist or tie the bag closed.
5. **Seal the Bag:** Twist or tie the open end of the bag to prevent the contents from spilling out during use.

OPERATING INSTRUCTIONS

- **Hold the Bag:** Grip the twisted end of the bag firmly with one hand, applying gentle pressure. Use your other hand to guide the nozzle.
- **Apply Pressure:** Squeeze the bag evenly from the top to push the contents through the nozzle. Maintain consistent pressure for smooth, continuous lines or shapes.
- **Decorating Techniques:** Experiment with different nozzles and pressure levels to achieve various effects, such as writing, borders, stars, or rosettes.
- **Changing Nozzles:** During work, nozzles can be changed by unscrewing the outer ring, replacing the nozzle, and re-securing the ring.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Tupperware decorating bag.

- **Emptying the Bag:** After use, empty any remaining contents from the bag.
- **Cleaning the Bag:** The decorating bag should be washed by hand. Use warm, soapy water and rinse thoroughly. Allow it to air dry completely before storing.
- **Cleaning the Nozzles:** The five nozzles are dishwasher safe. Place them in the dishwasher or wash them by hand with warm, soapy water, ensuring all residue is removed.
- **Storage:** The nozzles can be conveniently stored inside the bag when not in use. Store the clean, dry bag and nozzles in a cool, dry place.

TROUBLESHOOTING

- **Contents not flowing smoothly:** Ensure the nozzle is not clogged. Check that the contents are of a consistent, appropriate consistency for piping.
- **Leakage around the nozzle:** Verify that the nozzle is correctly inserted and the outer ring is screwed on tightly.
- **Difficulty squeezing:** The contents might be too thick or the bag might be overfilled. Adjust consistency or reduce the amount of filling.

SPECIFICATIONS

Model Number	38121
--------------	-------

Brand	Tupperware
Capacity	400 ml
Dimensions (Bag)	Approximately L 30 x W 20.5 cm
Number of Nozzles	5
Material	Plastic
Color	White
Package Dimensions	16.8 x 8 x 5.9 cm
Package Weight	40 grams

WARRANTY AND SUPPORT

Tupperware products are known for their quality and durability. For specific warranty information or customer support, please refer to the official Tupperware website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08W8B938K>

More documents and user manuals: <https://manuals.plus/>