



Manuals.plus /

› Hamilton Beach /

› Hamilton Beach HBF713 7 Cu. Ft. Chest Deep Freezer Instruction Manual

Hamilton Beach HBF713

Hamilton Beach HBF713 7 Cu. Ft. Chest Deep Freezer Instruction Manual

INTRODUCTION

Welcome to your new Hamilton Beach HBF713 Chest Deep Freezer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions thoroughly before installation and use, and keep them for future reference.



Front view of the Hamilton Beach HBFRF713 Chest Deep Freezer. This image shows the overall design and exterior of the unit.

IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your freezer, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces, especially when hands are damp or wet.
- Never allow children to operate, play with, or crawl inside the appliance.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Unplug the freezer before cleaning or making any repairs.
- Ensure the appliance is properly grounded.
- Do not use extension cords or ungrounded (two-prong) adapters.
- Keep ventilation openings clear of obstruction.

SETUP AND INSTALLATION

Unpacking

Remove all packaging materials, including foam and adhesive tape. Before plugging in the freezer, clean

the interior and exterior surfaces with a soft cloth and mild detergent.

Placement

Place the freezer on a flat, solid surface strong enough to support it when fully loaded. Ensure adequate air circulation around the unit. Maintain at least 4 inches (10 cm) of space on the sides and back, and 8 inches (20 cm) at the top. Avoid placing the freezer in direct sunlight or near heat sources like stoves or heaters. The dimensions of the unit are approximately 22.83 inches (D) x 38.58 inches (W) x 35.04 inches (H).

Power Connection

Plug the freezer into a dedicated 120 Volt, 60 Hz, 15 Amp grounded electrical outlet. Do not use an extension cord or a multi-outlet adapter. Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.



Top-down view of the Hamilton Beach HBF713 Chest Deep Freezer with the lid open, showing the interior and wire basket. This illustrates the internal layout and capacity.

OPERATING INSTRUCTIONS

Adjustable Thermostat

The freezer is equipped with an adjustable thermostat located on the front of the unit. Turn the knob to select the desired temperature setting. Settings range from '1' (least cold) to '7' (coldest). A setting of '4' or '5' is generally recommended for optimal food preservation.

Power Indicator Lights

The control panel includes two indicator lights:

- **Power (Green):** Illuminates when the freezer is connected to power.
- **Run (Blue):** Illuminates when the compressor is actively cooling.



Close-up of the adjustable thermostat and power indicator lights on the Hamilton Beach HBFRF713 Chest Deep Freezer. This image highlights the control interface.

Food Storage and Removable Basket

The 7 cu. ft. capacity provides ample space for frozen goods. Utilize the removable vinyl-coated wire basket for organizing smaller items or frequently accessed foods, keeping them easily accessible at the top of the freezer compartment.

Hamilton Beach® GARAGE READY

Designed to operate effectively in
extreme ambient temperatures



Interior view of the Hamilton Beach HBFRF713 Chest Deep Freezer showing the removable wire basket. This demonstrates how the basket can be used for organization.

MAINTENANCE AND CARE

Defrosting


This freezer requires manual defrosting. Defrost when the frost accumulation reaches approximately 1/4 to 1/2 inch (0.6 to 1.2 cm) thick. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food and store it in another freezer or cooler.
3. Open the freezer lid and locate the easy access defrost drain at the bottom of the unit. Place a shallow pan or towel beneath the drain to collect water.
4. Allow the frost to melt naturally. You can speed up the process by placing bowls of hot water inside the freezer (do not use sharp objects to remove ice).
5. Once defrosted, clean and dry the interior thoroughly.
6. Close the drain plug, plug in the freezer, and return food once the temperature has stabilized.

Hamilton Beach® LARGE STORAGE CAPACITY



Wired Removeable
Shelf

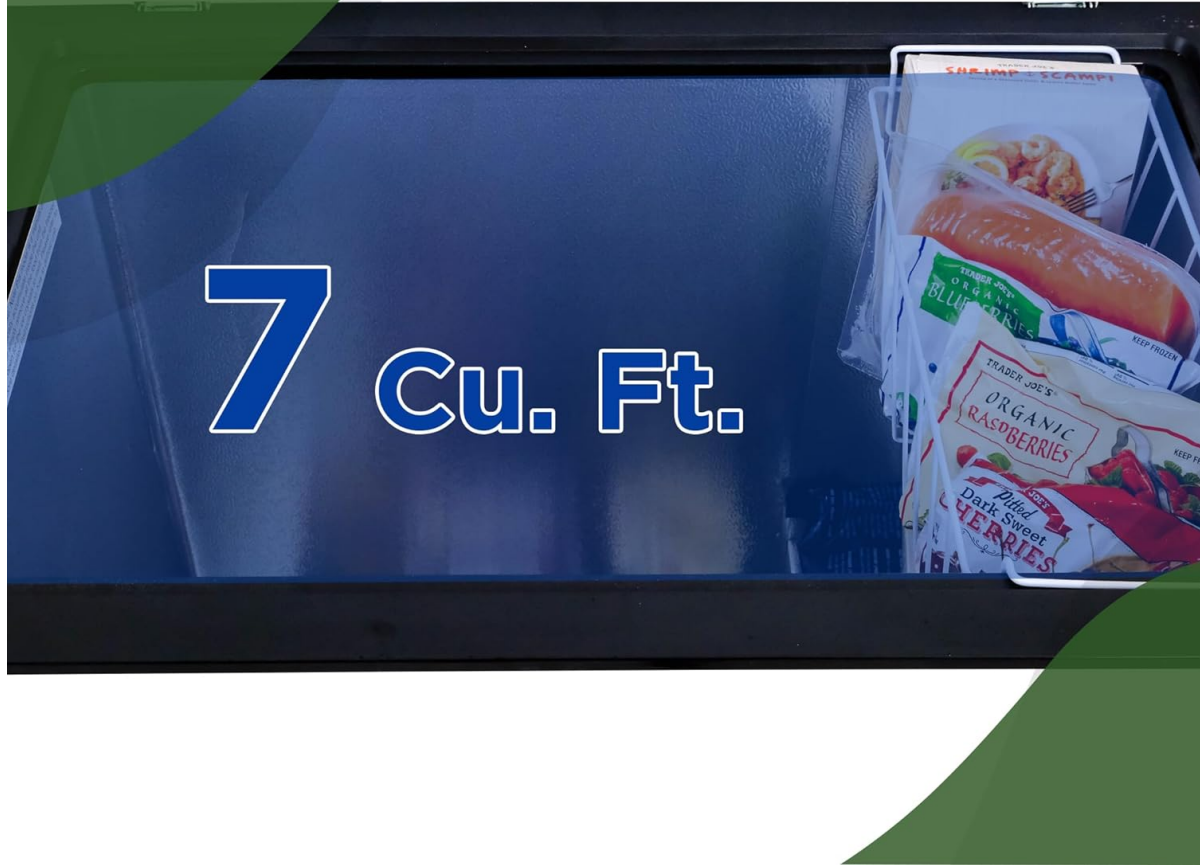

Close-up of the easy access defrost drain on the Hamilton Beach HBFRF713 Chest Deep Freezer. This image shows the drain plug for convenient defrosting.

Cleaning

Clean the interior and exterior surfaces regularly with a mild detergent and warm water. Avoid abrasive cleaners or harsh chemicals. Ensure the door gasket is clean and free of debris to maintain an airtight seal.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Freezer does not operate.	Not plugged in; circuit breaker tripped; power outage.	Ensure plug is secure; reset circuit breaker; check household power.
Temperature is not cold enough.	Thermostat set too warm; door opened too frequently; excessive food load; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; allow space for air circulation; ensure proper clearance around unit.
Excessive noise.	Freezer not level; objects vibrating against the unit; normal compressor operation.	Adjust leveling feet; ensure nothing is touching the freezer; some operational sounds are normal.
Door does not close properly.	Freezer not level; gasket dirty or damaged; food packages obstructing closure.	Level the freezer; clean or replace gasket; rearrange food items.

SPECIFICATIONS

Brand: Hamilton Beach

Model Name: HBFRF713

Capacity: 7 Cu. Ft.

Product Dimensions (D x W x H): 22.83" x 38.58" x 35.04"

Item Weight: 75 Pounds

Voltage: 120 Volts

Installation Type: Freestanding

Door Orientation: Top

Included Components: Freezer, Basket, Shelf, Owners Manual

UPC: 058465819507

WARRANTY INFORMATION

This Hamilton Beach HBFRF713 Chest Deep Freezer comes with a **1-year warranty covering parts and labor** from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or improper installation.

CUSTOMER SUPPORT

For technical assistance, warranty service, or questions regarding your Hamilton Beach HBFRF713 Chest Deep Freezer, please contact the manufacturer, Curtis International LTD. Refer to the contact information provided in your original packaging or visit the Hamilton Beach official website for support details.

PRODUCT OVERVIEW VIDEO

Official product video demonstrating key features of the Hamilton Beach HBFRF713 Chest Deep Freezer, including its design, interior, and controls. This video provides a visual guide to the freezer's functionality.

