

Tefal FR491870

Tefal Versalio Deluxe FR491870 Multicooker Instruction Manual

Model: FR491870

1. INTRODUCTION

Thank you for choosing the Tefal Versalio Deluxe FR491870 Multicooker. This versatile appliance is designed to simplify your cooking experience, offering 7 different cooking modes in one compact unit. With its adjustable thermostat and digital timer, you can achieve precise results for a variety of dishes. Please read this manual carefully before using your appliance for the first time and keep it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface, away from water and heat sources.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation, as surfaces can become very hot.
- Use only the accessories recommended by Tefal.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact an authorized service center.
- Exercise extreme caution when handling hot oil or other hot liquids.
- Ensure the lid is properly closed during cooking, especially when frying, to prevent splashes.
- Do not overfill the appliance beyond the maximum fill line indicated.

3. PRODUCT OVERVIEW

The Tefal Versalio Deluxe FR491870 is a versatile 7-in-1 multicooker designed for various cooking tasks.



Figure 1: Front view of the Tefal Versalio Deluxe FR491870 multicooker. It features a black body, a silver-colored lid with a viewing window, and a control panel on the front with icons for different cooking modes and temperature settings.

Key Components and Controls:

- **Lid:** Features a viewing window and handle for safe opening and closing.
- **Cooking Bowl:** Non-stick interior for easy cooking and cleaning.
- **Control Panel:** Includes a digital timer display, temperature adjustment dial, and indicators for 7 cooking modes.
- **Handles:** For safe transportation of the appliance when cool.
- **Power Switch:** Located on the front panel.

4. SETUP

1. **Unpacking:** Carefully remove the multicooker and all accessories from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wash the cooking bowl, lid, and any removable accessories in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the multicooker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The Versalio Deluxe FR491870 offers 7 cooking modes and precise temperature control for various culinary preparations.

5.1. General Operation

1. Ensure the appliance is plugged in and the power switch is in the 'ON' position.
2. Add ingredients to the cooking bowl according to your recipe. Do not exceed the maximum fill level.
3. Select the desired cooking mode using the icons on the control panel.
4. Adjust the temperature using the thermostat dial, ranging from 80°C to 180°C.
5. Set the cooking time using the digital timer. The timer will count down and alert you when cooking is complete.
6. Close the lid securely.
7. Monitor cooking progress through the viewing window if available.

- Once cooking is complete, carefully open the lid, avoiding steam. Remove food using appropriate utensils.
- Turn off the appliance and unplug it after use.

5.2. Cooking Modes (7-in-1 Functionality)

The Versalio Deluxe FR491870 is designed for multiple cooking functions. While specific details for each mode are best found in the recipe book (if included) or Tefal's official resources, the general categories include:

- Frying:** For deep-frying various foods like fries, chicken, or fish.
- Sautéing:** For browning ingredients before further cooking.
- Simmering:** For slow cooking stews, soups, and sauces.
- Braising:** For tenderizing meats and vegetables.
- Roasting:** For preparing roasted dishes.
- Boiling:** For pasta, vegetables, etc.
- Keeping Warm:** To maintain food temperature after cooking.

Refer to the icons on the control panel for visual guidance on selecting each mode.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your multicooker.

- Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- Cooking Bowl and Lid:** The removable cooking bowl and lid can be washed by hand with warm, soapy water and a non-abrasive sponge. They may also be dishwasher safe (check specific product markings or the full manual for confirmation). Rinse thoroughly and dry completely.
- Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water.
- Storage:** Store the clean and dry appliance in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; power outage.	Check power cord connection; ensure power switch is ON; check household circuit breaker.
Food not cooking evenly.	Overfilling; incorrect temperature setting.	Do not overfill the cooking bowl; adjust temperature according to recipe.
Digital timer not working.	Incorrect setting; malfunction.	Ensure timer is set correctly; if issue persists, contact customer support.
Smoke or unusual odor during operation.	Food residue; initial use burning off manufacturing oils.	Unplug immediately. If it's initial use, a slight odor is normal. If persistent or excessive, discontinue use and contact support. Ensure appliance is clean.

For issues not listed here, please contact Tefal customer support.

8. SPECIFICATIONS

Model: FR491870 VERSALIO

Brand: Tefal

Type: Multicooker / Fryer

Power: 1600 Watts

Capacity: 2 Liters

Color: Black

Material: Metal

Adjustable Thermostat: 80°C to 180°C

Features: 7 cooking modes, Digital timer, Adjustable temperature.

Product Dimensions (L x W x H): Approximately 11.5 x 6.83 x 4.04 cm (4.53 x 2.69 x 1.59 inches)

Item Weight: Approximately 4.66 Kilograms (10.27 lbs)

9. WARRANTY AND SUPPORT

Your Tefal Versalio Deluxe FR491870 Multicooker is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or service, please contact Tefal customer support in your region. You can usually find contact information on the official Tefal website or in the documentation provided with your appliance.

Online Resources: For additional recipes, tips, and product information, visit the official [Tefal website](#).