

Bosch MUZS2EB

Bosch MUZS2EB Ice Maker Attachment User Manual

For Bosch MUM Series 2 Kitchen Machines

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Bosch MUZS2EB Ice Maker Attachment. This accessory is designed exclusively for use with Bosch MUM Series 2 kitchen machines to prepare homemade ice cream, sorbet, and frozen yogurt. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the kitchen machine is unplugged before attaching or detaching the ice maker.
- Do not immerse the motor unit of the kitchen machine in water or other liquids.
- The cooling container must be completely frozen before use. Handle with care to avoid frostbite.
- Keep hands and utensils away from moving parts during operation.
- Only use original Bosch accessories and spare parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The Bosch MUZS2EB Ice Maker Attachment consists of several key components:

- **Double-walled cooling container:** Contains a cooling liquid that freezes to create the ice cream.
- **Mixing tool with safety coupling:** Rotates to churn the ingredients.

- **Holder for cooling container with handle edge:** Secures the cooling container to the kitchen machine.
- **Splash guard lid with filling opening:** Prevents splashing and allows ingredients to be added during operation.
- **Spatula:** For removing finished ice cream.



Figure 3.1: The Bosch MUZS2EB Ice Maker Attachment, showing its main components.



Figure 3.2: The Bosch MUZS2EB Ice Maker Attachment connected to a Bosch MUM Series 2 kitchen machine, ready for operation.

4. SETUP

- 1. Freeze the Cooling Container:** Place the double-walled cooling container in your freezer for at least 24 hours at a temperature of -18°C (0°F) or colder. Ensure it is completely frozen for optimal results.
- 2. Prepare Ingredients:** Prepare your ice cream, sorbet, or frozen yogurt mixture according to your recipe. For best results, pre-chill the mixture in the refrigerator for several hours before churning.
- 3. Assemble the Ice Maker:**
 - a. Ensure your Bosch MUM Series 2 kitchen machine is unplugged.
 - b. Place the frozen cooling container into its holder.
 - c. Attach the mixing tool to the drive shaft of the kitchen machine.
 - d. Carefully lower the assembled ice maker onto the kitchen machine's attachment point, ensuring it locks securely into place.
 - e. Place the splash guard lid onto the cooling container, aligning the filling opening.

5. OPERATING INSTRUCTIONS

1. **Add Ingredients:** With the kitchen machine turned off, pour your pre-chilled mixture through the filling opening of the splash guard lid into the cooling container. Do not exceed the maximum fill line (550 ml).
2. **Start Churning:** Plug in the kitchen machine and switch it on to a low speed setting (e.g., setting 1 or 2). The mixing tool will begin to churn the mixture.
3. **Churning Time:** Churn for approximately 20-30 minutes, or until the desired consistency is achieved. The exact time may vary depending on the recipe and the initial temperature of your mixture.
4. **Monitor Consistency:** Observe the mixture through the lid. It will gradually thicken into ice cream, sorbet, or frozen yogurt.
5. **Serve or Store:** Once finished, switch off and unplug the kitchen machine. Remove the ice maker attachment. Use the provided spatula to transfer the freshly made dessert to serving bowls or an airtight container for storage in the freezer.



Figure 5.1: The ice maker has a maximum capacity of 550 ml for ice cream, sorbet, or frozen yogurt.



✓ Eis, Sorbet &
Frozen Yoghurt
einfach zubereiten

Figure 5.2: Examples of delicious desserts made with the ice maker.



Figure 5.3: Fresh ingredients are key to delicious homemade ice cream.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your ice maker attachment.

1. **Disassembly:** Unplug the kitchen machine. Remove the ice maker attachment from the kitchen machine. Disassemble the splash guard lid, mixing tool, and cooling container from the holder.
2. **Cleaning the Cooling Container:** The double-walled cooling container can be easily cleaned under running water. Do not place it in a dishwasher. Ensure it is completely dry before placing it back in the freezer.
3. **Cleaning Other Parts:** The mixing tool, holder, splash guard lid, and spatula can be washed in warm soapy water or placed in the dishwasher (refer to your kitchen machine's manual for specific dishwasher compatibility of accessories).
4. **Drying and Storage:** Ensure all parts are thoroughly dried before reassembling or storing. Store the cooling container in the freezer if you plan to use it frequently, or in a dry place if not.



Kühlelement einfach und schnell reinigen

Figure 6.1: The cooling element is designed for quick and easy cleaning under running water.

7. TROUBLESHOOTING

If you encounter issues with your ice maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice cream is too soft or not freezing.	Cooling container not sufficiently frozen; mixture not pre-chilled; churning time too short.	Ensure cooling container is frozen for at least 24 hours. Pre-chill mixture thoroughly. Extend churning time.
Mixing tool is not rotating.	Attachment not correctly assembled; kitchen machine not switched on or at incorrect speed.	Check that the ice maker is securely attached to the kitchen machine. Ensure the kitchen machine is plugged in and set to a low speed.
Loud noise during operation.	Improper assembly; foreign object in the container.	Disassemble and reassemble the ice maker, ensuring all parts are correctly fitted. Check for any obstructions.

8. SPECIFICATIONS

Feature	Specification
Model Number	MUZS2EB
Brand	Bosch
Compatibility	Bosch MUM Series 2 Kitchen Machines
Capacity	Max. 550 ml per batch
Dimensions (L x W x H)	180 x 195 x 180 mm (7.09"L x 7.09"W x 7.09"H)
Material	Plastic
Item Weight	2.1 kg (4.62 pounds)
Operation Mode	Automatic (via kitchen machine)
Special Feature	Quick preparation (approx. 30 minutes)

9. WARRANTY AND SUPPORT

Your Bosch MUZS2EB Ice Maker Attachment is covered by a manufacturer's warranty. Please refer to the warranty card included with your original kitchen machine or visit the official Bosch website for detailed warranty terms and conditions specific to your region.

For technical support, spare parts, or service inquiries, please contact Bosch customer service. You can find contact information on the official Bosch website or through your local Bosch retailer.

For more information about Bosch products, visit the [Bosch Store](#).