

Instant Pot 112-0120-01

Instant Pot Duo Crisp 11-in-1 Air Fryer and Electric Pressure Cooker Combo User Manual

Brand: Instant Pot | Model: 112-0120-01

1. INTRODUCTION

Welcome to the world of versatile cooking with your new Instant Pot Duo Crisp 11-in-1 Air Fryer and Electric Pressure Cooker Combo. This innovative appliance combines the speed of pressure cooking with the crisping capabilities of an air fryer, offering endless culinary possibilities. With one pot and two interchangeable lids, you can achieve perfectly cooked meals up to 70% faster than traditional methods, and enjoy crispy results with 95% less oil thanks to EvenCrisp Technology.

This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then

remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Ensure unit is properly closed before operating.
- Always check the anti-block shield and float valve for clogging before use.

3. COMPONENTS & ACCESSORIES

Your Instant Pot Duo Crisp comes with essential components and accessories to enhance your cooking experience:



The Instant Pot Duo Crisp 11-in-1 appliance, shown with both the pressure cooker lid and the air fryer lid, along with its retail packaging.

Best of both worlds

GET THE BEST OF BOTH AIR FRYING AND PRESSURE COOKING WITH DUO CRISP™



An exploded view illustrating the various components: dishwasher-safe multi-cooker lid, air fryer lid, broil/dehydrate tray, air fryer basket, and dishwasher-safe stainless steel inner pot, and steam rack.

Included Accessories:

- **Pressure Cooker Lid:** For pressure cooking, slow cooking, steaming, and sautéing.
- **Air Fryer Lid:** For air frying, roasting, baking, broiling, and dehydrating.
- **Stainless Steel Inner Pot:** Dishwasher-safe, for all cooking functions.
- **Broil and Dehydrator Tray:** Used with the air fryer lid for optimal air circulation.
- **Air Fryer Basket:** For air frying and roasting.
- **Air Fryer Basket Base:** Supports the air fryer basket.
- **Steam Rack:** For steaming and elevating food during pressure cooking.

4. SETUP

Before first use, follow these steps:

1. **Unpack:** Carefully remove all components and accessories from the box.
2. **Clean:** Wash the inner pot, pressure cooker lid (including sealing ring and anti-block shield), air fryer basket, broil/dehydrator tray, and steam rack with warm, soapy water. Rinse thoroughly and dry completely. The main cooker base should be wiped clean with a damp cloth.
3. **Placement:** Place the cooker base on a stable, level surface, away from heat sources and water. Ensure there is at least 5 inches of space around the appliance for proper ventilation.
4. **Power Connection:** Connect the power cord to the cooker base, then plug it into a grounded 120V 60Hz electrical outlet.
5. **Initial Test Run (Water Test):** It is recommended to perform a water test with the pressure cooker lid to familiarize yourself with the appliance's pressure cooking function. Refer to the Instant Pot app or online resources for detailed water test instructions.

5. OPERATING INSTRUCTIONS

Your Instant Pot Duo Crisp offers 11 versatile cooking functions. The control panel provides intuitive one-touch options for various cooking programs.

Easy-to-use controls



11 ONE-TOUCH COOKING PROGRAMS



The easy-to-use control panel with 11 one-touch cooking programs.

Cooking Functions Overview:

- **Pressure Cook:** Use the pressure cooker lid. Ideal for fast cooking of stews, soups, meats, and beans.
- **Air Fry:** Use the air fryer lid. Achieves crispy textures for fries, chicken wings, and more with minimal oil. Features EvenCrisp Technology.
- **Slow Cook:** Use the pressure cooker lid. Perfect for tenderizing meats and developing rich flavors over extended periods.
- **Steam:** Use the pressure cooker lid and steam rack. Great for vegetables, fish, and dumplings.
- **Sauté:** Use the inner pot without a lid. For browning meats or sautéing vegetables before pressure cooking.
- **Roast:** Use the air fryer lid. For roasting meats and vegetables to perfection.
- **Bake:** Use the air fryer lid. For baking cakes, breads, and other desserts.
- **Dehydrate:** Use the air fryer lid and broil/dehydrator tray. For making dried fruits, jerky, and vegetable chips.

- **Broil:** Use the air fryer lid. For finishing dishes with a crispy top or melting cheese.
- **Sterilize:** Use the pressure cooker lid. For sterilizing baby bottles, jars, and utensils.
- **Warm:** Keeps food warm after cooking.

General Operation Steps:

1. **Prepare Food:** Place ingredients into the stainless steel inner pot.
2. **Select Lid:** Choose either the Pressure Cooker Lid or the Air Fryer Lid based on your desired cooking function.
3. **Secure Lid:** Ensure the chosen lid is properly aligned and locked into place. For the pressure cooker lid, ensure the steam release handle is in the Sealing position.
4. **Select Program:** Press the button corresponding to your desired cooking function (e.g., "Pressure Cook", "Air Fry").
5. **Adjust Settings:** Use the "Temp" and "Time" buttons (+/-) to adjust temperature and cooking duration as needed.
6. **Start Cooking:** Press the "Start" button. The display will show "On" and then begin the preheating or cooking cycle.
7. **Pressure Release (Pressure Cooking Only):** Once pressure cooking is complete, allow for natural release or perform a quick release as per your recipe. Always use caution when releasing steam.
8. **Enjoy:** Once cooking is complete, carefully remove the lid and serve your meal.

6. MAINTENANCE & CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Instant Pot Duo Crisp.

Cleaning Instructions:

- **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has cooled down completely.
- **Inner Pot:** The stainless steel inner pot is dishwasher-safe. For stubborn food residue, soak with warm, soapy water before washing.
- **Pressure Cooker Lid:** The pressure cooker lid is dishwasher-safe. Remove the sealing ring and anti-block shield for thorough cleaning. Ensure they are properly reinstalled before next use.
- **Air Fryer Lid:** Wipe the exterior of the air fryer lid with a damp cloth. The heating element area can be cleaned with a soft brush after cooling. Do not immerse the air fryer lid in water.
- **Accessories:** The air fryer basket, broil/dehydrator tray, and steam rack are dishwasher-safe.
- **Cooker Base:** Wipe the exterior of the cooker base with a damp cloth. Never immerse the cooker base in water or any other liquid.
- **Condensation Collector:** Remove and empty the condensation collector after each use. Wash with warm, soapy water and dry thoroughly.

Storage:

Store the appliance and its accessories in a dry place. Ensure all parts are clean and dry before storage.

7. TROUBLESHOOTING

If you encounter issues with your Instant Pot Duo Crisp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance not turning on	Not plugged in; power outlet issue; damaged cord.	Check power cord connection; try a different outlet; inspect cord for damage.
Pressure cooker not building pressure	Lid not properly sealed; steam release handle in venting position; sealing ring missing or damaged; food blocking float valve.	Ensure lid is locked; turn steam release handle to Sealing; check/replace sealing ring; clean float valve and anti-block shield.
Air fryer not crisping food	Overcrowding the basket; insufficient cooking time/temperature; not preheating.	Cook in smaller batches; increase time/temperature; preheat the appliance before adding food.
Error codes on display	Specific internal issues.	Refer to the Instant Pot app or online support for specific error code meanings and solutions. Unplug and plug back in to reset.

For more detailed troubleshooting or persistent issues, please contact Instant Pot customer support.

8. SPECIFICATIONS

Detailed technical specifications for your Instant Pot Duo Crisp 11-in-1 Air Fryer and Electric Pressure Cooker Combo:

Feature	Specification
Brand	Instant Pot
Model Number	112-0120-01
Capacity	6 Quarts (6 Liters)
Material	Stainless Steel
Finish Type	Chrome
Product Dimensions (D x W x H)	13.58"D x 13.58"W x 13.97"H
Special Feature	Programmable
Wattage	1500 watts
Voltage	120 Volts
Item Weight	19.6 Pounds (19.58 pounds)
Control Method	Touch
Controller Type	App
Operation Mode	Automatic
Dishwasher Safe Parts	Inner Pot, Pressure Cooker Lid, Air Fryer Basket, Broil/Dehydrator Tray, Steam Rack
UPC	810028581821

Feature	Specification
Date First Available	February 10, 2021

9. WARRANTY & SUPPORT

Instant Pot products are designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Instant Pot website.

Protection Plans:

Additional protection plans may be available for purchase to extend coverage beyond the standard manufacturer's warranty:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases (monthly billing)

Note: Availability and terms of protection plans may vary. Please check with your retailer or protection plan provider for full details.

Customer Support:

For product assistance, troubleshooting, or warranty claims, please contact Instant Pot customer support:

- **Website:** instantbrands.com/customer-care/
- **Phone:** Refer to the Instant Pot website for regional contact numbers.
- **App:** Download the free Instant Connect™ App for recipes and guided instructions.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question