

Toshiba ML-EG42PBB(BS)

Toshiba 42 Liter Digital Microwave with Grill

MODEL: ML-EG42PBB(BS) - USER MANUAL

1. Introduction

Thank you for purchasing the Toshiba 42 Liter Digital Microwave with Grill, model ML-EG42PBB(BS). This appliance is designed for convenient cooking, reheating, and defrosting of various food items. Please read this manual thoroughly before operating your new microwave oven to ensure safe and efficient use. Keep this manual for future reference.



Image 1.1: Toshiba 42 Liter Digital Microwave with Grill (ML-EG42PBB(BS))

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before use.
- Do not operate the oven if the door or door seals are damaged.

- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not attempt to tamper with, adjust, or repair the door, control panel, safety interlock switches, or any other part of the oven.
- Ensure the appliance is properly grounded.
- Always use microwave-safe cookware.

3. Product Overview

Familiarize yourself with the components of your microwave oven.



Image 3.1: Interior view of the microwave with the door open.

3.1 Components

- **Door:** Features a left-hinged design.
- **Control Panel:** Digital display and touch controls for various functions.
- **Turntable:** Glass tray that rotates to ensure even cooking.
- **Grill Heating Element:** Located at the top interior for grilling functions.
- **Oven Cavity:** Stainless steel interior for durability and easy cleaning.

3.2 Control Panel



Image 3.2: Detailed view of the control panel.

The digital control panel includes a display, numeric keypad, and function buttons:

- **Display:** Shows time, cooking settings, and indicators.
- **Numeric Keypad (0-9):** Used to enter cooking times, weights, and quantities.
- **Time Cook:** Sets microwave cooking time.

- **Time Defrost:** Defrosts food based on time.
- **Weight Defrost:** Defrosts food based on weight.
- **Power:** Adjusts microwave power level.
- **Clock:** Sets the current time.
- **Kitchen Timer:** Functions as a separate kitchen timer.
- **Auto Cook Menus:** Dedicated buttons for Popcorn, Potato, Pizza, Frozen Vegetable, Beverage, Dinner Plate.
- **Start/+30Sec.:** Starts cooking or adds 30 seconds to cooking time.
- **Stop/Cancel:** Stops cooking or clears settings.

4. Setup

4.1 Unpacking

Carefully remove all packaging materials from the microwave oven and its accessories. Check for any damage during transit. Do not remove the waveguide cover inside the oven cavity.

4.2 Placement

- Place the microwave on a flat, stable countertop surface that can support its weight (8.5 kg).
- Ensure adequate ventilation: leave at least 10 cm of space at the back, 20 cm at the top, and 5 cm on each side.
- Keep the microwave away from heat sources, strong magnetic fields, and areas with high humidity.

4.3 Electrical Connection

Connect the microwave oven to a dedicated 220V, 60Hz power outlet. Do not use extension cords or adapters. Ensure the electrical circuit can handle the appliance's 1200W power consumption.

5. Operating Instructions

5.1 Setting the Clock

1. Press the "Clock" button.
2. Use the numeric keypad to enter the current time (e.g., 12:30).
3. Press the "Clock" button again to confirm.

5.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press the "Time Cook" button.
4. Use the numeric keypad to enter the desired cooking time.
5. Press the "Power" button repeatedly to select the desired power level (e.g., P100 for full power, P80 for 80% power).
6. Press "Start/+30Sec." to begin cooking.

5.3 Grill Function

The grill function is ideal for browning and crisping food.



Image 5.1: Example of food prepared using the grill function.

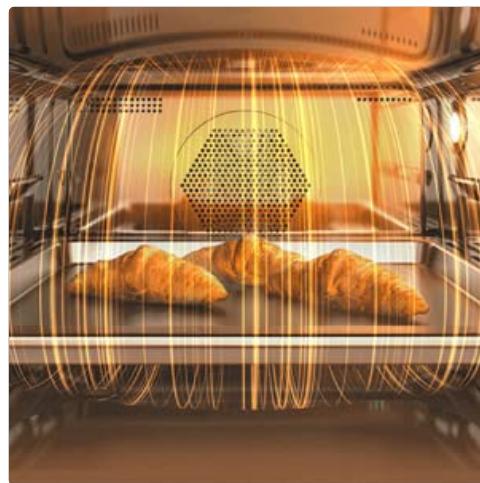


Image 5.2: The grill heating elements inside the oven cavity.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the "Grill" button (or the relevant button for grill mode, if combined).
3. Use the numeric keypad to enter the desired grilling time.
4. Press "Start/+30Sec." to begin grilling.

5.4 Defrost Function

The microwave offers both time-based and weight-based defrosting.

- **Time Defrost:**

- a. Press "Time Defrost".
- b. Enter the desired defrosting time using the numeric keypad.
- c. Press "Start/+30Sec.".

- **Weight Defrost:**

- a. Press "Weight Defrost".
- b. Enter the food weight in grams using the numeric keypad.
- c. Press "Start/+30Sec.".

5.5 Auto Cook Menus

For convenience, the microwave includes pre-programmed settings for common foods:

1. Place the food in the oven.
2. Press the corresponding Auto Cook button (e.g., "Popcorn", "Potato", "Pizza", "Frozen Vegetable", "Beverage", "Dinner Plate").
3. If prompted, select the quantity or weight using the numeric keypad.
4. Press "Start/+30Sec." to begin.



Image 5.3: The microwave can prepare a variety of dishes.

6. Maintenance and Cleaning

Regular cleaning helps maintain the performance and longevity of your microwave oven.



Image 6.1: Cleaning the microwave interior.

- **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Interior:** Clean the interior cavity regularly with a damp cloth. For stubborn food splatters, place a bowl of water with lemon juice inside and microwave for a few minutes to loosen residue, then wipe clean.
- **Turntable:** The glass turntable and roller ring can be removed and washed in warm soapy water or in a dishwasher.
- **Door Seals:** Keep the door seals clean to ensure proper closure and efficient operation.
- Always unplug the microwave before cleaning.

7. Troubleshooting

If you encounter issues with your microwave, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is firmly closed; Check power cord connection; Check household fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or turned; Improper power level or cooking time.	Stir or turn food during cooking; Adjust power level and cooking time as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam from door	Normal during cooking of high-moisture foods.	This is normal and not a fault.

If the problem persists after trying these solutions, please contact Toshiba customer service.

8. Specifications

Detailed technical specifications for the Toshiba ML-EG42PBB(BS) microwave oven:

Feature	Specification
Brand	Toshiba
Model Information	ML-EG42PBB(BS)
Product Dimensions (L x W x H)	48.1 x 37.9 x 27.7 cm
Item Weight	8.5 Kilograms
Capacity	42 Liters
Installation Type	Countertop
Special Features	Defrost, Turntable
Oven Cooking Mode	Grill
Color	Black
Voltage	220 Volts
Power	1200 Watts
Door Hinges	Left
Material Type	Metal alloy
Interior Material Type	Stainless Steel
Control Type	Touch control
Recommended Uses	Cooking, reheating, defrosting food

9. Warranty and Support

Your Toshiba microwave oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service, or inquiries, please contact Toshiba customer service through their official website or the contact information provided in your product documentation.

© 2024 Toshiba. All rights reserved.