

Globo 106062

Globo Lighting MANNI LED Flush Mount Ceiling Light User Manual

Model: 106062

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Globo Lighting MANNI LED Flush Mount Ceiling Light. Please read this manual thoroughly before installation and retain it for future reference. Proper installation and use are crucial for optimal performance and safety.

SETUP AND INSTALLATION

Important Safety Information: Before beginning any installation, ensure the main power supply is switched off at the circuit breaker to prevent electric shock. Installation should be performed by a qualified electrician or a competent person familiar with electrical wiring. Always follow local electrical codes and regulations.

Package Contents:

- MANNI LED Flush Mount Ceiling Light fixture
- Mounting hardware (screws, wall anchors)
- Remote control (if included with your model)
- User Manual

Installation Steps:

1. **Prepare the Installation Area:** Turn off power at the main circuit breaker. Ensure the mounting surface is clean, dry, and structurally sound to support the fixture's weight.
2. **Attach Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure it is firmly attached.
3. **Wiring Connections:** Connect the electrical wires from the ceiling to the fixture's wires. Typically, connect the live (brown/black) wire from the ceiling to the live wire of the fixture, the neutral (blue/white) wire from the ceiling to the neutral wire of the fixture, and the ground (green/yellow) wire to the ground terminal on the fixture or mounting bracket. Use appropriate wire connectors and ensure all connections are secure.

4. **Mount the Fixture:** Carefully align the fixture with the mounting bracket and secure it in place using the provided screws or twist-lock mechanism. Ensure the fixture is flush against the ceiling and stable.
5. **Restore Power:** Once the fixture is securely mounted and all connections are checked, restore power at the main circuit breaker.



Figure 1: Back view of the MANNI LED Flush Mount Ceiling Light, illustrating the wiring terminal block and internal LED arrangement. This image helps in understanding the electrical connection points during installation.

OPERATING INSTRUCTIONS

The Globo Lighting MANNI LED Flush Mount Ceiling Light is designed for ease of use, often featuring remote control functionality for various lighting adjustments.

Basic Operation:

- **Power On/Off:** Use the wall switch to turn the light fixture on or off. If a remote control is provided, use the dedicated power button on the remote.
- **Remote Control Functions:** If your model includes a remote control, it typically allows for dimming, color

temperature adjustment (warm white to cool white), and possibly night light or timer functions. Refer to the remote control diagram for specific button functions.



Figure 2: The MANNI LED Flush Mount Ceiling Light in a living room setting, demonstrating its ability to switch between warm and cool light temperatures. A remote control is shown, indicating various functions like power, brightness adjustment, and color temperature selection.

Remote Control Pairing (if applicable):

If the remote control does not respond, it may need to be paired with the light fixture. Typically, this involves turning the light off at the wall switch, then turning it back on and pressing a specific button (often the 'ON' or 'PAIR' button) on the remote within a few seconds. Consult the separate remote control instructions if provided.

MAINTENANCE

The Globo Lighting MANNI LED Flush Mount Ceiling Light requires minimal maintenance to ensure its longevity and performance.

Cleaning:

- **Before Cleaning:** Always ensure the power supply to the fixture is turned off at the circuit breaker before cleaning.
- **Fixture Body:** Wipe the metal and diffuser surfaces with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **LEDs:** The integrated LED modules do not require replacement. Do not attempt to open the fixture to access or clean the LEDs directly.

General Care:

- Regularly check for any loose connections or damage to the fixture. If any damage is observed, discontinue use and consult a qualified electrician.
- Do not paint the fixture, as this may interfere with heat dissipation and void the warranty.

TROUBLESHOOTING

If you encounter issues with your MANNI LED Flush Mount Ceiling Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Faulty wall switch.	Check the circuit breaker and ensure power is on. Verify all wiring connections are secure (with power off). Test the wall switch with another device or consult an electrician.
Light flickers or dims unexpectedly.	Loose wiring. Incompatible dimmer switch (if applicable). Power fluctuations.	Check wiring connections (with power off). Ensure any dimmer switch used is compatible with LED fixtures. Consult an electrician if power fluctuations are suspected.
Remote control not working.	Dead batteries. Remote not paired. Obstruction between remote and fixture.	Replace batteries in the remote control. Follow pairing instructions (see Operating Instructions). Ensure a clear line of sight between the remote and the fixture.
Light is not as bright as expected.	Dimmer setting too low. Dust accumulation on diffuser.	Adjust brightness using the remote control or wall dimmer. Clean the diffuser surface (with power off).

If the problem persists after attempting these solutions, please contact customer support or a qualified electrician.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Globo

Feature	Specification
Model Number	106062
Product Dimensions	48.5 x 48.5 x 8 cm
Item Weight	1.42 Kilograms
Material	Metal
Voltage	230 Volt
Wattage	40 Watt
ASIN	B08WHHSNW5

WARRANTY AND SUPPORT

Warranty Information:

Globo Lighting products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Globo Lighting website. Keep your proof of purchase for warranty claims.

Customer Support:

If you require further assistance, have questions not covered in this manual, or need to report a defect, please contact the retailer where you purchased the product or Globo Lighting customer service. Contact details can typically be found on the product packaging or the manufacturer's website.

For safety information and additional instructions, you may also refer to the official documents provided by the manufacturer:

- [Safety Information \(PDF\)](#)
- [Instructions for Use \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question