



Manuals.plus /

› JBL /

› JBL Wireless Two Microphone System User Manual

## JBL JBLWIRELESSMICAM

# JBL Wireless Two Microphone System

Model: JBLWIRELESSMICAM

Brand: JBL

## INTRODUCTION

The JBL Wireless Two Microphone System delivers JBL Original Pro Sound with incredible vocal clarity and detail. Designed for ease of use, this system allows you to achieve high-quality audio without distortion or delay. Simply plug the wireless dual-channel receiver into your compatible speaker, turn on the microphones, and you're ready to perform or present.

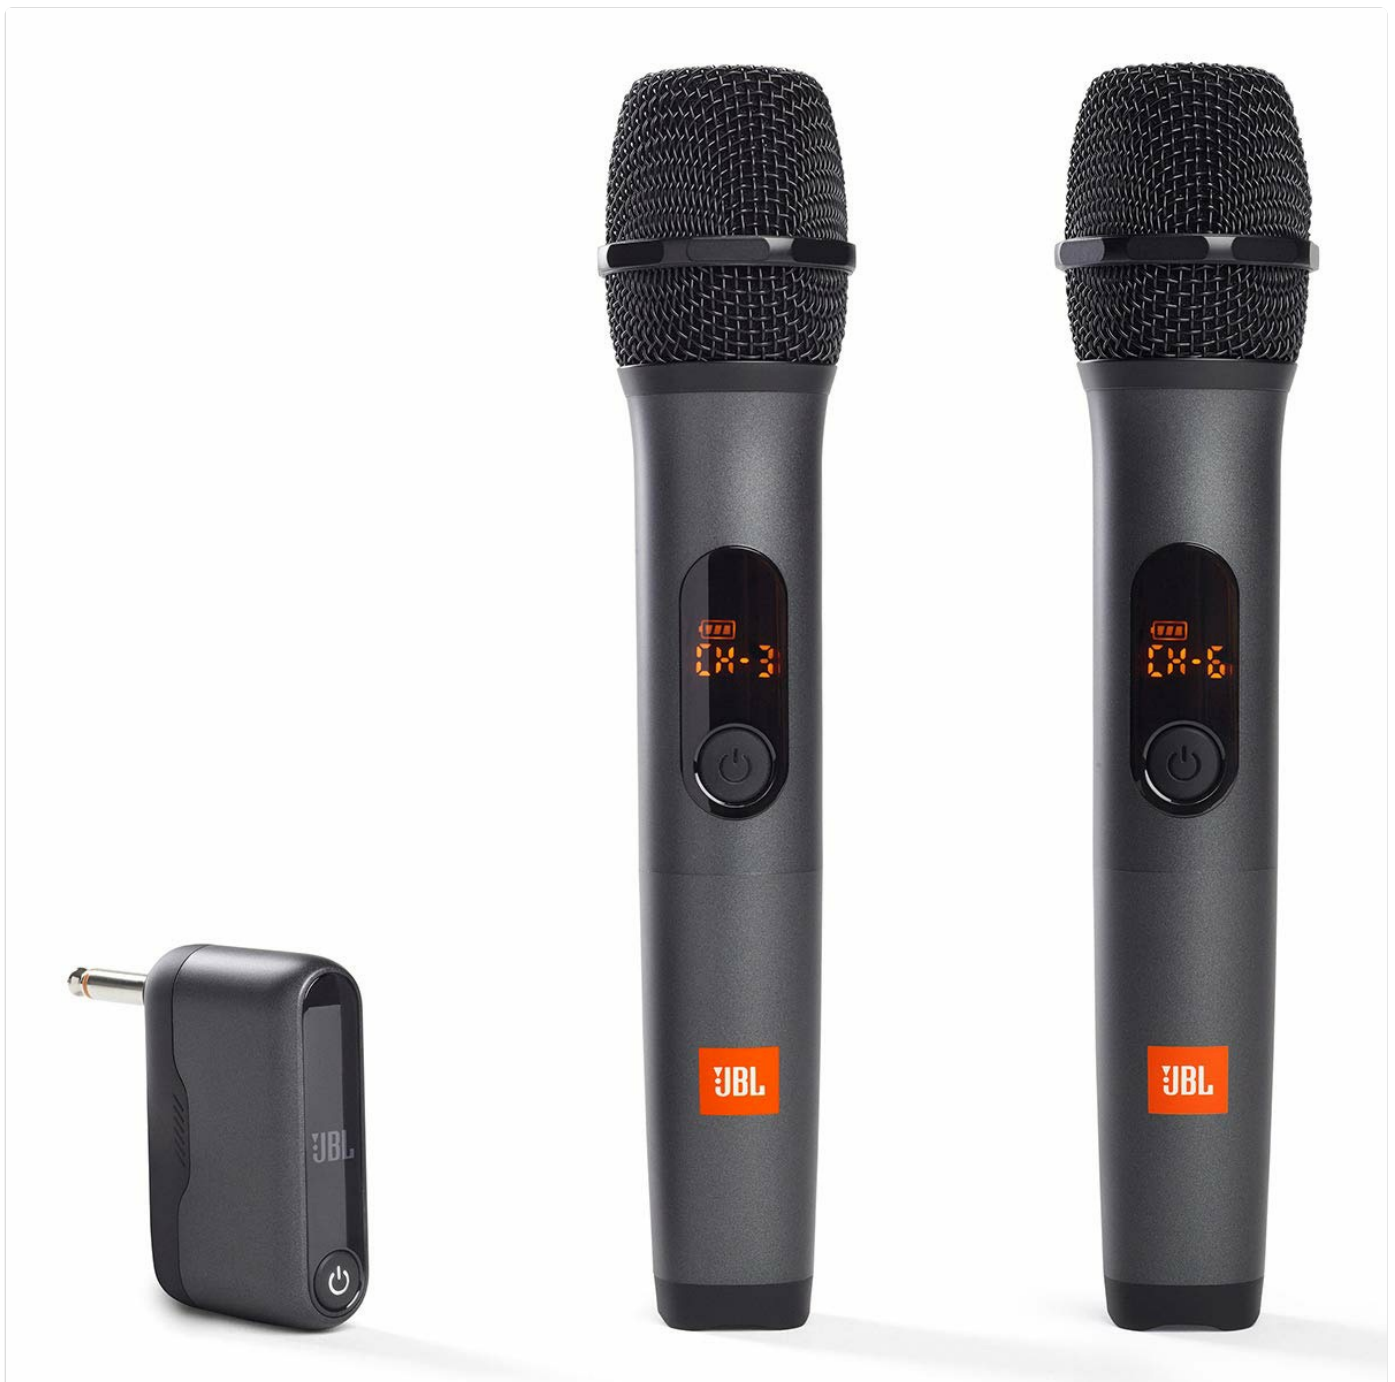


Image: The JBL Wireless Two Microphone System, showcasing both microphones and the compact receiver.

## WHAT'S INCLUDED

- 2x Wireless Microphones
- 1x Wireless Receiver
- 1x USB-C Cable
- Quick Start Guide (QSG)
- Safety Sheet
- Warranty Card

## KEY FEATURES

- **High Vocal Quality & JBL Original Pro Sound:** Experience crystal clear clarity without distortion or delay, ensuring your voice sounds on point.
- **Rechargeable Dual Channel UHF Wireless Receiver:** Connect two wireless microphones simultaneously, with

both voices mixed seamlessly through your speaker for up to 6 hours of playback.

- **Plug and Play Setup:** Enjoy super simple setup; just turn on the receiver and wireless microphones, and you're ready to go instantly.
- **Replaceable AA Batteries:** Microphones come with easy-to-replace AA batteries, allowing for extended use.

## SETUP GUIDE

### 1. Charging the Receiver

The dual-channel receiver is rechargeable via the included USB-C cable. Connect the USB-C cable to the receiver and a power source (e.g., USB wall adapter, computer USB port) to charge.



Image: Close-up of the JBL Wireless Receiver, highlighting its USB-C charging port.

### 2. Connecting the Receiver

Plug the wireless dual-channel receiver into your compatible speaker's 1/4" (6.3 mm) unbalanced audio input. Ensure it is securely inserted.



Image: The JBL Wireless Receiver connected to the input of a JBL PartyBox speaker.

## OPERATING THE MICROPHONES

### 1. Powering On/Off

Simply turn on each microphone using its dedicated power button. The integrated digital display will illuminate, showing the current channel and battery level.



Image: A single JBL Wireless Microphone with its digital display showing channel information.

## 2. Using Both Microphones

The dual-channel receiver is designed to work with both microphones simultaneously. Once both microphones are powered on and the receiver is connected, their audio will be mixed and output through your speaker.

## 3. Battery Replacement

The microphones are powered by easy-to-replace AA batteries. To replace them, gently unscrew the bottom shaft of the microphone to reveal the battery compartment. Insert new AA batteries, ensuring correct polarity, then re-screw the shaft securely.



Image: A JBL Wireless Microphone with its lower section detached, revealing the battery compartment.

## CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your JBL Wireless Microphone System, follow these guidelines:

- Keep the microphones and receiver dry. Avoid exposure to water or excessive humidity.
- Clean the microphones with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the system in a cool, dry place when not in use.
- Ensure the receiver is fully charged before each use for optimal performance.
- Replace AA batteries in the microphones as needed to maintain consistent power.

## TROUBLESHOOTING

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
No Sound from Microphones	Receiver not powered on or not connected correctly.	Ensure the receiver is powered on and securely plugged into the speaker's audio input.
Microphone not connecting	Microphone battery low or off.	Check microphone battery level and ensure it is powered on. Verify the receiver is also on.
Poor Sound Quality/Interference	Obstructions or distance from receiver.	Reduce distance between microphone and receiver. Remove any large metal objects or other electronic devices causing interference.
Short Battery Life	Batteries are old or not fully charged.	Replace AA batteries in microphones. Fully charge the receiver before use.

## TECHNICAL SPECIFICATIONS

Feature	Detail
Mounting Type	Tabletop
Power Source	Battery Powered
Connector Type	USB
Material	Plastic
Item Weight	1.2 Pounds
Number of Channels	2
Audio Input	1/4" (6.3 mm) unbalanced
Recommended Uses	Singing, Karaoke
Manufacturer	JBL
UPC	050036379847
Product Dimensions (L x W x H)	1.95 x 1.95 x 9.16 inches
Item Model Number	JBLWIRELESSMICAM
Batteries	1 Lithium Polymer batteries required (included)
Brand	JBL
Connectivity Technology	USB, Wireless
Color	Black
Compatible Devices	JBL PARTYBOX Encore, JBL PARTYBOX 100/110/Encore Essential, JBL PARTYBOX 200, 300, JBL PARTBOX 310/310 MC*/710/Ultimate, JBL PARTYBOX 1000, JBL PARTYBOX, JBL PARTYBOX On-The-Go/On AND The-Go Essential

## WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the included Warranty Card and Safety Sheet for detailed information regarding warranty coverage, terms, and conditions.

For technical support or service inquiries, please visit the official JBL website or contact their customer service department. Keep your purchase receipt for warranty claims.

Official JBL Store: JBL Professional Store on Amazon

