

Casio W-219H-8BVDF

Casio W-219H-8B Illuminator Digital Watch

User Manual

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio W-219H-8B Illuminator Digital Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

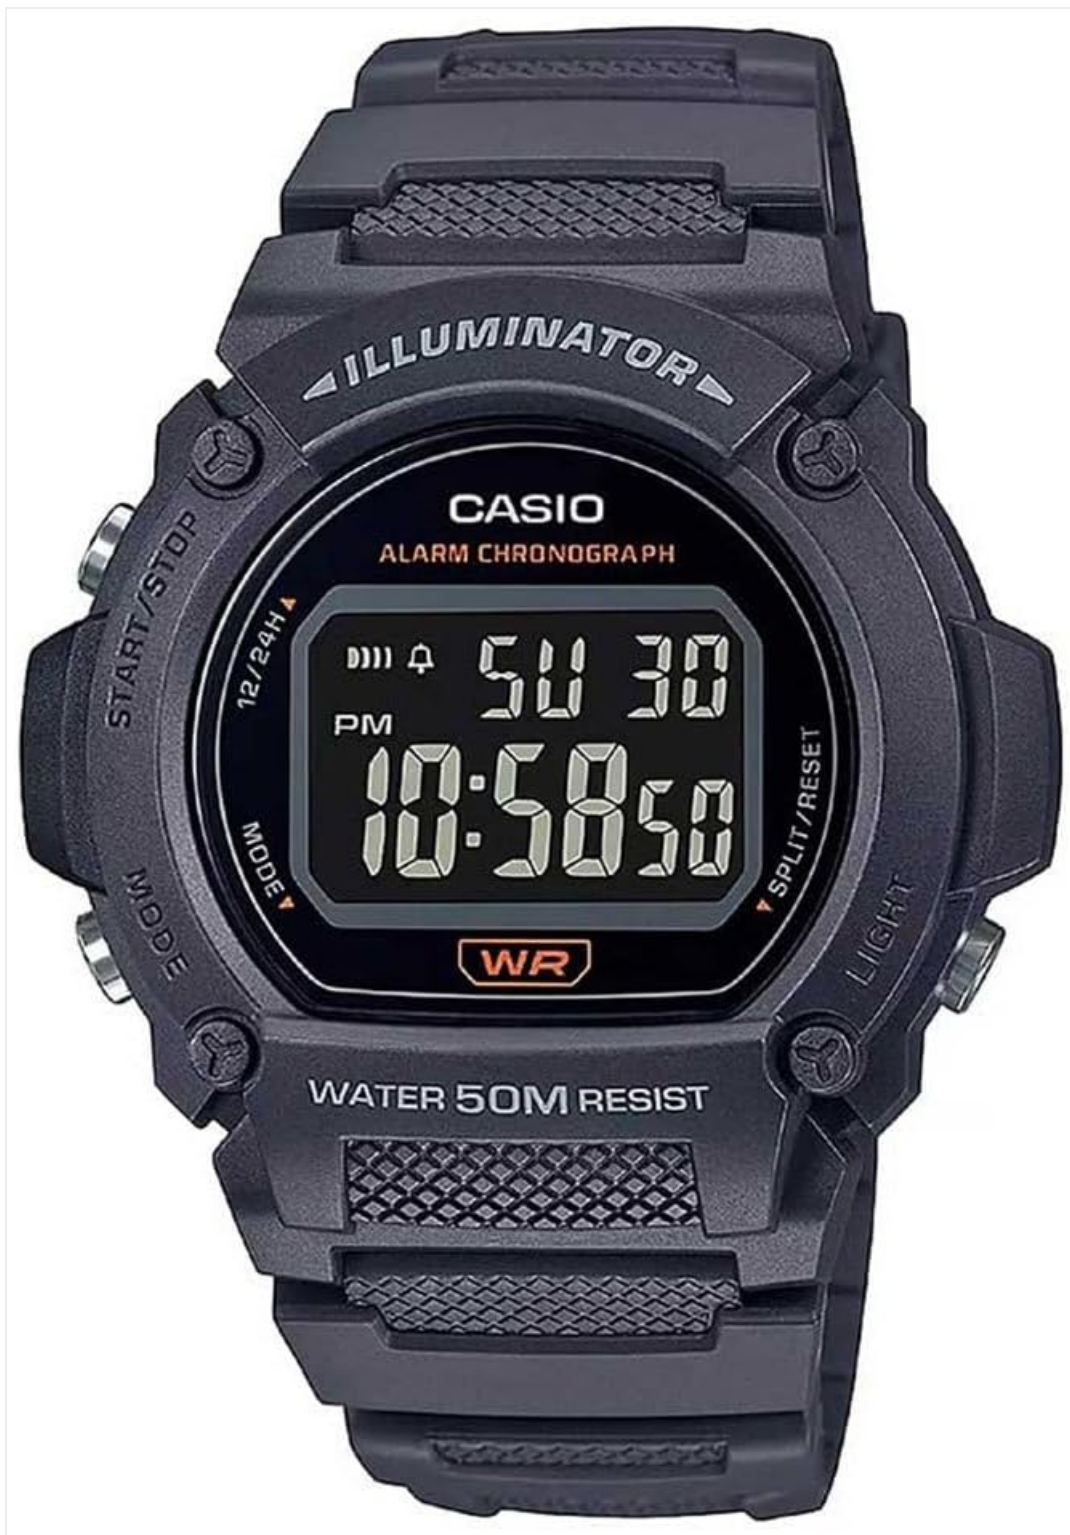


Figure 1: Casio W-219H-8B Illuminator Digital Watch. This image displays the front view of the watch, highlighting its digital display, four control buttons, and the "ILLUMINATOR" and "WATER 50M RESIST" markings on the bezel.

BUTTON FUNCTIONS

Your Casio W-219H-8B watch features four buttons for various operations:

- **LIGHT (Top Right):** Activates the LED backlight for illumination of the display.
- **START/STOP (Top Left):** Used to start and stop the stopwatch.
- **MODE (Bottom Left):** Cycles through the watch's different modes (Timekeeping, Stopwatch, Alarm).
- **SPLIT/RESET (Bottom Right):** Used for split time measurement and resetting the stopwatch, and for adjusting settings in various modes.

SETUP AND TIMEKEEPING

Setting the Time and Date

1. In Timekeeping Mode, press the **MODE** button until the seconds digits begin to flash, indicating the setting screen.
2. Press the **SPLIT/RESET** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START/STOP** button to increase the selected value. Hold down the button for rapid advancement.
4. Once all settings are adjusted, press the **MODE** button to exit the setting screen and return to Timekeeping Mode.

12/24-Hour Format

In Timekeeping Mode, press the **START/STOP** button to toggle between 12-hour and 24-hour time formats. The "PM" indicator will appear for PM times in 12-hour format.

OPERATING MODES

Stopwatch Function

The stopwatch measures elapsed time, split times, and two finishes. The measurement unit is 1/100th of a second.

1. From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show "00'00"00".
2. Press **START/STOP** to start timing.
3. Press **START/STOP** again to stop timing.
4. Press **SPLIT/RESET** to reset the stopwatch to "00'00"00".
5. To measure split times: While the stopwatch is running, press **SPLIT/RESET** to display the split time. The stopwatch continues to run internally. Press **SPLIT/RESET** again to return to elapsed time display.

Daily Alarm

The watch features a daily alarm. When the alarm is set, it sounds for 20 seconds at the preset time each day.

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The alarm time will be displayed.
2. Press the **SPLIT/RESET** button to toggle the alarm ON/OFF. An alarm indicator will appear when the alarm is ON.
3. To set the alarm time: In Alarm Mode, press the **START/STOP** button until the hour digits flash. Use **SPLIT/RESET** to adjust the hour. Press **START/STOP** to move to the minute digits, then use **SPLIT/RESET** to adjust minutes.
4. Press the **MODE** button to exit Alarm Mode.

LED Backlight

Press the **LIGHT** button (top right) to illuminate the display for approximately 1.5 seconds. This feature is useful in low-light conditions.

MAINTENANCE

Water Resistance

Your watch is marked "WATER 50M RESIST", indicating it is suitable for casual swimming, showering, and general water exposure. It is not recommended for diving or prolonged underwater use. Do not operate buttons while the watch is wet or submerged.

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent,

then wipe dry. Avoid using volatile agents like thinner or benzene, as they may damage the resin components.

Battery Replacement

The watch is powered by one Lithium Metal battery. When the display becomes dim or the backlight weakens, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time and date according to the "Setting the Time and Date" section. Ensure the 12/24-hour format is set as desired.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue persists, a reset may be required (consult a service center) or the battery may be critically low.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open the watch yourself, as this will void the warranty and compromise water resistance.

SPECIFICATIONS

Model Number	W-219H-8BVDF
Water Resistance	50 meters (5 ATM)
Stopwatch	1/100-second stopwatch
Alarm	Daily alarm
Backlight	LED backlight
Battery Type	1 Lithium Metal battery (included)
Product Dimensions	21.5 x 1.4 x 4.7 cm
Weight	40 g

WARRANTY AND SUPPORT


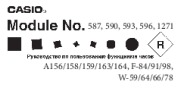

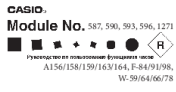
Your Casio watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please refer to the warranty card included with your purchase or visit the official Casio website for detailed warranty information.

For technical support, service, or inquiries regarding your watch, please contact your local authorized Casio service center or the retailer from whom you purchased the product. Do not attempt to repair the watch yourself, as this may void the warranty.

For more information, visit: www.casio.com



Related Documents

	<p>Casio Watch Manual Modules 549, 689, 690, 874, 1846</p> <p>Detailed user manual for Casio watches with modules 549, 689, 690, 874, 1846, covering features, operation, water resistance, and technical specifications.</p>
	<p>Casio Watch User Manual - Models 587, 590, 593, 596, 1271</p> <p>Comprehensive user manual for Casio digital watches, covering operation, care, water resistance, and technical specifications for models including 587, 590, 593, 596, 1271, A156/158/159/163/164, F-84/91/98, W-59/64/66/78.</p>
	<p>Casio Watch User Manual: Modules 549, 689, 690, 874, 1846</p> <p>Comprehensive user manual for Casio watches with modules 549, 689, 690, 874, 1846, and compatible models W-71, W-73, W-720, W-780. Covers timekeeping, alarms, stopwatch, countdown timer, water resistance, care instructions, and technical specifications.</p>
	<p>CASIO Watch Module 587-1271 User Manual and Specifications</p> <p>Comprehensive user manual for CASIO watches with modules 587, 590, 593, 596, and 1271, covering water resistance, care, operating modes, stopwatch, time setting, and technical specifications.</p>