

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Schildmeyer](#) /
- › [Schildmeyer Cosmo 146320 High Cabinet Instruction Manual](#)

Schildmeyer 146320

Schildmeyer Cosmo 146320 High Cabinet Instruction Manual

Model: 146320 | Brand: Schildmeyer

INTRODUCTION

This manual provides detailed instructions for the assembly, installation, use, and maintenance of your Schildmeyer Cosmo 146320 high cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Schildmeyer Cosmo 146320 high cabinet, shown in a white finish, integrated into a contemporary bathroom environment alongside other matching furniture pieces.

SAFETY INFORMATION

Caution: To prevent injury, use personal protective equipment and follow the instructions carefully during assembly.

- Always ensure all fittings are securely tightened before use.
- Do not overload shelves. Distribute weight evenly.
- For stability, it is recommended to secure the cabinet to a wall, especially in households with children or pets. Wall mounting hardware may not be included and should be appropriate for your wall type.
- Keep small parts out of reach of children during assembly.

PACKAGE CONTENTS

Before starting assembly, verify that all parts are present and undamaged. Refer to the included parts list in your packaging. If any parts are missing or damaged, contact customer support.

- Cabinet panels (sides, top, bottom, back)
- Doors (2)
- Shelves (3 total: 1 for lower compartment, 2 for upper compartment)
- Plastic feet (4)
- Metal fittings (hinges, screws, dowels, connectors)
- Crossbar in wild oak finish
- Assembly instructions

SETUP AND ASSEMBLY

Assembly is straightforward with clear instructions provided. It is recommended to assemble the cabinet on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the parts list.
2. **Assemble Cabinet Frame:** Follow the step-by-step diagrams in the included assembly manual to connect the side panels, top, and bottom panels using the provided metal fittings.
3. **Install Shelves:** Insert the shelf supports into the pre-drilled holes at your desired height. Place the shelves onto the supports. The cabinet includes 1 shelf for the lower compartment and 2 shelves for the upper compartment.
4. **Attach Doors:** The door hinges are freely selectable for left or right opening. Attach the hinges to the doors and then to the cabinet frame.
5. **Install Crossbar:** Secure the wild oak crossbar to the designated area on the cabinet front.
6. **Attach Feet:** Secure the plastic feet to the bottom of the cabinet.
7. **Positioning:** Place the cabinet in its desired location. Ensure it is level.
8. **Wall Securing (Recommended):** For enhanced stability and safety, especially in homes with children or pets, secure the cabinet to the wall using appropriate wall anchors and screws (not always included).



Image: A technical diagram illustrating the dimensions of the Schildmeyer Cosmo 146320 high cabinet, showing a height of 164.5 cm, width of 30.2 cm, and depth of 33 cm.

OPERATING AND USAGE

The Schildmeyer Cosmo 146320 high cabinet is designed for storage in various rooms, particularly bathrooms or hallways. Its handle-less door opening mechanism allows for a sleek, modern aesthetic, with door access from above.

- **Storage:** Utilize the internal shelves for organizing items such as towels, toiletries, or other household goods.
- **Door Operation:** To open the doors, gently pull from the top edge. The hinges allow for smooth operation.

- **Weight Distribution:** Always distribute items evenly across shelves to maintain stability and prevent tipping.

MAINTENANCE

Proper care will ensure the longevity and appearance of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage.
- **Inspection:** Periodically check all fittings and screws to ensure they remain tight. Retighten if necessary.
- **Scratch Resistance:** While the cabinet is scratch-resistant, avoid dragging sharp objects across its surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose fittings; not secured to wall.	Adjust feet to level the cabinet. Tighten all assembly screws. Secure the cabinet to a wall using appropriate hardware.
Doors do not close properly or are misaligned.	Hinges are loose or incorrectly adjusted.	Check hinge screws and tighten. Adjust hinge settings as per the assembly instructions to align doors.
Difficulty during assembly.	Instructions not followed correctly; missing parts.	Review the assembly instructions carefully. Verify all parts are present. Contact customer support if parts are missing or damaged.

SPECIFICATIONS

Feature	Detail
Brand	Schildmeyer
Model Number	146320
Product Dimensions (W x D x H)	30.2 x 33 x 164.5 cm
Weight	24.04 kg
Color	White
Material	Engineered Wood
Special Features	Scratch-resistant, Handle-less door opening, Freely selectable door hinge
Mounting Type	Floor Mount
Country of Origin	Germany
Compartment Dimensions (Lower Door)	Approx. 27 x 29 x 60 cm (W x D x H)
Compartment Dimensions (Upper Door)	Approx. 27 x 29 x 93 cm (W x D x H)



Image: A detailed view of the Schildmeyer Cosmo high cabinet, showcasing its design and finish.

WARRANTY AND SUPPORT

Schildmeyer products are manufactured in Germany with a focus on quality. For specific warranty information, please refer to the documentation included with your purchase or visit the official Schildmeyer website. For customer support, assistance with assembly, or to report missing/damaged parts, please contact your retailer or Schildmeyer customer service directly.



Image: The Schildmeyer brand logo and the "Made in Germany" emblem, signifying the product's origin and brand identity.