



Manuals.plus /

› Sharp /

› Sharp ESFP710CXEB Front Load Washing Machine User Manual

Sharp ESFP710CXEB

Sharp ESFP710CXEB Front Load Washing Machine User Manual

Model: ESFP710CXEB | Capacity: 7 kg

1. INTRODUCTION

Thank you for choosing the Sharp ESFP710CXEB Front Load Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before using the washing machine and keep it for future reference.

This washing machine features a 7 kg capacity, a digital display, a child lock function, and an anti-crease system, designed for high efficiency and convenience.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always ensure the washing machine is properly grounded.
- Do not allow children to play with or operate the appliance.
- Keep packaging materials out of reach of children.
- Do not install the appliance in areas exposed to direct sunlight or extreme temperatures.
- Before cleaning or maintenance, always unplug the appliance from the power outlet.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Ensure all transport bolts are removed before operation to prevent damage.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Locate and remove the transport bolts from the rear of the machine. These bolts are crucial for securing the drum during transit and must be removed before use to prevent severe vibration and damage.

3.2 Placement

Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure stability and minimize vibration during operation. Allow adequate space around the machine for ventilation and maintenance.

3.3 Water Connection

Connect the water inlet hose to a cold water tap and securely attach the other end to the water inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or laundry tub, ensuring it is properly secured and not kinked.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of your washing machine.



Image 1: Sharp ESFP710CXEB Front Load Washing Machine. This image shows the overall design of the appliance, highlighting its black finish and front-loading door.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a digital display and various control buttons for program selection, temperature, spin speed, and special functions. Refer to the labels on the control panel for specific functions.

4.2 Loading Laundry

Open the door and load your laundry into the drum. Do not overload the machine; the maximum capacity is 7 kg. Ensure clothes are evenly distributed.

4.3 Adding Detergent

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent and fabric softener to their respective compartments. Close the drawer gently.

4.4 Selecting a Program

Turn the program selector knob or press the program buttons to choose the desired wash cycle. The machine offers multiple wash programs. You can also adjust temperature and spin speed if available for the selected program. Available cycle options include Drain and Spin.

4.5 Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The digital display will show the remaining time.

4.6 Child Lock Function

To activate the child lock, press and hold the designated button (refer to your control panel for specific button) for a few seconds. This prevents accidental changes to settings during operation. Repeat the action to deactivate.

4.7 Anti-Crease System

This feature helps reduce wrinkles in your laundry by gently tumbling clothes after the wash cycle. Select this option if available with your chosen program to minimize ironing.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean the housing with a brush if necessary. Reinsert the drawer.

5.2 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a small amount of detergent or a specialized washing machine cleaner) periodically to clean the drum and remove any buildup.

5.3 Cleaning the Filter

The drain pump filter should be cleaned regularly to prevent blockages. Refer to your appliance's specific instructions for locating and cleaning this filter. Ensure the machine is drained and unplugged before accessing the filter.

5.4 Exterior Cleaning

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following table before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Door not closed properly; Program not selected; Child lock active.	Check power connection; Ensure door is latched; Select a program; Deactivate child lock.
No water intake	Water tap closed; Water inlet hose kinked; Water supply cut off.	Open water tap; Straighten hose; Check household water supply.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Excessive vibration	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry.

7. SPECIFICATIONS

Feature	Detail
Brand Name	Sharp
Model	ESFP710CXEB
Capacity	7 kg
Loading Type	Front Load
Color	Black
Finish Type	Coated
Material	Metal
Item Weight	62.5 kg
Product Dimensions (D x W x H)	52.7 cm x 59.7 cm x 84.5 cm
Special Features	Auto Restart, Vibration Reduction, Built-in Heater, Child Lock, High Efficiency
Cycle Options	Drain, Spin

8. WARRANTY AND SUPPORT

Your Sharp ESFP710CXEB washing machine is covered by a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service requests, or to inquire about extended protection plans, please contact Sharp customer support or an authorized service center. Contact information can typically be found on the Sharp official website or in your warranty documentation.

Keep your purchase receipt as proof of purchase for warranty claims.