

White Point WPD104 B

White Point WPD104 B Freestanding Dishwasher User Manual

Model: WPD104 B

1. INTRODUCTION

Thank you for choosing the White Point WPD104 B Freestanding Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using the dishwasher and keep them for future reference.

This dishwasher is designed for household use to clean everyday dishware, glassware, pots, and pans. It features a capacity for 10 place settings and offers 4 wash programs.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the dishwasher.
- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning. Contact qualified service personnel.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Load sharp items so they are not likely to damage the door seal or interior.
- Never immerse the appliance, cord, or plug in water or other liquids.

3. PRODUCT OVERVIEW

The White Point WPD104 B is a freestanding dishwasher designed for efficient dish cleaning. Key features include:

- **Capacity:** 10 place settings
- **Programs:** 4 wash programs (Normal, Intensive, Quick Wash, Rinse Only)

- **Spray Arms:** Dual spray arms (upper and lower) for thorough cleaning
- **Adjustable Upper Basket:** Allows for flexible loading of various dish sizes
- **Controls:** Program Start/Stop, Delay Start, and Pause functions
- **Color:** Black finish

Components

The dishwasher includes the main unit, upper and lower baskets, cutlery basket, and detergent/rinse aid dispensers.



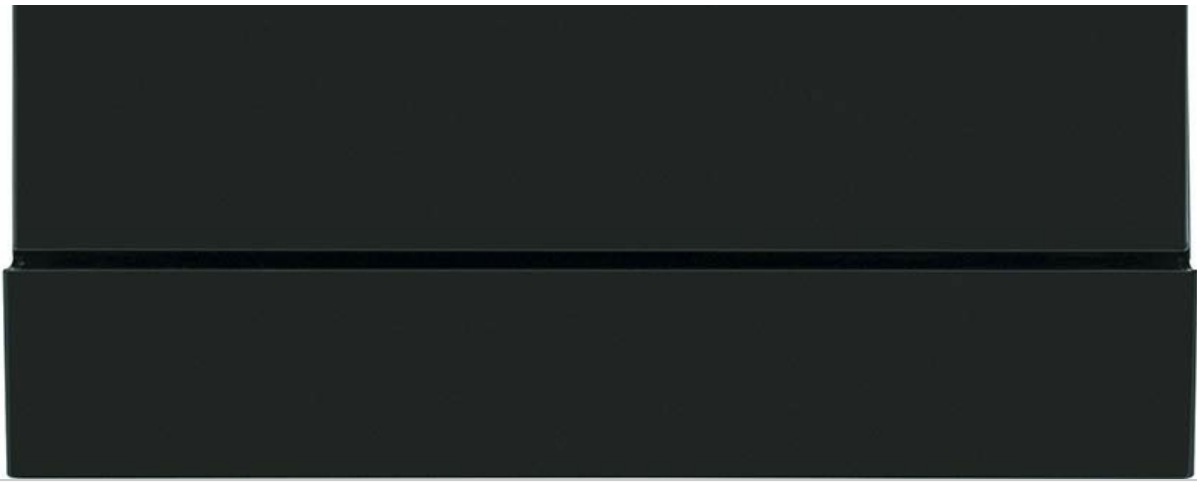


Figure 1: Front view of the White Point WPD104 B Freestanding Dishwasher. This image shows the appliance's exterior, including the door and control panel.



Figure 2: Interior view of the White Point WPD104 B Freestanding Dishwasher. This image illustrates the internal racks, spray arms, and detergent dispenser.

4. INSTALLATION AND SETUP

Proper installation is crucial for the performance and safety of your dishwasher. It is recommended that installation be performed by a qualified technician.

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any shipping damage. Report any damage immediately to your retailer.
- Keep packaging materials out of reach of children.

4.2 Positioning

- Place the dishwasher on a level, stable surface.
- Ensure there is adequate space for door opening and closing.

- Avoid placing the dishwasher near heat sources or in direct sunlight.

4.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa.
- Connect the drain hose to a suitable drain pipe, ensuring it is securely fastened and free from kinks.
- Plug the dishwasher into a properly grounded electrical outlet (220-240V, 50Hz). Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal dishwashing results.

5.1 Loading the Dishwasher

- Scrape off large food particles from dishes.
- Place larger items and pots in the lower basket.
- Place glasses, cups, and smaller items in the upper basket. Adjust the upper basket height if needed.
- Place cutlery in the cutlery basket with handles down for forks and spoons, and handles up for knives.
- Ensure dishes do not block the spray arms.

5.2 Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent according to the program selected and water hardness.
- Fill the rinse aid dispenser with rinse aid. This helps with drying and prevents spots. Refill when the indicator shows low.

5.3 Program Selection and Start

1. Close the dishwasher door securely.
2. Press the Power button to turn on the appliance.
3. Select the desired wash program using the program selection button. The available programs are:
 - **Normal:** For regularly soiled dishes.
 - **Intensive:** For heavily soiled dishes and pots.
 - **Quick Wash:** For lightly soiled dishes that need a fast wash.
 - **Rinse Only:** For rinsing dishes that will be washed later.
4. Press the Start/Stop button to begin the cycle.
5. To use the Delay Start function, press the Delay Start button repeatedly to set the desired delay time before pressing Start/Stop.
6. To pause a cycle, press the Pause button. Press it again to resume.

5.4 End of Cycle

Once the program is complete, the dishwasher will signal the end of the cycle. Open the door slightly to allow steam to escape and dishes to cool before unloading.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

6.1 Cleaning the Filters

- The filter system should be cleaned regularly to prevent blockages.
- Twist the coarse filter counter-clockwise and lift it out.
- Remove the fine filter and the main filter.
- Rinse all filters under running water to remove food particles.
- Reassemble the filters in reverse order, ensuring they are securely in place.

6.2 Cleaning the Spray Arms

- Check the spray arm nozzles for blockages regularly.
- If necessary, remove the spray arms and clean the nozzles with a thin brush or toothpick.
- Reattach the spray arms securely.

6.3 Exterior and Interior Cleaning

- Wipe the exterior of the dishwasher with a damp cloth and mild detergent.
- Clean the door seal regularly to remove food residue.
- Run a dishwasher cleaning cycle periodically using a specialized dishwasher cleaner.

7. TROUBLESHOOTING

Before contacting service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Dishes not clean	Improper loading; clogged spray arms; insufficient detergent; incorrect program.	Reload dishes correctly; clean spray arms; add more detergent; select a more intensive program.
Water not draining	Clogged filter; kinked drain hose; blocked drain pump.	Clean filters; straighten drain hose; check for drain pump obstructions.
White spots on dishes	Lack of rinse aid; hard water.	Refill rinse aid dispenser; consider using a water softener or increasing rinse aid dosage.

If the problem persists after attempting these solutions, please contact White Point customer service or a qualified technician.

8. SPECIFICATIONS

Feature	Detail
Brand	White Point

Feature	Detail
Model Name	WPD 104 B
Type	Freestanding Dishwasher
Color	Black
Capacity	10 Place Settings
Number of Programs	4 (Normal, Intensive, Quick Wash, Rinse Only)
Special Features	Adjustable Upper Rack, Dual Spray Arms
Material	Metal
Dimensions (H x W x D)	85 cm x 60 cm x 45 cm (approximate, based on product description interpretation for standard dishwasher dimensions)
Item Weight	21 Kilograms
Recommended Uses	Everyday dishware and glassware, pots and pans

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. White Point provides customer support for product inquiries, technical assistance, and service requests.

Please have your model number (WPD104 B) and purchase date ready when contacting support. For further assistance, visit the official White Point website or contact their customer service department.