

## Zanussi ZWF50820WW

# Zanussi ZWF50820WW Front-Load Automatic Washing Machine User Manual

Model: ZWF50820WW

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Zanussi ZWF50820WW Front-Load Automatic Washing Machine. Please read these instructions carefully before using the appliance and keep them for future reference.

## 2. SAFETY INFORMATION

For your safety and to ensure correct use, always observe the following precautions:

- Ensure the appliance is properly earthed.
- Do not allow children to play with the appliance.
- Never force the door open.
- Unplug the appliance before cleaning or maintenance.
- Do not install the appliance in areas exposed to extreme temperatures or humidity.
- Only use detergents and additives suitable for automatic washing machines.

## 3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Zanussi ZWF50820WW washing machine.



**Figure 3.1:** Front view of the Zanussi ZWF50820WW washing machine. This image displays the overall design, including the control panel at the top, the front-loading door, and the lower access panel for the drain filter.

### 3.1 Control Panel



**Figure 3.2:** Close-up of the control panel. The central rotary dial allows for program selection, surrounded by various wash programs such as Cottons, Synthetics, Delicates, Quick Wash, and specialized cycles like Baby Hygiene+ and Silk. Additional buttons for functions like Delay Start and Extra Rinse are also visible.

The control panel features a central program selector dial and various buttons for additional functions and settings. Refer to Figure 3.2 for a detailed view.

### 3.2 Detergent Dispenser




**Figure 3.3:** The detergent dispenser drawer. This drawer typically has compartments for pre-wash detergent, main wash detergent, and fabric softener, often marked with symbols or 'MAX' indicators for fill levels.

The detergent dispenser drawer is located on the top left of the machine. It has compartments for pre-wash, main wash detergent, and fabric softener. Always add detergent and softener to the correct compartments as indicated.

### 3.3 Washing Drum



**Figure 3.4:** The washing machine door open, revealing the stainless steel drum. The drum features numerous perforations for water circulation and internal paddles to agitate laundry during the wash cycle.

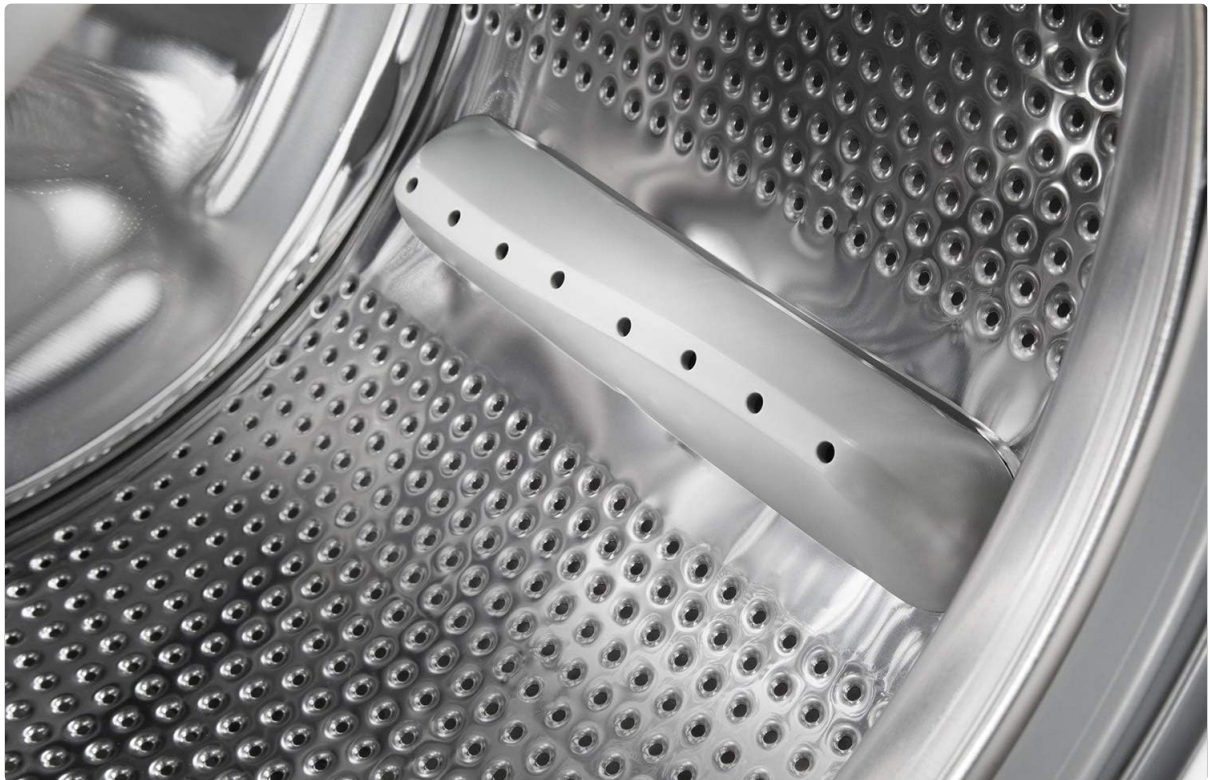 

**Figure 3.5:** Close-up view of the washing drum interior. This image highlights the textured surface and the design of the internal paddles, which are crucial for effective garment movement and cleaning.

The washing drum is made of durable stainless steel and designed for efficient washing. It has a capacity of 5 KG.

### **3.4 Drain Pump Filter**



**Figure 3.6:** The drain pump filter and its access panel located at the bottom front of the washing machine. The filter is designed to collect lint and small objects, preventing them from clogging the pump.

The drain pump filter is located at the bottom front of the appliance, behind an access panel. Regular cleaning of this filter is essential for proper drainage and machine performance.

## 4. INSTALLATION AND SETUP

### 4.1 Unpacking

Carefully remove all packaging materials. It is crucial to remove the transport bolts located at the rear of the machine before use. These bolts secure the drum during transit and must be removed to prevent damage during operation. Keep the bolts for future transport.

## 4.2 Positioning and Leveling

Place the washing machine on a firm, level floor. Adjust the adjustable feet to ensure the appliance is perfectly level and stable. An unlevel machine can cause excessive vibration and noise.

## 4.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed and not kinked.

## 4.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate. Do not use extension cords or adapters.

# 5. OPERATING INSTRUCTIONS

## 5.1 Loading Laundry

Open the washing machine door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

## 5.2 Adding Detergent and Softener

Pull out the detergent dispenser drawer (Figure 3.3). Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Do not exceed the 'MAX' fill line.

## 5.3 Selecting a Program

Turn the program selector dial (Figure 3.2) to choose the desired wash program based on the fabric type and soil level. Refer to Section 6 for program descriptions.

## 5.4 Adjusting Options

Depending on the selected program, you may be able to select additional options such as:

- **Extra Rinse:** Adds an additional rinse cycle.
- **Delay Start:** Delays the start of the wash cycle by 3, 6, or 9 hours.

## 5.5 Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The machine will automatically proceed through the selected program.

## 5.6 Child Lock

To activate the Child Lock, press and hold the designated button (refer to your control panel for specific button, often a combination of two buttons) for a few seconds until the indicator light illuminates. This prevents accidental changes to settings during operation. Repeat the process to deactivate.

## 5.7 Ending a Cycle

Once the cycle is complete, the machine will signal, and the door will unlock. Remove your laundry



promptly to prevent wrinkles and odors. Turn the program selector dial to the 'Off' position.

## 6. PROGRAMS AND FEATURES

Your Zanussi ZWF50820WW offers a variety of programs and features for different laundry needs:

- **Cottons:** For white and colored cotton items.
- **Synthetics:** For synthetic items like shirts, blouses, and mixed fiber garments.
- **Delicates:** For delicate items requiring gentle washing.
- **Cottons Economy:** An energy-efficient program for cottons.
- **Mixed Fabrics:** For a mixed load of cottons and synthetics.
- **Wool/Handwash:** For woolens and hand-washable items.
- **Silk:** Specifically designed for silk with a gentle wash and adapted spin cycle.
- **Quick (20 minutes):** A rapid wash for lightly soiled items.
- **Blanket:** For washing blankets and larger items.
- **Sport Intensive:** For sportswear.
- **Dark Garments:** Designed to protect dark colors.
- **Baby Hygiene+:** For baby clothes, providing thorough cleaning and rinsing.
- **Intense (1 hour):** For heavily soiled items requiring a more powerful wash.
- **Spin/Drain:** For draining water and spinning laundry without a wash cycle.

### Additional Features:

- **Automatic Sensor:** Adapts water and energy consumption to the load size.
- **Anti-Flood Protection:** Integrated safety system to prevent water leaks.

## 7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and longevity of your washing machine.

### 7.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer (Figure 3.3) under running water to remove any detergent residue or mold buildup. Use a brush if necessary.

### 7.2 Cleaning the Drain Pump Filter

The drain pump filter (Figure 3.6) should be cleaned regularly, especially if you notice drainage issues. To clean:

1. Open the access panel at the bottom front of the machine.
2. Place a shallow container beneath the filter to catch any residual water.
3. Slowly unscrew the filter counter-clockwise until water starts to drain.
4. Once all water has drained, fully remove the filter and clean it under running water.

- 5. Remove any lint or foreign objects.
- 6. Screw the filter back in clockwise until it is tight. Close the access panel.

### 7.3 Cleaning the Drum

Run a maintenance wash (e.g., a hot cotton cycle with no laundry and a descaling agent or washing machine cleaner) monthly to prevent odor and residue buildup in the drum.

### 7.4 Exterior Cleaning

Wipe the exterior surfaces of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 7.5 Door Seal Maintenance

After each wash, wipe the rubber door seal to remove any trapped lint or moisture, which can prevent mold growth and odors.

## 8. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; door not closed; program not selected; Start button not pressed.	Check power supply; ensure door is latched; select program; press Start.
Water not draining	Drain hose kinked or blocked; drain pump filter blocked.	Check and clear drain hose; clean drain pump filter (Section 7.2).
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Adjust feet to level machine; ensure transport bolts are removed; redistribute laundry.
Poor wash results	Incorrect detergent dosage; wrong program selected; overloaded machine.	Use correct detergent amount; select appropriate program; reduce load size.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Zanussi
Model	ZWF50820WW
Capacity	5 Kilograms



Feature	Detail
Max Spin Speed	800 RPM
Installation Type	Freestanding
Access Location	Front Load
Control Console	Push Button / Rotary Dial
Color	White
Material Type	Metal
Item Weight	21 Kilograms
Special Features	Child Lock, Automatic Sensor, Anti-Flood Protection, Delay Start (3-6-9 hours)
Quick-Wash Duration	20 minutes


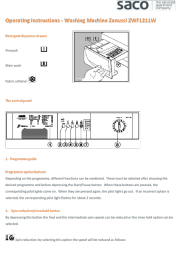


## 10. WARRANTY AND SUPPORT

Your Zanussi ZWF50820WW washing machine comes with a manufacturer's warranty. Please refer to the separate warranty card provided with your appliance for details on coverage and duration. For technical assistance, spare parts, or service requests, please contact Zanussi customer support in your region. Ensure you have your model number (ZWF50820WW) and serial number ready when contacting support.

© 2023 Zanussi. All rights reserved.

### Related Documents - ZWF50820WW

<div><p><b>How To Use</b></p><p><b>Notes:</b></p><ul style="list-style-type: none"><li>• Works with all types of washing machines - HE, Top Load, Front Load</li><li>• Compatible with all washing machine brands</li><li>• Recommended Use: Samsung, LG Appliances, Whirlpool, Bosch, Electrolux, Frigidaire, Amana, Kenmore, Maytag, Miele, Panasonic, Siemens, Speed Queen, Whisper, Brilux, Beko, Candy, Hoover, TCL, Sharp, Zanussi, Fisher &amp; Paykel, Sanyo, and More!</li></ul></div>	<p><a href="#">How to Use Uproot Clean Washing Machine Cleaner Pro</a></p> <p>Step-by-step guide on how to use Uproot Clean Washing Machine Cleaner Pro tablets for effective cleaning of HE, Top Load, and Front Load washing machines. Compatible with major brands.</p>
---	--

	<p><a href="#">Zanussi Professional Hood Type Dishwasher Manual</a></p> <p>Comprehensive manual for the Zanussi Professional Hood Type Dishwasher with Automatic Deliming Device &amp; Advanced Filtering System, covering features, specifications, installation, and sustainability.</p>
	<p><a href="#">Zanussi ZWF1211W Washing Machine Operating Instructions</a></p> <p>Comprehensive operating instructions for the Zanussi ZWF1211W washing machine, covering programme selection, options, and wash care symbols.</p>
	<p><a href="#">Zanussi ZMBN4DX Microwave Oven: Features and Specifications</a></p> <p>Discover the Zanussi ZMBN4DX microwave oven, featuring an XL turntable for even heating, a built-in grill function for crispy finishes, and an electronic touch-activated door. Learn about its 900W microwave power, automatic defrosting, and favorite function for quick cooking.</p>
	<p><a href="#">Zanussi ZWF842C3PW Washing Machine: Getting Started Guide</a></p> <p>A comprehensive guide to getting started with your Zanussi ZWF842C3PW washing machine, covering installation, operation, special features, and maintenance.</p>
	<p><a href="#">Electrolux M3GCP400 Clean &amp; Care Descaler and Degreaser Instructions</a></p> <p>Instructions for using the Electrolux M3GCP400 Clean &amp; Care descaler and degreaser for washing machines and dishwashers. This guide provides detailed steps in multiple languages.</p>



[\[pdf\]](#) Label

WashingMachine 2010 1061 EnergyLabel ZWF50820WW productinformation electrolux 80 EdenService

svc WEB GetEnergyLabel productid A797DF4D 5EC6 4D48 8F1A 186D45B696CD format |||

Zanussi **ZWF50820WW** 914 909 100 0 0 0 5 0 ...

lang: **score:27** filesize: 751.46 K page\_count: 1 document date: 2021-12-17



 
[\[pdf\]](#) Label

WashingMachine 2010 1061 EnergyLabel ZWF50820WW productinformation electrolux 80 EdenService

svc WEB GetEnergyLabel productid 85C77703 F163 46A8 BCF2 2424736397D0 format |||

Zanussi **ZWF50820WW** 914 909 101 0 0 0 5 0 ...

lang: **score:27** filesize: 751.46 K page\_count: 1 document date: 2021-12-17

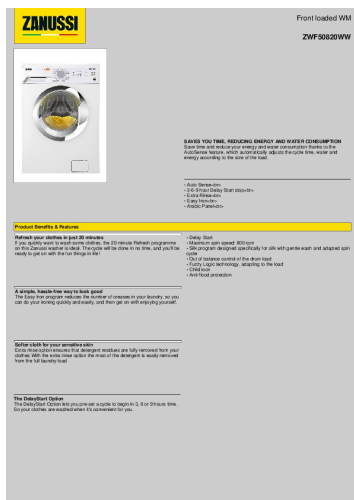

[\[pdf\]](#) Datasheet

Datasheet ZWF50820WW productinformation electrolux 80 EdenService svc WEB GetDatasheet

productid A797DF4D 5EC6 4D48 8F1A 186D45B696CD projectid 9753E3E1 B54A 4B50 B8A0

```
3E0B7B78026B languageid 24D2A4CC 2375 4C85 8634 1B8DDD55916B |||
```

Front loaded WM **ZWF50820WW** SAVES YOU TIME, REDUCING ENERGY AND WATER CONSUMPTION Save time and reduce your energy and water consumption thanks to the AutoSense feature, which automatically adjusts the cycle time, water and energy according to the size of the load. Auto Sense br 3-6-9 hour Delay...

lang:en score:27 filesize: 166.2 K page count: 2 document date: 2021-12-17