

Manuals.plus /

› STREETZ /

› STREETZ TWS-112 Wireless Stereo In-Ear Earbuds Instruction Manual

STREETZ TWS-112

STREETZ TWS-112 Wireless Stereo In-Ear Earbuds

Instruction Manual

INTRODUCTION

Thank you for choosing the STREETZ TWS-112 Wireless Stereo In-Ear Earbuds. These earbuds are designed to provide a comfortable and high-quality audio experience with the convenience of wireless connectivity. Featuring Bluetooth 5.0, an integrated microphone, and a portable charging case, they are ideal for music, calls, and active lifestyles.

Key features include:

- Up to 4 hours of music/podcast playback per charge, extended to 16 hours with the fast-charging case.
- Bluetooth 5.0 for fast, stable connections up to 10 meters.
- 6mm drivers delivering powerful bass, clear vocals, and high treble.
- Integrated microphone for hands-free calls and voice assistant control.
- Media buttons on earbuds for direct music and call control.
- Sweat-resistant design, suitable for sports and fitness.

PACKAGE CONTENTS

Please check the package for the following items:

- 2 x STREETZ TWS-112 Earbuds (Left and Right)
- 1 x Fast Charging Case
- 1 x Micro USB Charging Cable
- 1 x User Manual



Image: The STREETZ TWS-112 earbuds removed from their charging case, with the open charging case visible. This illustrates the main components included in the package.

SETUP

1. Charging the Earbuds and Charging Case

Before first use, fully charge the earbuds and the charging case.

1. **Charging the Case:** Connect the micro USB charging cable to the charging port on the case and to a USB power source (e.g., computer, wall adapter). The LED indicators on the case will show charging status.
2. **Charging the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure they are correctly seated. The earbuds will automatically begin charging. The case's LED indicators will show the charging status of the earbuds.

A full charge provides approximately 4 hours of playback for the earbuds, and the fully charged case can recharge the earbuds multiple times for a total of up to 16 hours of listening time.



Image: The STREETZ TWS-112 earbuds resting inside their open charging case, with blue LED indicators showing charging status. This illustrates how the earbuds are placed for charging.

2. Pairing with a Bluetooth Device

Follow these steps to pair your earbuds with your smartphone or other Bluetooth-enabled device:

1. **Power On:** Take both earbuds out of the charging case. They will automatically power on and enter pairing mode. You may hear an audio prompt indicating they are ready to pair.
2. **Activate Bluetooth:** On your device (e.g., smartphone), go to the Bluetooth settings and ensure Bluetooth is enabled.
3. **Select Device:** Look for "STREETZ TWS-112" in the list of available Bluetooth devices and select it.
4. **Confirm Pairing:** Once connected, you will hear an audio confirmation, and the earbuds' indicator lights may change.

The earbuds utilize Bluetooth 5.0 for a stable connection up to 10 meters (33 feet) in open areas.

OPERATING THE EARBUDS

Wearing the Earbuds

Insert the earbuds into your ears and gently rotate them to find a comfortable and secure fit. The ergonomic design ensures they stay in place, even during physical activity.



Image: Side profile view of the STREETZ TWS-112 earbuds, highlighting their ergonomic shape designed for a secure in-ear fit.

Music Playback Control

- **Play/Pause:** Press the multi-function button on either earbud once.
- **Next Track:** Double-press the multi-function button on the right earbud.
- **Previous Track:** Double-press the multi-function button on the left earbud.
- **Volume Control:** Volume control is typically managed directly from your connected device.

Call Management

- **Answer/End Call:** Press the multi-function button on either earbud once.
- **Reject Call:** Press and hold the multi-function button on either earbud for approximately 2 seconds.
- **Voice Assistant:** Triple-press the multi-function button on either earbud to activate your device's voice assistant (e.g., Google Assistant).

The integrated microphone allows for clear hands-free communication.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Water Resistance:** The earbuds are sweat-resistant, making them suitable for workouts. However, they are not designed for submersion in water. Avoid exposing them to excessive moisture or liquids.
- **Battery Care:** To prolong battery life, avoid fully discharging the earbuds and charging case frequently. Charge them regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds do not power on.	Low battery.	Place earbuds in the charging case and ensure the case is charged.
Earbuds do not pair with device.	Bluetooth is off on device; earbuds not in pairing mode; device too far.	<ul style="list-style-type: none"> • Ensure Bluetooth is enabled on your device. • Take earbuds out of case to enter pairing mode. • Move device closer to earbuds (within 10 meters). • Forget "STREETZ TWS-112" from your device's Bluetooth list and re-pair.
No sound or intermittent sound.	Earbuds not connected; low battery; interference; potential unit defect.	<ul style="list-style-type: none"> • Ensure earbuds are properly paired and connected. • Check earbud battery level. • Move away from other wireless devices that may cause interference. • Restart both earbuds and the connected device. • If issues persist, contact customer support.
Microphone not working.	Earbuds not connected for calls; microphone blocked.	<ul style="list-style-type: none"> • Ensure earbuds are selected as the audio input device for calls. • Check for any debris blocking the microphone opening.

SPECIFICATIONS

Model Name	TWS-112
Connectivity Technology	Wireless (Bluetooth 5.0)
Earbud Type	In-Ear (Intra-Auricular)
Microphone	Integrated
Playback Time (Earbuds)	Up to 4 hours
Total Playback Time (with Case)	Up to 16 hours
Charging Case Battery Capacity	500 mAh
Wireless Range	Up to 10 meters (33 feet)
Driver Size	6 mm
Impedance	16 Ohms
Frequency Response	20 KHz
Water Resistance	Sweat Resistant
Material	Plastic
Color	Black

SAFETY INFORMATION

- Do not expose the earbuds or charging case to extreme temperatures, direct sunlight, or fire.
- Do not attempt to disassemble or modify the product. This may void the warranty and cause damage.
- Keep out of reach of children and pets. Small parts may pose a choking hazard.
- Avoid using the earbuds at high volume levels for extended periods to prevent hearing damage.
- Be aware of your surroundings when using earbuds, especially in traffic or other potentially dangerous situations.
- Dispose of the product and its battery responsibly according to local regulations.

LIMITED WARRANTY AND CUSTOMER SUPPORT

STREETZ products are manufactured to the highest quality standards. In the unlikely event of a defect, please contact your retailer or the official STREETZ customer support for assistance.

Please note that information regarding spare parts availability and software updates is not explicitly provided for this product.

For further support or warranty claims, please refer to the contact information provided with your purchase or visit the official STREETZ website.

