

## KidKraft 10108

# KidKraft Treehouse Retreat Mansion Dollhouse User Manual

Model: 10108

## INTRODUCTION

Welcome to the world of imagination with your new KidKraft Treehouse Retreat Mansion Dollhouse. This comprehensive manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a safe and enjoyable experience. Designed for children aged 3 years and up, this dollhouse offers a vibrant and interactive play environment with multiple levels, unique features, and a variety of accessories.

**Safety Warning:** This product is intended for domestic use only.

## PRODUCT FEATURES

- Set of 26 accessories and furniture pieces, including items with lights and sound effects.
- Easy and quick assembly with EZ Kraft Assembly technology.
- 13 distinct play areas, including a charming treehouse.
- Redesigned furniture: a bed with an extendable sleeping tray, a sofa with hidden storage, and a desk with a foldable storage tray.
- A transparent elevator that smoothly glides up to the 3rd floor.
- Includes 3 sticker sheets for personalized gallery wall design.
- Bonus treehouse with a fabric roof, a vibrant tree featuring a branch bench, and functional fairy lights.



Image: The KidKraft Treehouse Retreat Mansion Dollhouse, showcasing its multi-level design, integrated treehouse, and a child interacting with the playset.

## SETUP AND ASSEMBLY

Your KidKraft Treehouse Retreat Mansion Dollhouse is designed for easy and quick assembly. Please follow the instructions carefully to ensure proper construction and stability.

### Before You Begin:

- Unpack all components and verify that all parts listed in the assembly guide are present.
- Clear a spacious area for assembly.
- Keep small parts away from young children during assembly.
- For faster and simpler assembly instructions, download the free BILT app from the Apple App Store or Google Play. This app provides interactive 3D instructions.

### Assembly Steps:

1. Identify and separate all wooden panels and hardware.
2. Begin by assembling the base structure, ensuring all connections are secure.

3. Attach the side panels and floor sections according to the numbered steps in the assembly guide.
4. Install the transparent elevator mechanism, ensuring it slides smoothly between floors.
5. Assemble the treehouse section and securely attach it to the main dollhouse structure.
6. Place the furniture and accessories in their designated rooms or as desired.
7. Apply the included stickers to customize the gallery wall and other areas.
8. Install batteries for the light and sound features (e.g., stove, fairy lights) as per the instructions.



Image: The dollhouse fully assembled, with sticker sheets visible on the floor, indicating the customization options.



- **Extendable Bed and Storage Sofa:** Pull out the tray on the bed for additional sleeping space. Lift the cushion on the sofa to reveal hidden storage.
- **Opening Bookshelf:** The bookshelf in one of the rooms can be opened to reveal a private entrance to the outdoor area.



Image: An interior view of the dollhouse, highlighting the transparent elevator, the artist's studio, and a bedroom with redesigned furniture.



Image: A close-up of the treehouse section, showing the functional fairy lights, the branch bench, and the crank with a bucket.



Image: A detailed shot of the dollhouse stove, illustrating its light and sound features, located within the kitchen area.



Image: A close-up of the dollhouse's dedicated gym area, complete with miniature exercise equipment like dumbbells and a yoga mat.

## MAINTENANCE

Proper care will extend the life and enjoyment of your dollhouse.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the finish.
- **Dusting:** Regularly dust the dollhouse and its accessories to prevent buildup.
- **Battery Replacement:** Replace batteries in the stove and fairy lights as needed. Always use the specified battery type and dispose of old batteries responsibly.
- **Storage:** Store the dollhouse in a dry, temperate environment away from direct sunlight or extreme temperatures to prevent warping or fading.
- **Inspections:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.

## TROUBLESHOOTING

If you encounter any issues with your dollhouse, please refer to the following common solutions:

- **Lights/Sounds Not Working:**
  - Check if batteries are installed correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure the power switch (if applicable) is in the 'ON' position.
- **Elevator Sticking/Not Moving Smoothly:**
  - Check for any obstructions in the elevator track.
  - Ensure all assembly screws related to the elevator mechanism are securely tightened but not overtightened.
- **Parts Not Fitting During Assembly:**
  - Double-check the part numbers against the assembly guide to ensure you are using the correct pieces.
  - Ensure parts are oriented correctly as shown in the diagrams.
  - Do not force parts together; if a part does not fit, re-examine the previous steps.
- **Missing or Damaged Parts:**
  - Contact KidKraft customer support for assistance. Have your model number (10108) and proof of purchase ready.

## SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	142.5 x 43 x 150.6 cm (56.1 x 16.9 x 59.3 inches)
Item Weight	26.72 Kilograms (58.9 lbs)
Manufacturer Recommended Age	3 years and up
Model Number	10108
Number of Pieces	27 (main structure components) + 26 accessories
Main Material	Engineered Wood, Plastic
Color	Multicolor

Assembly Required	Yes
Batteries Required	Yes
Batteries Included	Yes

## SUPPORT

For further assistance, missing parts, or warranty inquiries, please contact KidKraft customer support. Ensure you have your product model number (10108) and proof of purchase available when contacting support.

**Note:** Information regarding the availability of spare parts is not provided at this time.