

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Lovehoney](#) /
- › [Lovehoney Luxury Rabbit Vibrator User Manual](#)

Lovehoney Luxury Rabbit Vibrator

Lovehoney Luxury Rabbit Vibrator User Manual

Model: Luxury Rabbit Vibrator

Brand: Lovehoney

INTRODUCTION

Thank you for choosing the Lovehoney Luxury Rabbit Vibrator. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.





Image: The Lovehoney Luxury Rabbit Vibrator in purple, featuring its curved shaft and rabbit ear stimulator, with control buttons visible.

The Lovehoney Luxury Rabbit Vibrator is designed for internal and external stimulation. It features a slim, tapered shaft for internal pleasure and thick, flexible rabbit ears for external clitoral stimulation. Made from body-safe silicone, it is rechargeable and fully waterproof.

PRODUCT OVERVIEW

- **Material:** Body-safe silicone.
- **Design:** Curved shaft for G-spot stimulation and flexible rabbit ears for clitoral stimulation.
- **Functions:** 15 vibration functions (3 in the ears, 12 in the shaft).
- **Power:** USB rechargeable with included cable.
- **Waterproof:** Fully submersible for easy cleaning and use in water.
- **Travel Lock:** Included for secure transport.



**Thick, Flexible
Bunny Ears**
for External
Vibrations

Image: Detail of the vibrator's thick, flexible bunny ears, designed for external stimulation.



Image: The vibrator with text indicating its 15 satisfying functions, 3 in the ears and 12 in the shaft.

SETUP

1. Initial Charge

Before first use, fully charge your Lovehoney Luxury Rabbit Vibrator. Locate the charging port, usually at the base of the device. Insert the provided USB charging cable. The indicator light will show charging status (e.g., blinking while charging, solid when fully charged). A full charge typically takes 2-3 hours.

2. Cleaning Before First Use

Wash the vibrator thoroughly with warm water and a mild, toy-friendly soap or a specialized toy cleaner. Rinse well and allow it to air dry completely before use or storage.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Press and hold the power button (O) for 2-3 seconds.

- To turn off: Press and hold the power button (O) for 2-3 seconds.

2. Adjusting Vibration Functions

- Use the '+' button to increase vibration intensity or cycle through patterns.
- Use the '-' button to decrease vibration intensity or cycle through patterns in reverse.
- The vibrator offers 15 distinct functions, with separate controls for the shaft and rabbit ears. Experiment to find your preferred settings.

3. Travel Lock

To activate the travel lock, press and hold both the '+' and '-' buttons simultaneously for 3 seconds until the indicator light flashes. To deactivate, repeat the process.

4. Usage Tips

Always use a generous amount of water-based lubricant with your silicone vibrator for comfortable and enhanced pleasure. Avoid using silicone-based lubricants, as they can damage silicone products.

Your browser does not support the video tag.

Video: An official Lovehoney demonstration of the Luxury Rabbit Vibrator, showcasing its features and flexibility. This video provides a visual guide to the product's design and functionality.

MAINTENANCE

1. Cleaning

Clean your vibrator after each use. Wash with warm water and a mild, toy-friendly soap or a dedicated toy cleaner. Rinse thoroughly to remove all soap residue. Since the device is waterproof, you can submerge it for cleaning.

2. Drying and Storage

Pat dry with a lint-free cloth or allow to air dry completely. Store your vibrator in a clean, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check if the travel lock is activated and deactivate it if necessary.
- **Not charging:** Verify the USB cable is securely connected to both the device and a power source. Try a different USB port or adapter.
- **Weak vibrations:** The battery might be low. Recharge the device.
- **Buttons unresponsive:** Ensure the device is not in travel lock mode. If issues persist, try fully discharging and then recharging the device.

If you encounter persistent issues not covered here, please refer to the Warranty & Support section for contact information.

SPECIFICATIONS

Feature	Detail
Brand	Lovehoney
Model Name	Luxury Rabbit Vibrator
ASIN	B08WN51KB4
Material	Silicone
Color	Purple
Insertable Length	4.5 inches
Functions	15 (3 in ears, 12 in shaft)
Power Source	Rechargeable Lithium Ion battery (included)
Waterproof	Yes, submersible
Product Dimensions (Packaging)	9.06 x 37.4 x 27.56 inches; 11.99 ounces

Note: Product dimensions provided in the source data (9.06 x 37.4 x 27.56 inches) appear to be shipping or packaging dimensions. The insertable length is 4.5 inches.



Image: The vibrator with a graphic indicating its 4.5-inch insertable length.



Image: The vibrator with text highlighting its waterproof and submersible features.

WARRANTY & SUPPORT

For warranty information, product support, or any inquiries regarding your Lovehoney Luxury Rabbit Vibrator, please contact Lovehoney customer service directly. You can typically find contact details on the official Lovehoney website or within the product packaging.

Please retain your proof of purchase for any warranty claims.

Manufacturer: Lovehoney

Website: [Visit the Lovehoney Store on Amazon](#)

© 2023 Lovehoney. All rights reserved.

This manual is for informational purposes only. Lovehoney is not responsible for any damages or injuries resulting from improper use of this product.

