

[Manuals.plus](#) /

› [Budweiser](#) /

› Budweiser Portable Bluetooth Wireless Speaker Instruction Manual

Budweiser 810002175510

Budweiser Portable Bluetooth Wireless Speaker Instruction Manual

Model: 810002175510

1. INTRODUCTION

Thank you for purchasing the Budweiser Portable Bluetooth Wireless Speaker. This manual provides essential information for the proper setup, operation, and maintenance of your speaker. Please read these instructions carefully before use and retain them for future reference.




This image displays the front of the Budweiser Portable Bluetooth Wireless Speaker, featuring the speaker grille with the Budweiser logo and a handle for portability.

2. PRODUCT OVERVIEW

Key Features:

- Portable design with integrated handle for easy transport.
- Bluetooth wireless connectivity for audio streaming.
- Multiple input options: USB, TF Card, and AUX.
- Integrated LED lighting for visual effects.
- Rechargeable 1200 mAh battery providing up to 5 hours of playback.
- 5-watt power amplifier for clear audio with minimal distortion.

Component Identification:

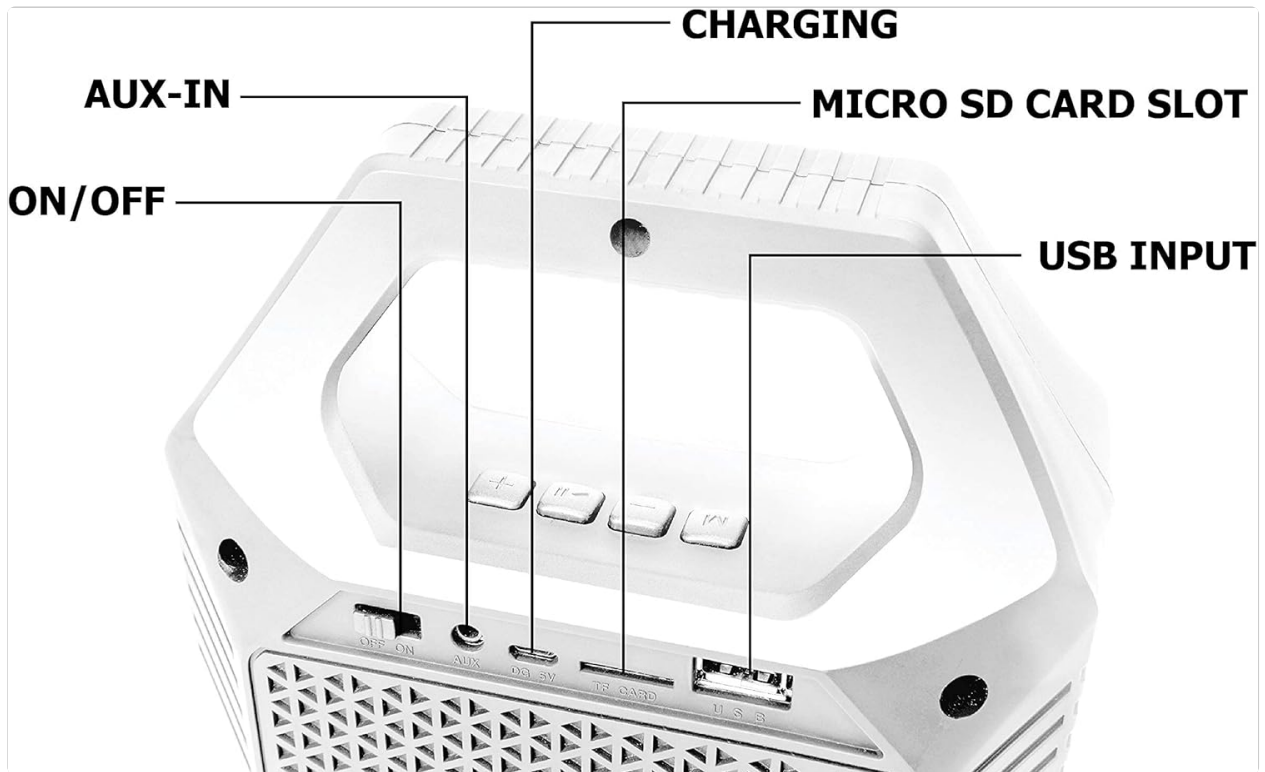

This diagram illustrates the top control panel and rear ports of the speaker, including the ON/OFF switch, AUX-IN, Charging port, Micro SD Card Slot, and USB Input.

1. **ON/OFF Switch:** Powers the speaker on or off.
2. **AUX-IN Port:** For connecting external audio devices via a 3.5mm audio cable.
3. **Charging Port:** Connect the charging cable here to recharge the internal battery.
4. **Micro SD Card Slot:** Insert a Micro SD (TF) card for direct audio playback.
5. **USB Input:** Insert a USB flash drive for direct audio playback.
6. **Control Buttons:** (Not explicitly labeled in image, but typically include Play/Pause, Volume Up/Next Track, Volume Down/Previous Track, Mode, LED control).

3. SETUP

3.1 Charging the Speaker

1. Locate the Charging Port on the speaker.
2. Connect the provided USB charging cable to the speaker's charging port.
3. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate during charging and turn off when fully charged.

5. A full charge typically takes approximately 3-4 hours.

3.2 Powering On/Off

- To power on, slide the **ON/OFF Switch** to the 'ON' position. You will hear an audible prompt.
- To power off, slide the **ON/OFF Switch** to the 'OFF' position.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a flashing LED or audible prompt). If not, press the 'Mode' button to switch to Bluetooth.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices. The speaker will appear as "Budweiser Speaker" or similar.
4. Select the speaker from the list to initiate pairing.
5. Once paired, you will hear a confirmation tone, and the LED indicator will typically stop flashing.
6. You can now play audio from your device through the speaker.

4.2 USB/TF Card Playback

1. Insert a USB flash drive or a Micro SD (TF) card containing MP3 audio files into the respective port.
2. The speaker will automatically detect the storage device and begin playing audio. If not, press the 'Mode' button to switch to USB or TF Card mode.
3. Use the control buttons (Play/Pause, Next/Previous Track) to manage playback.

4.3 AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device.
3. Press the 'Mode' button on the speaker to switch to AUX mode.
4. Play audio from your external device. Volume can be controlled from both the speaker and the connected device.

4.4 Volume and Track Control

- **Volume Up:** Press and hold the '+' button.
- **Volume Down:** Press and hold the '-' button.
- **Next Track:** Short press the '+' button.
- **Previous Track:** Short press the '-' button.
- **Play/Pause:** Short press the 'Play/Pause' button.

4.5 LED Lighting Control

- The speaker features integrated LED lights that activate with music playback.
- To turn off the LED lights, press and hold the dedicated LED control button (or the 'Mode' button if no dedicated LED button is present).

5. MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not immerse the speaker in water, as it is not waterproof.
- Store the speaker in a cool, dry place when not in use.
- To prolong battery life, charge the speaker fully before long periods of storage and recharge it every 3-6 months.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
No sound from speaker.	Volume too low; incorrect mode; device not connected.	Increase volume on speaker and connected device. Ensure correct input mode (Bluetooth, AUX, USB/TF). Re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker not in pairing mode; device too far; interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices.
USB/TF card not playing.	Incorrect file format; card/drive not inserted correctly; speaker not in correct mode.	Ensure audio files are in MP3 format. Reinsert the USB drive or TF card. Press the 'Mode' button to select USB or TF card mode.

7. SPECIFICATIONS

Feature	Detail
Model Number	810002175510
Brand	Budweiser
Speaker Type	Portable, Outdoor
Connectivity Technology	Bluetooth, Auxiliary, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo
Power Source	Battery Powered

Feature	Detail
Battery Type	1 Lithium Ion battery (included)
Item Weight	1.48 pounds
Package Dimensions	11.26 x 7.52 x 3.66 inches
Control Method	Touch
Is Waterproof	FALSE

8. WARRANTY INFORMATION

This product comes with a **Limited Warranty**. Please refer to the product packaging or contact the manufacturer for specific details regarding the terms and duration of the warranty.