

Manuals.plus /

› Braun /

› Braun Metal Blade Main Trimmer Head Instruction Manual for Trimmer Types 5513, 5514, 5515, 5516, 5517, 5541, 5542, 5544

Braun BR-81695620

Braun Metal Blade Main Trimmer Head Instruction Manual

FOR BRAUN TRIMMER TYPES 5513, 5514, 5515, 5516, 5517, 5541, 5542, 5544

1. Introduction

This document provides essential instructions for the proper installation, use, and maintenance of your Braun Metal Blade Main Trimmer Head. This replacement part is designed to ensure continued optimal performance of your compatible Braun trimmer.

2. Compatibility

This Braun Metal Blade Main Trimmer Head is exclusively compatible with the following Braun trimmer types:

- Trimmer Type 5513
- Trimmer Type 5514
- Trimmer Type 5515
- Trimmer Type 5516
- Trimmer Type 5517
- Trimmer Type 5541
- Trimmer Type 5542
- Trimmer Type 5544

To ensure correct fit, verify your trimmer's type number, typically found on the device body.

Video: How to Identify Your Trimmer TYPE Number. This video demonstrates how to locate the type number on your Braun trimmer, which is crucial for ensuring compatibility with replacement parts.

3. Setup and Installation

Follow these steps to safely replace your trimmer head:

1. Ensure your Braun trimmer is switched off and unplugged from any power source.
2. Gently grasp the existing trimmer head and pull it upwards to detach it from the trimmer body.
3. Align the new Braun Metal Blade Main Trimmer Head with the trimmer body.
4. Press down firmly until you hear a click, indicating the head is securely attached.
5. Verify the head is stable and does not wobble before turning on the trimmer.



Image: Braun Metal Blade Main Trimmer Head. A close-up view of the Braun metal blade main trimmer head, featuring a silver-colored blade with small teeth and four visible screws, attached to a black plastic base.

4. Operation

Once the trimmer head is securely attached, you can use your Braun trimmer as usual. For optimal results:

- Ensure your skin is clean and dry before trimming.
- Move the trimmer against the direction of hair growth for an effective trim.
- Apply light pressure and use slow, controlled movements.

5. Maintenance

Regular cleaning and care will prolong the life of your trimmer head and maintain its cutting performance:

1. After each use, switch off and unplug the trimmer.
2. Remove the trimmer head by pulling it upwards.
3. Rinse the trimmer head under running water to remove hair clippings.
4. Allow the trimmer head to air dry completely before reattaching it to the trimmer body or storing.
5. Periodically apply a drop of light machine oil (not included) to the blades to ensure smooth operation.

6. Troubleshooting

If you encounter any issues with your trimmer head, consider the following:

- **Poor Cutting Performance:** Ensure the trimmer head is clean and free of hair buildup. Apply oil to the blades if they feel stiff.
- **Trimmer Head Not Attaching Securely:** Check for any obstructions on the trimmer body or the head itself. Ensure proper alignment before pressing down firmly.
- **Unusual Noise:** Disassemble and reassemble the trimmer head to ensure all components are correctly seated. Clean thoroughly.

If problems persist, contact Braun customer support or consult your trimmer's original instruction manual.

7. Specifications

- **Item Model Number:** BR-81695620
- **Manufacturer:** Braun
- **ASIN:** B08WR9NJ78

8. Warranty and Support

For detailed warranty information, product registration, and customer support, please refer to the original product packaging or visit the official Braun website. Keep your proof of purchase for any warranty claims.