

STYLEWELL 309076198

StyleWell Cordless Blackout Fabric Roller Shade User Manual

Model: 309076198

INTRODUCTION

Thank you for choosing the StyleWell Cut-to-Size Linen Cordless Blackout Fabric Roller Shade. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new roller shade. Please read this manual thoroughly before beginning installation and retain it for future reference.



Figure 1: StyleWell Cordless Blackout Fabric Roller Shade installed in a window frame, showcasing its clean, cordless design and light brown linen-like fabric.

SAFETY INFORMATION

- Always follow local building codes and regulations when installing window treatments.
- Keep small children and pets away from the installation area to prevent accidents.
- Use appropriate safety gear, such as safety glasses, when drilling or cutting.
- Ensure mounting surfaces are structurally sound and can support the weight of the shade.
- This product is designed for indoor use only.
- The cordless operation eliminates the risk of cord entanglement, making it safer for homes with children and pets.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Cordless Blackout Fabric Roller Shade (1 unit)
- Mounting Brackets (2 units)
- Mounting Hardware (screws, anchors if applicable)
- Installation Instructions (this manual)

Note: Valance is not included with this product.

SETUP AND INSTALLATION

Tools Required (Not Included):

- Measuring Tape
- Pencil
- Drill with appropriate drill bits
- Screwdriver (Phillips head recommended)
- Level

Installation Steps:

1. **Measure and Mark:** Determine whether you will be installing the shade with an inside mount (within the window frame) or an outside mount (outside the window frame). Measure the desired location carefully. Mark the positions for the mounting brackets using a pencil and a level to ensure they are perfectly aligned.



Figure 2: The roller shade seamlessly integrated into a living room setting, demonstrating its aesthetic appeal and functional fit within a window opening.

2. **Install Brackets:** Drill pilot holes at the marked locations. Secure the mounting brackets using the provided screws. If drilling into drywall, use appropriate wall anchors. Ensure the brackets are firmly attached and level.



Figure 3: A detailed view of the mounting bracket and the end of the roller shade mechanism, showing how it attaches to the window frame.



Figure 4: An alternative perspective of the mounting bracket, illustrating its design and how the shade's roller fits into place for secure installation.

3. **Mount the Shade:** Carefully insert the roller shade into the installed brackets. Ensure both ends of the shade's roller mechanism are securely seated in the brackets. You may hear a click as it locks into place.



Figure 5: The roller shade fully extended, demonstrating its blackout capability and the smooth, even fall of the fabric.

4. **Test Operation:** Gently pull down and push up the bottom rail of the shade to ensure it operates smoothly and stays in position at various heights.

OPERATING INSTRUCTIONS

Your StyleWell roller shade features a cordless design for easy and safe operation.

- **To Lower the Shade:** Grasp the bottom rail of the shade firmly with both hands and gently pull it down to the desired position. The shade will hold its position once you release it.
- **To Raise the Shade:** Grasp the bottom rail of the shade firmly with both hands and gently push it upwards. The shade will retract smoothly. Release it at the desired height.
- **Smooth Operation:** Avoid forcing the shade. If it feels stiff, ensure there are no obstructions in its path.

MAINTENANCE

Regular cleaning will help maintain the appearance and longevity of your roller shade.

- **Dusting:** Use a soft cloth, duster, or vacuum cleaner with a brush attachment to gently remove dust from the fabric.

- **Spot Cleaning:** For minor stains, gently blot the affected area with a damp cloth and mild soap. Do not rub vigorously, as this may damage the fabric. Allow to air dry completely.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or bleach, as these can damage the fabric and operating mechanism.
- **Mechanism Care:** The cordless mechanism is designed to be maintenance-free. Do not attempt to lubricate or disassemble it.

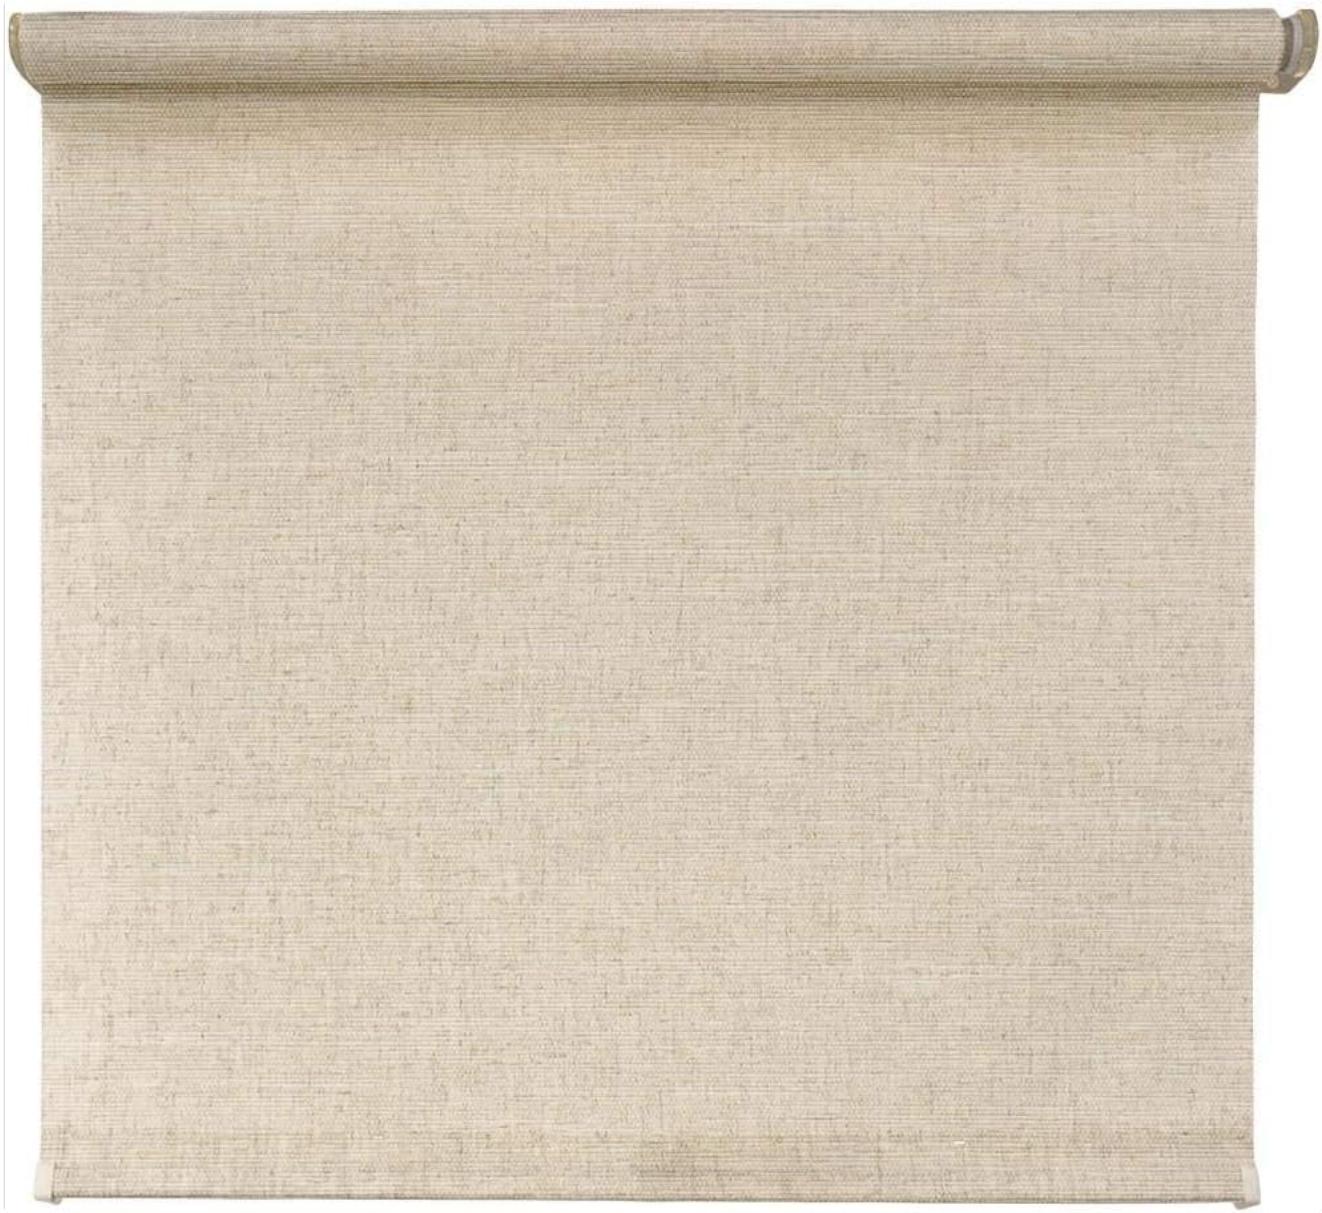


Figure 6: A full, unrolled view of the roller shade fabric, highlighting its uniform texture and blackout material.



Figure 7: A magnified view of the shade's linen-like fabric, showing the intricate weave and material quality.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shade does not stay up or down.	Cordless mechanism needs adjustment or is damaged.	Ensure the shade is fully seated in the brackets. If issues persist, contact customer support. Do not attempt to repair the mechanism yourself.
Shade is difficult to raise or lower.	Obstruction in the window frame or mechanism.	Check for any objects blocking the shade's path. Ensure the shade is installed level and not binding against the frame.
Shade fabric is wrinkled or creased.	Improper storage or handling.	Minor wrinkles may relax over time. For persistent creases, gentle steaming from a distance may help, but test on an inconspicuous area first.

SPECIFICATIONS

Feature	Detail
Brand	STYLEWELL
Model Number	309076198
Dimensions (W x L)	55.25 in. W x 72 in. L
Shade Tip-to-Tip Width	55-1/4 in.
Shade Cloth Width	54 in.
Color	Light Brown Wood (Linen)
Material	Polyester
Special Features	Blackout, Cordless
Operation Mode	Manual
Item Weight	1.81 kg
Recommended Use	Indoor

WARRANTY AND SUPPORT


StyleWell products are manufactured to high-quality standards. For specific warranty information or technical support, please refer to the product packaging or contact StyleWell customer service directly. Keep your proof of purchase for any warranty claims.

For assistance, please visit the manufacturer's website or contact their customer support line.

© 2024 STYLEWELL. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

Related Documents

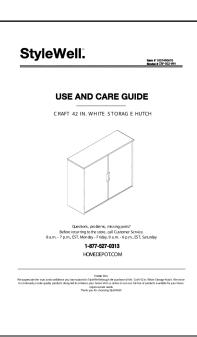	<p>StyleWell Roller Shade with Cordless Clutch System: Use and Care Guide</p> <p>Comprehensive guide for using and caring for the StyleWell Roller Shade with Cordless Clutch System. Includes installation instructions, troubleshooting tips, and maintenance advice.</p>
	<p>StyleWell Craft 42 in. White Storage Hutch Assembly and Care Guide</p> <p>Comprehensive assembly instructions, care tips, and troubleshooting for the StyleWell Craft 42 inch White Storage Hutch (Model CRF-002-WH). Learn how to safely build and maintain your furniture.</p>

