

[Manuals.plus](#) /

› [AECOJOY](#) /

› AECOJOY 3-Seat Outdoor Patio Swing Chair Instruction Manual (Model 16093BR-04NEW)

AECOJOY 16093BR-04NEW

AECOJOY 3-Seat Outdoor Patio Swing Chair

Model: **16093BR-04NEW**

Your guide to assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the AECOJOY 3-Seat Outdoor Patio Swing Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new swing chair. Please read it thoroughly before use and retain it for future reference.



Image 1.1: The AECOJOY 3-Seat Outdoor Patio Swing Chair.

2. IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent injury, please adhere to the following guidelines:

- Always assemble the swing chair on a flat, stable surface.
- Ensure all bolts, nuts, and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 750 lbs (approximately 3 adults).
- Keep children and pets away from the swing during assembly.
- Do not stand on the swing or use it for purposes other than its intended design.
- Avoid using the swing in strong winds or severe weather conditions. The canopy should be lowered or removed to prevent damage.


- Regularly inspect the frame, springs, and fabric for any signs of wear, damage, or corrosion. Replace damaged parts immediately.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed in your product's packing list are present and undamaged. If any parts are missing or damaged, please contact customer support.

ADJUSTABLE 180G POLYESTER CANOPY-

Effective UV-block & Water Resistant

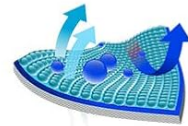

WATERPROOF



SPF++



Gear knob for
smooth operation



Effective UV-block
Water Resistant



Non-slip Rubber Feet

Image 3.1: Example of swing chair components (actual parts may vary slightly).

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Follow the step-by-step diagrams provided in your physical manual. Ensure all

connections are firm but do not overtighten until all parts are in place.

4.1 Frame Assembly

Begin by assembling the main steel frame components. Connect the base supports to the uprights, ensuring the inverted Y-frame structure is stable. The robust alloy steel frame provides a strong foundation.



Image 4.1: Detail of the sturdy alloy steel frame and heavy-duty springs.

4.2 Seat and Backrest Installation

Attach the rattan woven seat and backrest to the assembled frame using the provided hardware. The rattan design offers durability and a classic aesthetic.

4.3 Canopy Attachment

Secure the adjustable canopy to the top of the frame. The canopy is designed for sun protection and water resistance.

4.4 Final Tightening and Inspection

Once all parts are in place, fully tighten all fasteners. Perform a final inspection to ensure the swing is stable and all components are correctly installed.

5. OPERATING INSTRUCTIONS

5.1 Using the Swing

Gently sit on the swing. The heavy-duty springs allow for a smooth and comfortable gliding motion. Avoid sudden movements or excessive force.

5.2 Adjusting the Canopy

The canopy can be adjusted to block the sun from various angles. Loosen the gear knobs on either side of the canopy, position the canopy to your desired angle, and then re-tighten the knobs to secure it.



Deluxe Outdoor Swing Glider

with Rattan Woven Seat and Steel Frame

Brighten Your Delightful Outdoor Time



Image 5.1: Adjustable canopy mechanism.

5.3 Utilizing Side Trays

The swing chair features two side trays with cup holders for convenience. These trays are fixed and cannot be folded.

Comparison of Details

Thickness

Durable & Dense
Rattan Design



VS



Simple Steel Frame



Without Cup Holders

VS



Convenient

With 2 Cup Holders

Comfort

3 Back Pillows and
1 Plump Seat Cushion



VS



Without Any
Seating Upholstery

Image 5.2: Side tray with cup holder.

5.4 Cushions and Pillows

The swing includes a 4-inch thick padded cushion and three pillows for enhanced comfort. These are removable for cleaning or seasonal adjustment.



Image 5.3: Removable cushions and pillows.

5.5 Seating Capacity

The swing chair is designed to comfortably seat up to three individuals, with a maximum weight capacity of 750 pounds.

Holds Up to 3 Persons

Enjoy a smooth and comfortable swing glider



750 LBS
Weight Capacity



Seats Up to 3

Image 5.4: Seating capacity for three persons.

Product Overview Video

Your browser does not support the video tag.

Video 5.1: An overview of the AECOJOY Rattan Outdoor Swing, demonstrating its features and use.

6. MAINTENANCE

6.1 Cleaning

- **Frame:** Wipe the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust.
- **Rattan:** The rattan design is water-resistant and easy to clean. Use a soft brush or cloth with mild soap and water.
- **Canopy:** The 180G polyester canopy is UV-block and water-resistant. Clean with a soft brush and mild detergent. Do not machine wash.
- **Cushions/Pillows:** The removable cushions and pillows can be spot cleaned with a mild fabric cleaner. Allow to air dry completely.

6.2 Storage

During prolonged periods of non-use or in harsh weather conditions, it is recommended to store cushions and pillows indoors. The swing frame can be covered with a weather-resistant cover to prolong its lifespan.

7. TROUBLESHOOTING

- **Squeaking Noise:** Apply a silicone-based lubricant to the suspension springs and pivot points if squeaking occurs.
- **Instability:** Ensure all bolts and nuts are securely tightened. Check that the swing is placed on a level surface.
- **Canopy Not Holding Position:** Verify that the gear knobs on the canopy are fully tightened after adjustment.
- **Rust Spots:** Clean any rust spots with a wire brush and apply rust-inhibiting paint to prevent further corrosion.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	AECOJOY
Model Number	16093BR-04NEW
Color	Brown
Material	Rattan, Alloy Steel
Product Dimensions (D x W x H)	40.5"D x 71"W x 63.7"H
Item Weight	151.5 Pounds
Maximum Weight Recommendation	750 Pounds
Seating Capacity	3 Persons
Required Assembly	Yes
Canopy Material	180G Polyester (UV-block & Water Resistant)



Image 8.1: Product dimensions.

9. WARRANTY AND CUSTOMER SUPPORT

AECOJOY provides a 30-day easy return policy for this product. For any questions, missing parts, or assistance with assembly or operation, please contact AECOJOY-US customer support. Refer to your purchase documentation for specific warranty details and contact information.

We are committed to ensuring your satisfaction with your AECOJOY product.

© 2024 AECOJOY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question