

[Manuals.plus](#) /

› [Midea](#) /

› Midea WQP12-5201F Freestanding Dishwasher User Manual

Midea WQP12-5201F

Midea WQP12-5201F Freestanding Dishwasher User Manual

Model: WQP12-5201F

1. PRODUCT OVERVIEW

The Midea WQP12-5201F is a 13-place setting freestanding dishwasher designed for efficient and thorough cleaning of your dishes. It features advanced wash programs, energy-saving capabilities, and user-friendly controls, making it suitable for modern households.

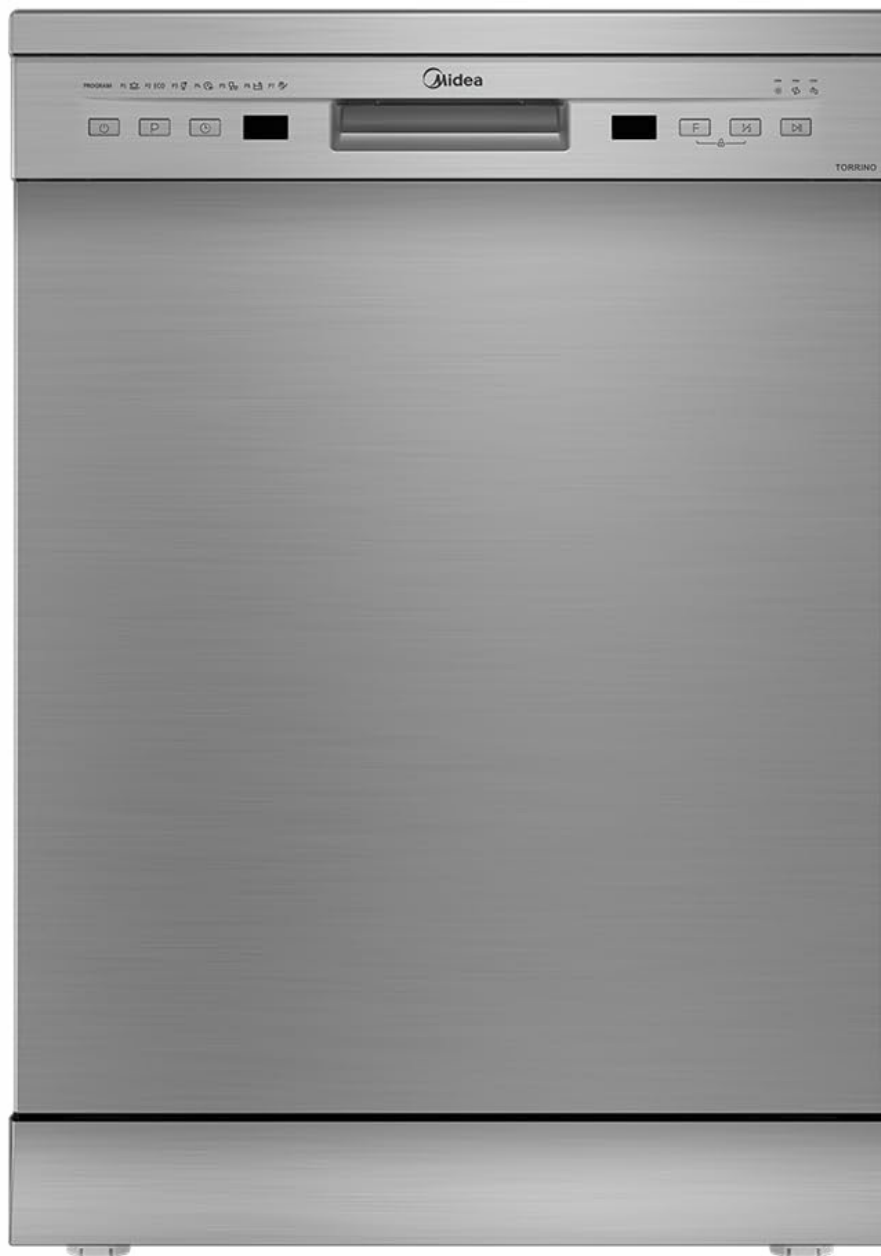


Figure 1.1: Front view of the Midea WQP12-5201F Freestanding Dishwasher in silver finish.



Figure 1.2: The Midea dishwasher seamlessly integrated into a kitchen environment, highlighting its freestanding design.

Key Features:

- **70°C Intensive Wash:** Designed to effectively remove stubborn oil and masala stains, ideal for diverse cooking needs.
- **A++ Energy Efficiency:** Optimizes electricity usage for reduced power consumption and long-term savings.
- **13-Place Setting Capacity:** Accommodates a full day's load for a family of 4–5, including various dishware and cookware.
- **Seven Wash Programs:** Offers versatile cleaning options including Intensive, ECO, Glass, 90-min, Rapid, Self-Clean, and Pre-Wash cycles.
- **Adjustable Racks:** Features upper rack height adjustment, foldable tines, and a separate cutlery tray for flexible loading.
- **Half-Load Function:** Conserves water and energy when washing smaller loads without compromising cleaning performance.
- **Power-Off Memory:** Automatically resumes the wash cycle from where it left off after a power interruption.
- **Extra Dry Feature:** Ensures improved drying results for ready-to-use dishes.
- **Low Noise Operation:** Operates quietly at 52 dB, using approximately 11 liters of water per cycle.
- **Built-in Safety Features:** Includes child lock, leak protection, and a delay-start timer for enhanced safety and convenience.

2. INSTALLATION AND SETUP

Proper installation is crucial for the optimal performance and longevity of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

2.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any signs of damage during transit. Report any

damage to your retailer immediately.

2.2 Placement

Position the dishwasher on a level, stable surface near a water supply, drain, and electrical outlet. Ensure adequate space for opening the door and loading dishes. The appliance dimensions are 59.8 cm (Depth) x 60 cm (Width) x 84.5 cm (Height).



Figure 2.1: Dishwasher dimensions for proper placement and installation planning.

2.3 Water Connection

Connect the inlet pipe to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure the outlet pipe is securely connected to a drain. The dishwasher is designed for a water line and drain connector type.



Figure 2.2: Rear view of the dishwasher, indicating connection points for water inlet and drain hoses.

2.4 Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 240 Volts and has a wattage of 1930 Watts. Ensure the electrical supply meets these requirements.

2.5 Initial Use Preparation

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. This ensures optimal cleaning and drying performance, especially in areas with hard water. A Finish Start Kit is included with the product.

3. OPERATING INSTRUCTIONS

This section details how to operate your Midea dishwasher for effective cleaning.


3.1 Loading Dishes

Load dishes according to the 13-place setting capacity. Ensure dishes are arranged to allow water spray to reach all

surfaces. Utilize the adjustable racks and cutlery tray for efficient loading of various items, including heavier utensils like kadhai.



Figure 3.1: Interior view demonstrating proper loading of dishes and the adjustable rack system.

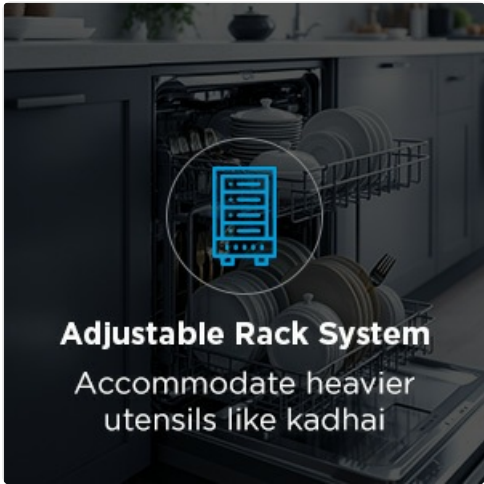

Adjustable Rack System
Accommodate heavier
utensils like kadhai

Figure 3.2: Detail of the adjustable rack system, allowing accommodation of various utensil sizes.

3.2 Adding Detergent and Rinse Aid

Add the appropriate amount of dishwasher detergent to the dispenser. Check the rinse aid indicator and refill as needed to ensure streak-free drying.

3.3 Selecting a Wash Program

The dishwasher offers seven wash programs. Use the control buttons and digital display to select the desired program based on the soil level and type of dishes.



**Smart Power
Off Memory**



**13 Place
Settings**



Adjustable Racks



Child Lock



Water Softner

Figure 3.3: The control panel, digital display, and program selection buttons.



Figure 3.4: Overview of the 7 convenient wash programs for various cleaning needs.

- **Intensive:** For heavily soiled dishes, pots, and pans. Utilizes 70°C wash for sanitization.
- **ECO:** Energy and water-efficient program for normally soiled dishes.
- **Glass:** Gentle wash for delicate glassware.
- **90-min:** For lightly soiled dishes requiring a quicker wash.
- **Rapid:** Short cycle for very lightly soiled dishes without drying.
- **Self-Clean:** Program for cleaning the dishwasher itself.
- **Pre-Wash:** For rinsing dishes that will be washed later.

3.4 Special Functions

- **Half-Load:** Activate this function when washing a smaller load to save water and energy.
- **Extra Dry:** Enhances drying performance, especially for plastic items.
- **Delay Timer:** Set a delayed start time for the wash cycle, up to 24 hours.
- **Child Lock:** Prevents accidental operation by children. Refer to the control panel for activation instructions.



Figure 3.5: Visual representation of key features including water leak protection, adjustable racks, half load flexibility, and child lock protection.

3.5 Power-Off Memory

The dishwasher is equipped with a power-off memory function. In case of a power interruption, the machine will automatically resume the wash cycle from where it stopped once power is restored.



Figure 3.6: Illustration of the Power-Off Memory feature, ensuring cycle continuity after power cuts.

4. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficient operation of your dishwasher.

4.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent food particles from clogging the spray arms and affecting wash performance. Refer to the user manual for detailed instructions on how to remove and clean the filters.

4.2 Cleaning the Spray Arms

Check the spray arm nozzles for blockages and clean them if necessary. This ensures proper water distribution during the wash cycle.

4.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, use a dishwasher cleaner periodically or run a self-clean cycle to remove grease and limescale buildup.

4.4 Salt and Rinse Aid Refill

Monitor the salt and rinse aid indicators on the control panel and refill as needed. Using dishwasher salt helps prevent limescale buildup, especially in hard water areas, and rinse aid improves drying and prevents spots.

5. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your dishwasher. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse/circuit breaker.
Dishes are not clean	Improper loading; Insufficient detergent; Clogged spray arms or filters; Incorrect program selected.	Reload dishes correctly; Add more detergent; Clean spray arms and filters; Select a more intensive wash program.
Dishes are not dry	Insufficient rinse aid; Program without drying cycle selected; Dishes loaded improperly.	Refill rinse aid dispenser; Select a program with a drying cycle or use Extra Dry function; Ensure dishes are not nesting.
Unusual noise during operation	Dishes rattling against each other; Foreign object in pump area; Motor issue.	Rearrange dishes; Check and remove any foreign objects; Contact service if noise persists.
Water not draining	Clogged drain hose or filter; Drain pump malfunction.	Clean the filter system; Check drain hose for kinks or blockages; Contact service if issue persists.

6. PRODUCT SPECIFICATIONS

Specification	Detail
Model Number	WQP12-5201F
Brand	Midea
Type	Freestanding Dishwasher
Place Settings	13
Color	Silver
Material (Exterior)	Stainless Steel

Specification	Detail
Material (Inner Tub)	Plastic
Dimensions (L x W x H)	59.8 cm x 60 cm x 84.5 cm
Item Weight	39 kg
Noise Level	52 dB
Voltage	240 Volts
Wattage	1930 Watts
Energy Efficiency	A++
Annual Energy Consumption	262 Kilowatt Hours Per Year
Water Consumption (per cycle)	Approx. 11 Liters
Wash Programs	7 (Intensive, ECO, Glass, 90-min, Rapid, Self-Clean, Pre-Wash)
Special Features	Childproof Lock, Half Load, Extra Dry, Power-Off Memory, Adjustable Racks
Included Components	1 Dishwasher, Inlet Pipe, Outlet Pipe, Salt Filter, User Manual, Finish Start Kit



7 Wash Programs



Digital Display



Control Buttons



Figure 6.1: Key performance indicators and warranty information.

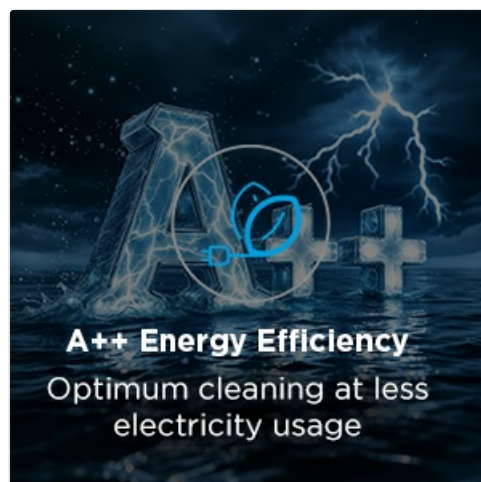 


Figure 6.2: The A++ Energy Efficiency rating, indicating optimized electricity usage.

7. WARRANTY AND SUPPORT

Your Midea WQP12-5201F Dishwasher comes with a comprehensive warranty and dedicated customer support.

7.1 Warranty Information

The product is covered by a **2-year comprehensive warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable operation under normal use conditions.

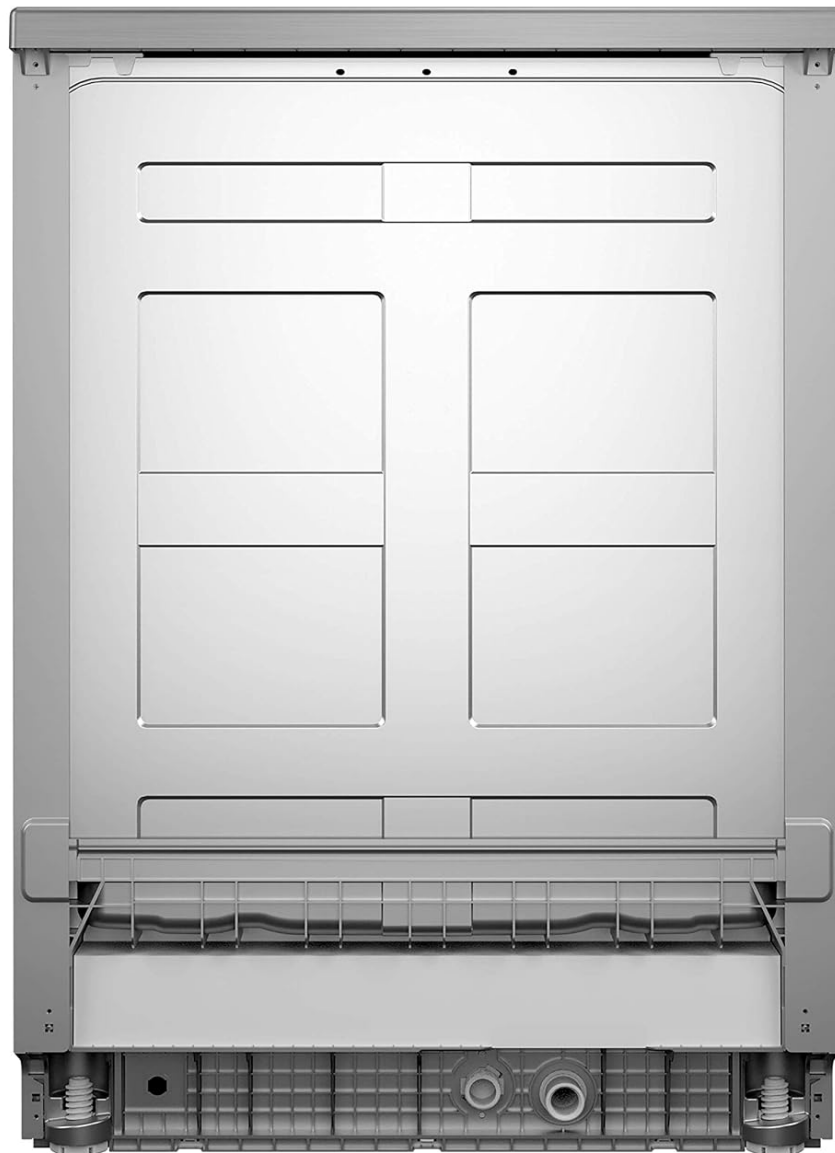 


Figure 7.1: The 2-year comprehensive warranty badge.

7.2 Customer Support

For any queries, technical assistance, or service requests, please contact Midea customer support:

- **Toll-Free Number:** 18005725533 (India)
- **Email:** mideacare@midea.co.in

Please have your model number (WQP12-5201F) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question