

[Manuals.plus](#) /

> [Decathlon](#) /

> oxelo MID5 Kick Scooter Instruction Manual

## Decathlon 8520770

# oxelo MID5 Kick Scooter Instruction Manual

Brand: Decathlon | Model: 8520770

## 1. INTRODUCTION

---

The oxelo MID5 Kick Scooter is engineered for children between 6 and 9 years old, with a recommended height range of 110-150 cm. It is designed for both daily use and recreational activities, providing a comfortable and easy-to-handle riding experience. Key features include a hand brake for effective speed control and a front suspension system to absorb road vibrations, ensuring a smoother and more enjoyable ride.



*Image: General view of the Oxelo MID5 Kick Scooter, showcasing its design and features.*

## 2. SAFETY INFORMATION

---

Prioritize safety by adhering to the following guidelines:

- **Pre-Ride Inspection:** Before and after each use, thoroughly inspect the kick scooter. Check for any abnormal looseness in components, cracks in the frame or deck, and excessive wear on wheels or bearings. Ensure all fasteners are secure.
- **Protective Gear:** Always wear appropriate protective gear when riding. This includes a helmet, elbow pads, and knee pads to minimize the risk of injury from falls.
- **Consumable Parts:** Be aware that wheels and bearings are wear-and-tear items. Regularly check their condition and replace them when signs of significant wear or damage appear.
- **Weight Limit:** Do not exceed the maximum load capacity of 100 kg.
- **Supervision:** Young riders should always be supervised by an adult.

## 3. SETUP

---

The oxelo MID5 Kick Scooter is designed for quick and easy setup. It comes largely pre-assembled.

Follow these steps to prepare your scooter for use:

1. **Unfolding the Scooter:** Locate the folding mechanism near the base of the handlebar stem. Release the latch and carefully unfold the scooter until it locks securely into the upright position.
2. **Adjusting the Handlebar Height:** The handlebar is adjustable to accommodate different rider heights. Loosen the quick-release clamp on the handlebar stem, adjust the handlebar to a comfortable height (between 110-150cm for the rider), and then securely tighten the clamp.
3. **Handlebar Grips:** Ensure the handlebar grips are firmly in place and not rotating freely.
4. **Pre-Ride Check:** Before the first ride, perform the safety inspection outlined in Section 2.



*Image: The scooter in its folded state, demonstrating its compact design for storage and transport.*

## 4. OPERATING INSTRUCTIONS

---

Riding the oxelo MID5 Kick Scooter is intuitive. Follow these instructions for safe and effective operation:

- **Starting:** Place one foot firmly on the scooter deck. Use your other foot to push off the ground, gaining momentum. Once moving, place both feet on the deck, one behind the other.
- **Steering:** Steer by gently leaning in the desired direction and turning the handlebars.
- **Braking:** The scooter is equipped with both a hand brake and a rear foot brake. Use the hand brake on the handlebar for primary speed control and stopping. For additional stopping power or in emergencies, press down on the rear fender with your foot to engage the foot brake. Practice braking at low speeds to get accustomed to its feel.
- **Suspension:** The front suspension system is designed to absorb shocks and vibrations from uneven surfaces, providing a smoother ride.
- **Kickstand:** When not in use, deploy the kickstand to keep the scooter upright.



*Image: Handlebar and Hand Brake*



*Image: Front Suspension*

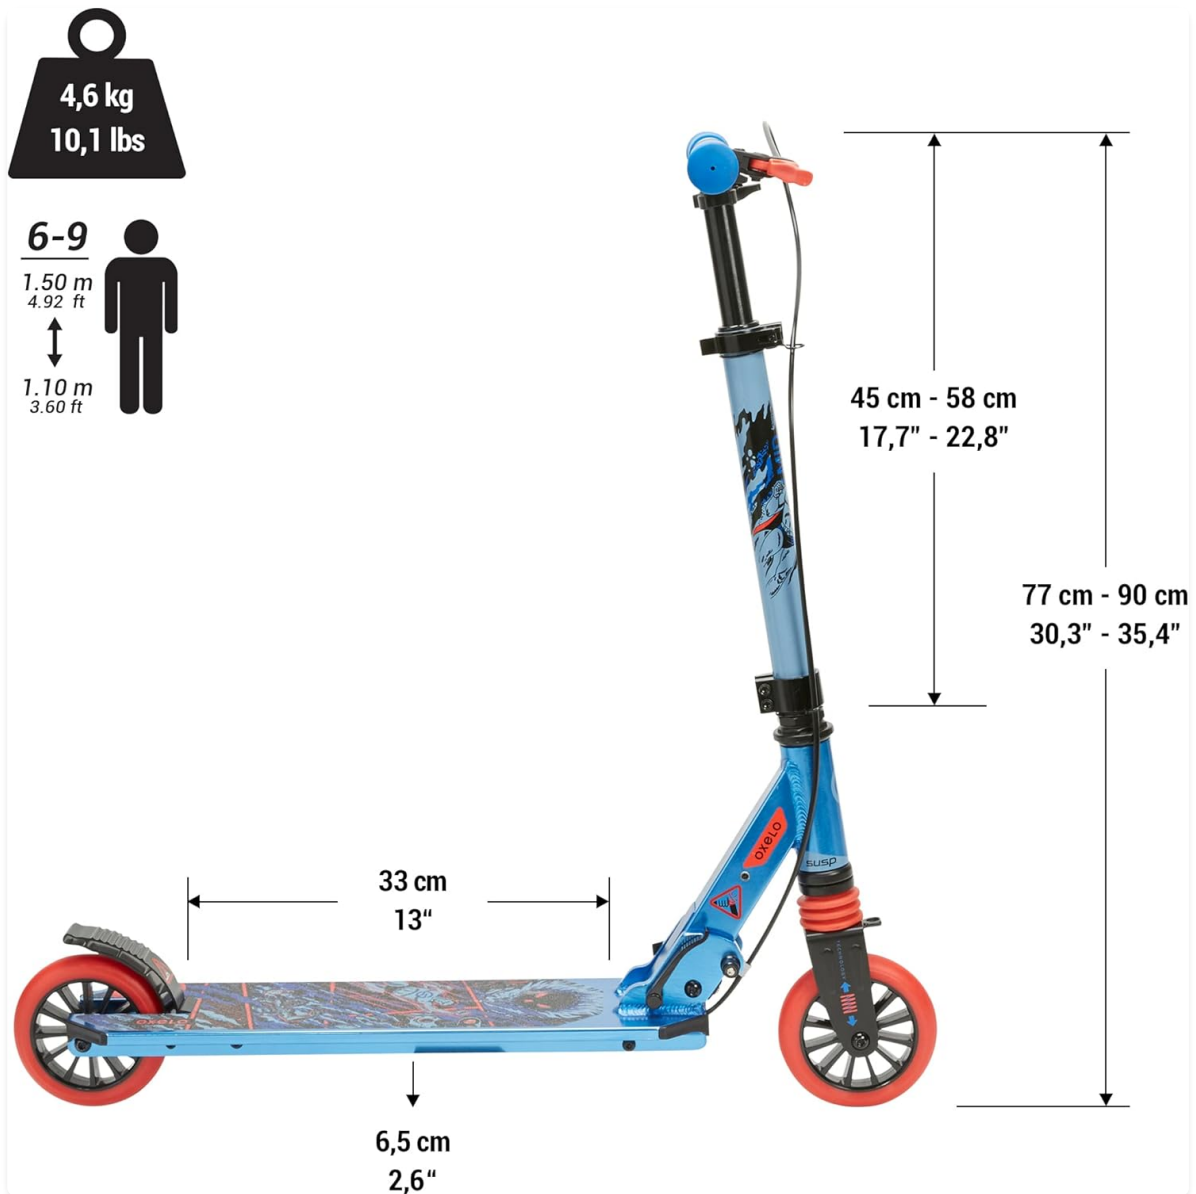


Image: Kickstand

## 5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your oxelo MID5 Kick Scooter:

- **Cleaning:** Wipe down the scooter with a damp cloth after use to remove dirt and debris. Avoid using harsh chemicals that could damage the finish or components.
- **Wheel and Bearing Inspection:** As mentioned in safety, wheels and bearings are consumables. Regularly check them for wear, cracks, or any signs of damage. Replace them promptly if necessary to maintain smooth operation and safety.
- **Fastener Check:** Periodically check all screws, bolts, and quick-release mechanisms to ensure they are tight and secure. Loose parts can affect performance and safety.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

## 6. TROUBLESHOOTING

If you encounter any issues with your oxelo MID5 Kick Scooter, consider the following common problems and solutions:

- **Squeaking Noises:** Check for loose components or dirt in the wheel bearings. Lubricate moving parts if necessary.
- **Difficulty Steering:** Ensure the handlebar is securely tightened and not loose. Check for any obstructions in the steering column.
- **Brake Ineffectiveness:** Inspect the brake pads for wear and ensure the brake cable (for hand brake) is properly tensioned. Adjust or replace as needed.
- **Unstable Ride:** Verify that all wheels are properly attached and not wobbly. Check the folding mechanism for secure locking.

If problems persist after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Decathlon
Model Number	8520770
Color	Purple/Fluorescent Pastel Peach/White
Target Age	Youth (6-9 years old, 110-150cm height)
Features	Foldable, Front Suspension
Weight Limit	100 kg
Item Weight	4 kg
Number of Wheels	2
Handlebar Type	Adjustable
Brake Style	Front Brake (Hand), Rear Brake (Foot)
Wheel Material	Polyurethane
Included Components	Main unit only
GTIN	03583788063285
ASIN	B08WTM6JX3



*Image: Detailed size guide with measurements for the scooter.*

## 8. WARRANTY AND SUPPORT

The oxelo MID5 Kick Scooter comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear of consumable parts like wheels and bearings.

For warranty claims, technical support, or any questions regarding your scooter, please contact Decathlon customer service. Keep your proof of purchase for warranty validation.