

[Manuals.plus](#) /

› [Hyper Tough](#) /

› Hyper Tough TN50064J Staple Gun User Manual

Hyper Tough TN50064J

Hyper Tough TN50064J Staple Gun User Manual

Model: TN50064J

1. PRODUCT OVERVIEW

The Hyper Tough TN50064J is a manual staple gun designed for various fastening tasks. Its robust construction ensures durability and reliable performance for both home and office use. This manual provides detailed instructions for safe operation, maintenance, and troubleshooting.



Image of the Hyper Tough TN50064J manual staple gun, showing its chrome finish and ergonomic handle. The "HYPER TOUGH" logo is visible on the side.

2. SAFETY INSTRUCTIONS

Always follow these safety guidelines to prevent injury and ensure proper operation of your staple gun:

- **Eye Protection:** Always wear safety glasses or goggles when operating the staple gun. Staples can ricochet.
- **Hand Placement:** Keep hands and fingers away from the staple exit area.
- **Target Surface:** Ensure the material being stapled is stable and secure. Do not staple into hard surfaces that may cause staples to bounce back.
- **Children and Pets:** Keep the staple gun out of reach of children and pets.
- **Unloading:** Unload staples when the tool is not in use or before performing any maintenance.
- **Proper Staples:** Use only the type and size of staples recommended for this model.
- **Inspection:** Before each use, inspect the staple gun for any damage or loose parts. Do not use if damaged.

3. SETUP

3.1 Loading Staples

1. Ensure the staple gun is unloaded and the handle is in the open position.
2. Locate the staple loading mechanism, typically at the bottom or rear of the tool.
3. Pull out the staple pusher rod or open the staple tray.
4. Insert a strip of compatible staples into the channel, ensuring they are facing the correct direction (points down).
5. Push the staple pusher rod back into place or close the staple tray until it locks securely.
6. Test fire the staple gun on a scrap piece of material to ensure proper loading and function.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Hold the staple gun firmly with one hand, ensuring a secure grip on the handle.
2. Place the nose of the staple gun flat against the surface where the staple is to be driven. Ensure the tool is perpendicular to the surface for best results.
3. Apply firm, even pressure downwards on the handle to depress the spring mechanism and drive the staple.
4. Release the handle to allow it to return to its original position, ready for the next staple.

4.2 Stapling Techniques

- For consistent stapling, maintain consistent pressure and angle.
- When stapling thin materials, consider placing a scrap piece of wood underneath to prevent staples from bending or going through completely.
- For delicate surfaces, test on an inconspicuous area first.

5. MAINTENANCE

5.1 Cleaning

- Regularly wipe down the exterior of the staple gun with a clean, dry cloth to remove dust and debris.
- Ensure no staples or foreign objects are lodged in the firing mechanism.

5.2 Storage

- Store the staple gun in a dry place, away from moisture and extreme temperatures.
- Always unload staples before storing the tool for extended periods.
- Consider using the handle lock (if available) to keep the handle compressed for compact storage and to prevent accidental firing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Staples not firing	No staples loaded; staples jammed; incorrect staple size.	Load staples; clear jam (ensure tool is unloaded first); use correct staple size.
Staples bending or not fully penetrating	Insufficient pressure; incorrect staple size for material; material too hard.	Apply more firm pressure; use shorter staples; consider pre-drilling for very hard materials.
Staples jamming frequently	Damaged staples; debris in mechanism; worn parts.	Use new, undamaged staples; clean mechanism; if problem persists, tool may need replacement.

7. SPECIFICATIONS

Brand:	Hyper Tough
Model Number:	TN50064J
Operating Mode:	Manual
Capacity	
Description:	Full Strip
UPC:	632286261075

8. WARRANTY AND SUPPORT

Specific warranty information for the Hyper Tough TN50064J Staple Gun is not provided in this manual. Please refer to the product packaging or the manufacturer's official website for details regarding warranty coverage and customer support.

For further assistance or inquiries, please contact Hyper Tough customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question