

AGARO AGARO ICON 1600W Bagless Dry Vacuum Cleaner

AGARO ICON 1600W Bagless Dry Vacuum Cleaner

Model: 33424

1. INTRODUCTION

Thank you for choosing the AGARO ICON 1600W Bagless Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the power supply voltage matches the rating on the vacuum cleaner.
- Do not use the vacuum cleaner to pick up water or wet materials. This appliance is designed for dry use only.
- Do not vacuum flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the vacuum cleaner from the power outlet before cleaning or performing any maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT COMPONENTS AND PACKAGE CONTENTS

The following items are included in your package:

- AGARO ICON 1600W Vacuum Cleaner Main Unit
- Flexible Hose Pipe
- Extension Tube
- Floor Brush (for hard floors and carpets)
- Multi-purpose Brush
- Crevice Nozzle



Figure 1: Labeled diagram of the AGARO ICON 1600W Bagless Dry Vacuum Cleaner components.

4. SETUP INSTRUCTIONS

1. **Attach the Hose:** Insert the flexible hose pipe into the suction inlet on the main vacuum cleaner unit until it clicks securely into place.
2. **Assemble the Extension Tube:** Connect the extension tube to the handle end of the flexible hose. Ensure it is firmly attached.
3. **Attach the Desired Accessory:** Select the appropriate cleaning accessory (Floor Brush, Multi-purpose Brush, or Crevice Nozzle) and attach it to the end of the extension tube.
4. **Connect to Power:** Extend the power cord and plug it into a suitable electrical outlet.

Powerful Cleaning

1600W

Efficient Motor

24kPa

Suction Power



Figure 2: The vacuum cleaner assembled and ready for use.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the Power Button located on the main unit to turn the vacuum cleaner on or off.

5.2 Adjusting Suction Power

The vacuum cleaner features a variable suction control dial. Rotate the dial to increase or decrease the suction power according to your cleaning needs. Turn towards 'MIN' for delicate surfaces and 'MAX' for heavy-duty cleaning.

Control Suction Power



Figure 3: Variable suction control dial.

5.3 Using Accessories

- **Floor Brush:** Ideal for cleaning both hard floors and carpets. Adjust the brush setting if applicable for optimal performance on different surfaces.
- **Multi-purpose Brush:** Suitable for cleaning upholstery, curtains, and other delicate surfaces.
- **Crevice Nozzle:** Designed for reaching tight corners, crevices, and narrow spaces.

Accessories & Applications



Figure 4: Various accessories and their recommended uses.

5.4 Power Cord Management

The vacuum cleaner is equipped with a 5-meter long power cord and an auto cord winder. To retract the cord, gently pull the cord slightly and then release it, or press the Power Cord Retraction Button if available on your model.

5m Long Power Cord

with Auto Cord Winder



Figure 5: The 5-meter long power cord provides extensive reach.

6. MAINTENANCE

6.1 Emptying the Dust Bin

The 1.5-liter bagless dust bin should be emptied regularly, especially when the 'MAX' fill line is reached, to maintain optimal suction power. To empty:

1. Ensure the vacuum cleaner is unplugged.
2. Press the dust bin release button and carefully lift the dust bin from the main unit.
3. Position the dust bin over a waste receptacle.
4. Open the bottom flap of the dust bin and shake out the collected debris.
5. Close the flap and reattach the dust bin to the vacuum cleaner until it clicks securely.

Quick **Waste** Disposal

Removable **1.5L Dust** Collecting Container



Figure 6: Emptying the 1.5L removable dust bin.

6.2 Cleaning the HEPA Filter

The HEPA filter traps fine dust and allergens. Regular cleaning is crucial for maintaining suction and air quality. It is recommended to clean the filter every 3-6 months, or more frequently with heavy use.

1. Unplug the vacuum cleaner.
2. Remove the dust bin as described above.
3. Locate and remove the HEPA filter from the dust bin assembly.
4. Tap the filter gently over a waste bin to dislodge loose dust. Do not wash the HEPA filter with water unless explicitly stated in the product documentation.
5. If the filter is washable, rinse it under cold running water until the water runs clear. Allow it to air dry completely for at least 24 hours before reinserting. Do not use a dryer or heat to dry.
6. Reinsert the dry HEPA filter and reattach the dust bin.

Dual HEPA Filters

Captures **99.99% Dust &**
Allergens Down to **0.2 Microns**



Figure 7: Dual HEPA filter system.

6.3 General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure all parts are dry before storage or next use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on	No power supply; Power cord not plugged in; Power button not pressed.	Check power outlet; Ensure cord is securely plugged in; Press the power button firmly.

Problem	Possible Cause	Solution
Loss of suction power	Dust bin full; Filter clogged; Hose or attachment blocked.	Empty dust bin; Clean or replace HEPA filter; Check hose and attachments for blockages and remove them.
Unusual noise or motor heating	Blockage in hose/attachments; Overheating due to prolonged use; Filter clogged.	Check for and remove any blockages; Allow the unit to cool down for 30 minutes; Clean the HEPA filter. If the issue persists, contact customer support.
Dust escaping from unit	Dust bin not properly closed; Filter not correctly installed or damaged.	Ensure dust bin is securely latched; Check filter for proper installation and damage. Replace if damaged.

8. SPECIFICATIONS

Brand	AGARO
Model Name	Icon
Model Number	33424
Wattage	1600 Watts
Suction Power	Up to 24 kPa
Dust Bin Capacity	1.5 Liters (Bagless)
Filter Type	HEPA Filter
Power Source	Corded Electric
Voltage	240 Volts
Cable Length	5 Metres
Hose Length	1828.8 Millimetres (approx. 6 feet)
Item Weight	4800 Grams (4.8 kg)
Dimensions (L x W x H)	129L x 27W x 50H Centimeters
Noise Level	78 Decibels
Country of Origin	China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The AGARO ICON 1600W Bagless Dry Vacuum Cleaner comes with a standard 1-year warranty from the date of purchase. An additional 6 months extended warranty may be available upon product registration or specific purchase conditions. Please retain your purchase receipt as proof of warranty.

9.2 Customer Support

For any product-related queries, service requests, or technical assistance, please contact AGARO customer support:

- **Toll-free Number:** 1800-120-7897
- **Manufacturer/Importer:** Universal Corporation Limited, 4/1 Middleton Street, Sikkim Commerce House, Kolkata - 700071

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question