

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux Pure D8.2 PD82-4MG Silent Vacuum Cleaner User Manual

Electrolux PD82-4MG

Electrolux Pure D8.2 Silent Vacuum Cleaner

Model: PD82-4MG

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Electrolux Pure D8.2 PD82-4MG silent vacuum cleaner. Please read these instructions carefully before using the appliance and keep them for future reference.



SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Do not leave the vacuum cleaner unattended when plugged in.
- Unplug from the outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.

PRODUCT COMPONENTS AND ACCESSORIES

Your Electrolux Pure D8.2 PD82-4MG comes with several components designed for efficient cleaning.



Image: The Electrolux Pure D8.2 vacuum cleaner with its main body, hose, telescopic tube, OneGo Power Clean nozzle, ParkettoPro nozzle, 3-in-1 tool, and S-bags.

Included Accessories:

- **OneGo Power Clean Nozzle:** Designed for superior pickup of both large and small particles on all floor types.
- **ParkettoPro Nozzle:** Features soft bristles and no wheels, ideal for delicate hard surfaces.
- **3-in-1 Tool:** A versatile attachment for various surfaces and tight spots, easily switches between brush, crevice, and upholstery tools.
- **S-bag® Classic Long Performance:** Dust bags with a hygienic closing system to prevent dust contact during disposal. Two bags are included.



Image: Close-up of the 3-in-1 tool, showing its various configurations for different cleaning tasks.

SETUP

Follow these steps to assemble your vacuum cleaner before first use.

1. **Attach the Hose:** Insert the hose into the inlet on the main unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the hose handle. Adjust the length of the tube to a comfortable height.
3. **Attach the Nozzle:** Connect your desired cleaning nozzle (OneGo Power Clean or ParkettoPro) to the end of the telescopic tube.
4. **Check Dust Bag:** Ensure an S-bag is correctly inserted into the dust bag compartment. The bag replacement alert LED will indicate if the bag is full or missing.
5. **Plug In:** Extend the power cord and plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Your Electrolux Pure D8.2 is designed for efficient and quiet cleaning.

Power On/Off and Suction Control:

- **Power Button:** Press the main power button on the unit or the handle to turn the vacuum cleaner on or off.
- **Rotary Knob:** Use the rotary knob on the main unit to manually adjust suction power for different surfaces (Min to Max).
- **Smart Mode:** Activate the SmartMode feature for automatic suction power adjustment. This technology senses the floor type and optimizes suction between hard floors and carpets.



Clean SMARTer on any surface

Picks up particles of any size, and automatically adjusts power settings as you move between surfaces

Image: Close-up of the control panel on the Electrolux Pure D8.2, showing the power knob and SmartMode indicator.

Cleaning Different Surfaces:

- **Hard Floors:** Use the OneGo Power Clean nozzle or the ParkettoPro nozzle for hard floors. The SmartMode will adjust suction as needed.
- **Carpets:** The OneGo Power Clean nozzle is effective on carpets. Engage SmartMode for automatic power adjustment.
- **Above Floor Cleaning:** Utilize the 3-in-1 tool for upholstery, crevices, and dusting.



Image: The vacuum cleaner's nozzle demonstrating SmartMode technology, which intelligently adjusts suction for various floor types.

Maneuverability and Carrying:

- The vacuum cleaner features rubber-coated XL wheels for smooth movement across different floor types.
- A centrally located, balanced carrying handle allows for easy lifting and transport between rooms.



Easily grab and go

The centrally located handle ensures perfect weight balance for easier lifting and carrying

Image: A person lifting the Electrolux Pure D8.2 using its ergonomic, centrally located carrying handle.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Dust Bag Replacement:

- The LED indicator on the control panel will illuminate when the S-bag is full and needs replacement.
- To replace, open the dust bag compartment. The S-bag's hygienic closing system will seal automatically upon removal, preventing dust escape.
- Insert a new S-bag, ensuring it is correctly seated.



Easier, hygienic bag changes

The 3.5 L S-bag® captures and seals away dust for more hygienic bag changes without dust contact

Image: A close-up of the S-bag Classic Long Performance, highlighting its hygienic design for easy and clean replacement.

Filter Maintenance:

The Electrolux Pure D8.2 uses a HEPA filter. Refer to the full product manual for specific instructions on cleaning or replacing the HEPA filter. Regular filter maintenance is crucial for maintaining suction power and air quality.

Nozzle and Hose Cleaning:

- Periodically check nozzles for blockages or tangled hair/fibers. Remove any obstructions.
- Ensure the hose is free from blockages to maintain optimal airflow.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Not plugged in; power outlet fault; main power switch off.	Check plug connection; test outlet with another appliance; ensure power switch is on.
Low suction power	Full dust bag; clogged filter; blocked hose/nozzle.	Replace dust bag; clean/replace filter; remove blockages from hose/nozzle.
Unusual noise	Blockage in hose/nozzle; motor issue.	Check for and remove blockages. If noise persists, contact customer support.
Dust escaping	Dust bag not correctly installed; filter not correctly installed or damaged.	Reinstall dust bag correctly; check and reinstall/replace filters.

If the problem persists after attempting these solutions, please contact Electrolux customer support.

SPECIFICATIONS

Key technical specifications for the Electrolux Pure D8.2 PD82-4MG vacuum cleaner.

- **Model Number:** PD82-4MG
- **Color:** Grey
- **Product Dimensions:** 44.2 x 30 x 24.6 cm
- **Item Weight:** 7.19 kg
- **Capacity:** 3.5 Liters (S-bag)
- **Power/Voltage:** 600 watts / 230 Volts
- **Material:** Plastic (55% recycled)
- **Operating Radius:** 12 Meters
- **Sound Level:** 57 Decibels (dB(A))
- **Special Features:** Automatic power regulation (SmartMode), OneGo Power Clean nozzle, Parketto Pro nozzle, 3-in-1 tool, S-bag hygienic closing system.
- **Filter Type:** HEPA filter
- **Power Source:** Corded Electric



Motor effect



Action radius



Image: Visual representation of the 600W motor effect and 12-meter action radius of the Electrolux Pure D8.2.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Electrolux website or contact your local Electrolux service center. Keep your purchase receipt as proof of purchase for warranty claims.

Online Resources: www.electrolux.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08WY4RHFG>

More documents and user manuals: <https://manuals.plus/>