

Philips CSA210/91

Philips CSA210/91 Senseo Original+ Coffee Machine User Manual

Model: CSA210/91

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Philips CSA210/91 Senseo Original+ Coffee Machine. Please read these instructions carefully before first use and retain them for future reference.

Safety Information

- Ensure the appliance is connected to a grounded power outlet.
- Do not immerse the machine in water or any other liquid.
- Keep out of reach of children.
- Unplug the appliance before cleaning and when not in use.
- Do not operate the appliance if the cord or plug is damaged.

2. PRODUCT OVERVIEW

The Philips CSA210/91 Senseo Original+ is a pod coffee machine designed for convenient brewing of one or two cups of coffee. It features an intensity slider for personalized coffee strength and an automatic shut-off function for energy efficiency.



This image shows the Philips CSA210/91 Senseo Original+ coffee machine in red, actively brewing two cups of coffee simultaneously. The machine features a sleek design with a red body and black accents. Two glass cups are placed on the drip tray, collecting freshly brewed coffee with a visible crema layer. The control panel with power and brewing buttons is visible at the front.

Key Features:

- **Dual Cup Brewing:** Prepare one or two cups of coffee simultaneously.
- **Intensity Slider:** Adjust coffee strength between classic and intense.
- **Crema Plus Function:** Ensures a fine and smooth crema layer on your coffee.
- **Eco-Friendly Design:** Constructed from recycled plastics and includes an automatic shut-off function.
- **Modern Aesthetics:** Features a metal cup rest and matte finishes.

3. SETUP

First Use:

1. **Unpack:** Remove all packaging materials and stickers from the appliance.

2. **Rinse Water Tank:** Rinse the water tank thoroughly with fresh water.
3. **Fill Water Tank:** Fill the water tank with fresh, cold tap water up to the MAX indication.
4. **Place Pod Holder:** Insert the 1-cup pod holder (for one cup) or 2-cup pod holder (for two cups) into the machine without a coffee pod.
5. **Close Lid:** Close the lid and ensure it is securely locked.
6. **Position Cup:** Place a cup or bowl under the coffee spout.
7. **Power On:** Plug the appliance into a grounded wall socket. The ON/OFF button will light up.
8. **Rinse Cycle:** Press the 1-cup button to start a rinsing cycle. Repeat this process until the water tank is empty. This cleans the internal system.
9. **Ready for Use:** Your Senseo machine is now ready to brew coffee.

4. OPERATING INSTRUCTIONS

Brewing Coffee:

1. **Fill Water Tank:** Ensure the water tank is filled with fresh, cold water.
2. **Power On:** Press the ON/OFF button. The button will light up, indicating the machine is heating up. It will stop flashing when ready.
3. **Insert Pod Holder:** Open the lid and place the appropriate pod holder (1-cup or 2-cup) into the machine.
4. **Place Coffee Pod(s):** Insert one or two Senseo coffee pods into the pod holder(s). Ensure the pod is centered.
5. **Close Lid:** Close the lid securely.
6. **Select Intensity:** Use the intensity slider to choose your desired coffee strength: **Classic** for a regular brew or **Intense** for a stronger coffee.
7. **Position Cup(s):** Place one or two cups under the coffee spout.
8. **Start Brewing:** Press the 1-cup button for a single cup or the 2-cup button for two cups. The machine will start brewing.
9. **Enjoy:** Your coffee is ready when the brewing process stops automatically.

5. MAINTENANCE

Cleaning:

- **Daily Cleaning:** After each use, remove and rinse the pod holder, coffee spout, and drip tray with warm water.
- **Wipe Exterior:** Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaning agents.
- **Water Tank:** Clean the water tank regularly with warm water and a mild detergent. Rinse thoroughly.
- **Dishwasher Safe Parts:** The pod holders, coffee spout, and drip tray are dishwasher safe.

Descaling:

Regular descaling is crucial to maintain optimal performance and extend the lifespan of your coffee machine. The descaling frequency depends on water hardness and usage.

1. **Prepare Descaling Solution:** Use a Senseo-approved descaling agent. Follow the instructions on the descaling agent packaging for mixing with water.
2. **Fill Water Tank:** Pour the descaling solution into the water tank.

3. **Insert Pod Holder:** Place a used coffee pod (or a special descaling filter if provided) into the 1-cup pod holder and insert it into the machine.
4. **Start Descaling Cycle:** Place a large bowl under the coffee spout. Press both the 1-cup and 2-cup buttons simultaneously until the descaling indicator lights up (if available) or as per descaling agent instructions.
5. **Rinse Cycles:** After the descaling cycle, rinse the machine thoroughly by running several cycles with fresh water until the water tank is empty.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outage.	Check power connection; verify power supply.
Coffee is not brewing.	Water tank empty; lid not closed properly; machine not heated up.	Fill water tank; ensure lid is locked; wait for ON/OFF button to stop flashing.
Coffee tastes weak or too strong.	Incorrect intensity setting; incorrect pod type.	Adjust intensity slider; ensure correct Senseo pods are used.
Water leaks from the machine.	Water tank not properly seated; lid not closed correctly.	Re-seat water tank; ensure lid is securely locked.
Coffee flow is slow.	Machine needs descaling; coffee spout clogged.	Perform descaling procedure; clean coffee spout.

7. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	CSA210/91
Color	Red
Product Dimensions (L x W x H)	39.8 x 37.4 x 22.6 cm
Item Weight	1.72 Kilograms
Power	1450 Watts
Voltage	220 Volts
Material	Plastic
Automatic Shut-off Function	Yes
Special Feature	Crema Plus Function

Feature	Detail
Coffee Maker Type	Pod Coffee Machine
Country of Origin	Romania

8. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for warranty claims.

No official product videos were available in the provided product data.