

[Manuals.plus](#) /

> [Gemmy](#) /

> Gemmy Animated Christmas Airblown Inflatable Santa's Outhouse (Model G08-119298X) Instruction Manual

Gemmy G08-119298X

Gemmy Animated Christmas Airblown Inflatable Santa's Outhouse (Model G08-119298X)

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Gemmy Animated Christmas Airblown Inflatable Santa's Outhouse. This product is designed to provide a festive and animated decoration for your indoor or outdoor holiday display. Please read this manual thoroughly before setup and operation to ensure safe and proper use.

2. SAFETY INFORMATION

- **Keep Away From Fire:** This product is made of polyester and is flammable. Do not place near open flames or heat sources.
- Ensure all electrical connections are dry and protected from moisture.
- Do not operate in strong winds or severe weather conditions.
- Always unplug the inflatable when not in use or during maintenance.
- Keep children and pets away from the inflatable during inflation and deflation.

3. PACKAGE CONTENTS

Your Gemmy Animated Christmas Airblown Inflatable Santa's Outhouse package should include:

- 1 x Inflatable Santa's Outhouse Unit with integrated fan and lights
- Stakes for securing
- Tethers for securing

4. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable from its packaging.
2. **Placement:** Choose a flat, level surface for placement, free from sharp objects or debris that could puncture the material. Ensure there is enough space for the inflatable to fully expand (approximately 72 inches tall, 50

inches wide, 42 inches deep).

3. **Position:** Unfold the inflatable and position it where you want it to stand. Ensure the air intake on the fan is clear of obstructions.
4. **Secure:** Use the provided stakes to anchor the base of the inflatable to the ground. Attach the tethers to the designated loops on the inflatable and secure them to the ground with additional stakes, pulling taut to provide stability.
5. **Power On:** Plug the power cord into a standard electrical outlet. The inflatable will begin to self-inflate within seconds.
6. **Adjust:** Once fully inflated, adjust the position and tethers as needed to ensure it stands upright and stable.



An image of the fully inflated Gemmy Santa's Outhouse, showing Santa peeking out of the door, decorated with candy canes and colorful lights.

5. OPERATING INSTRUCTIONS

Once plugged in, the internal fan will inflate the unit, and the integrated lights will illuminate. The animated feature, where Santa opens the outhouse door, will operate automatically. No further action is required for continuous operation.

Your browser does not support the video tag.

Video demonstrating the Gemmy Animated Christmas Airblown Inflatable Santa's Outhouse in operation, showing Santa opening and closing the outhouse door.

6. STORAGE AND MAINTENANCE

- **Deflation:** To deflate, simply unplug the power cord. The inflatable will slowly deflate.
- **Cleaning:** Clean the surface with a damp cloth if necessary. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Ensure the inflatable is completely dry before folding and storing. Store in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	No power; fan obstructed; unit punctured.	Check power connection; clear fan intake; inspect for tears and repair if possible.
Santa's door does not open fully.	Obstruction; improper setup; low air pressure.	Ensure no objects are blocking the door mechanism; verify the inflatable is fully taut and stable; check for leaks.
Lights are not working.	Loose connection; bulb failure; fuse blown.	Check all electrical connections; replace bulbs if accessible and faulty; inspect and replace any blown fuses in the plug.
Inflatable falls over.	Insufficient anchoring; strong winds.	Ensure all stakes and tethers are securely fastened and taut; consider additional anchoring in windy conditions or deflate.

8. SPECIFICATIONS

- **Brand:** Gemmy
- **Model Number:** G08-119298X
- **Dimensions (L x W x H):** 72.05 x 50.39 x 42.13 inches (approximately 6 ft tall)
- **Weight:** 10 pounds
- **Material:** Polyester
- **Features:** Self-inflates, Lights up, Animated Santa door
- **Usage:** Indoor or Outdoor

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Gemmy customer

service directly. Keep your purchase receipt for warranty claims.

© 2023 Gemmy Industries. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08X1F3LLS>

More documents and user manuals: <https://manuals.plus/>