

Gemmy 119274

Gemmy Airdorable Disney Olaf Inflatable Instruction Manual

MODEL: 119274

Introduction

Thank you for choosing the Gemmy Airdorable Disney Olaf Inflatable. This 2-foot tall inflatable decoration is designed for indoor use, bringing a festive touch to your holiday season. It features a self-inflating mechanism and offers flexible power options for your convenience.

Safety Information

For indoor use only. Ensure proper ventilation when in use. Be cautious when handling during inflation and deflation to prevent injury. Keep away from heat sources and open flames. Do not attempt to modify the product or its components.

Package Contents

- 1 x Gemmy Airdorable Disney Olaf Inflatable
- 1 x External 4AA Battery Pack (batteries not included)
- 1 x USB Power Cord (USB wall adapter not included)

Setup

1. **Unpack the Inflatable:** Carefully remove the inflatable and all components from the packaging.
2. **Choose a Location:** Select a flat, clear indoor surface for placement. Ensure there are no obstructions that could hinder inflation or damage the material.
3. **Connect Power:** You have two options for powering your inflatable:
 - **Battery Pack:** Insert 4 AA batteries (not included) into the external battery pack. Connect the battery pack to the inflatable's power input.
 - **USB Power:** Connect the provided USB power cord to the inflatable's power input. Plug the other end into a compatible USB wall adapter (not included) or a powered USB port.

4. **Inflate:** Once powered, the inflatable will begin to self-inflate. Ensure the fan is not obstructed.
5. **Positioning:** Adjust the inflatable as it inflates to ensure Olaf is standing upright and fully formed.



Image: Packaging for the Gemmy Airdorable Disney Olaf Inflatable. The box shows a cartoon image of Olaf.

Operating

To operate the inflatable, simply ensure it is connected to a power source (either the battery pack with fresh batteries or a USB power adapter). The internal fan will automatically inflate the decoration. To turn off and deflate, disconnect the power source. The inflatable will slowly deflate for easy storage.

Maintenance

- **Cleaning:** To clean, wipe the surface with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** Deflate the inflatable completely. Fold it neatly and store it in its original packaging or a suitable storage container in a cool, dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Inflatable does not inflate or inflates slowly.	No power or low battery. Fan obstruction. Small tears or holes.	Check power connection. Replace batteries if using the battery pack. Ensure the fan intake is clear of debris. Inspect for damage and repair with a suitable patch kit if necessary.
Inflatable does not stand upright.	Not fully inflated. Improper positioning.	Ensure continuous power supply for full inflation. Adjust the base and body of the inflatable to achieve proper balance.

Specifications

Feature	Detail
Brand	Gemmy
Model Name	119274
Theme	Winter
Cartoon Character	Snowman (Olaf)
Color	White
Occasion	Christmas
Material	Polyester
Item Dimensions (L x W x H)	24.41 x 10.24 x 11.02 inches (approx. 2 ft tall)
Light Color	Bright White
Special Feature	Self Inflating
Item Weight	0.79 Pounds

Feature	Detail
UPC	191245192749

Warranty and Support

This product comes with a manufacturer's warranty. For specific details regarding warranty coverage or for technical support, please refer to the documentation included with your purchase or contact Gemmy customer service directly. Keep your proof of purchase for warranty claims.