

Antari Z-10

Antari Z-10 Wired Remote Control Instruction Manual

For Z-800II, Z-1000II, Z-1020, B-100X, B-200, HZ-350

1. INTRODUCTION

The Antari Z-10 is a wired remote control designed to provide convenient and reliable operation for compatible Antari fog and haze machines. This manual provides essential information for the safe and effective use of your Z-10 remote control.

2. SAFETY INFORMATION

- Read all instructions thoroughly before operating the device.
- Do not expose the remote control to moisture, rain, or liquids.
- Use the Z-10 only with the specified Antari fog and haze machines (Z-800II, Z-1000II, Z-1020, B-100X, B-200, HZ-350).
- Keep the remote control out of reach of children.
- Always disconnect power to the fog/haze machine before connecting or disconnecting the remote control, or performing any maintenance.
- Do not attempt to open or modify the remote control. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that your package contains the following item:

- Antari Z-10 Wired Remote Control

4. SETUP

1. Ensure your Antari fog or haze machine is powered off and unplugged from the main power supply.
2. Locate the remote control input port on your compatible Antari machine. This port is typically a multi-pin connector.
3. Carefully insert the connector of the Antari Z-10 wired remote control cable into the machine's remote input port. Ensure the connection is firm and secure.
4. Once connected, you may plug in and power on your Antari fog or haze machine.



Image of the Antari Z-10 wired remote control, showing its compact design and single control button.

5. OPERATING INSTRUCTIONS

After successfully connecting the Z-10 remote control to your Antari fog or haze machine and powering on the machine:

1. Allow the fog or haze machine to complete its warm-up cycle. The machine's indicator light will typically signal when it is ready for operation (refer to your machine's specific manual for details).
2. To activate fog or haze output, press and hold the button on the Antari Z-10 remote control.
3. To stop the output, release the button.
4. If the machine stops producing output during continuous use, it may be reheating. Wait for the machine to reach its operating temperature again before pressing the button.

6. MAINTENANCE

- Keep the remote control clean and dry. Use a soft, dry cloth to wipe its surface.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Store the remote control in a cool, dry place when not in use.
- Do not attempt to disassemble or repair the unit yourself. This will void any warranty and may cause

damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Loose or incorrect connection. Machine not powered or warmed up. Incompatible machine model.	Ensure the remote cable is securely connected to the machine. Verify the fog/haze machine is powered on and has completed its warm-up cycle. Confirm your machine model is listed as compatible.
Intermittent operation	Loose cable connection. Damaged cable.	Check all cable connections for tightness. Inspect the cable for any visible damage. If damaged, discontinue use and seek replacement.

8. SPECIFICATIONS

- **Model:** Z-10
- **Brand:** Antari
- **Connectivity Technology:** Wired
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Compatible Antari Machines:** Z-800II, Z-1000II, Z-1020, B-100X, B-200, HZ-350
- **Item Weight:** Approximately 2 pounds (0.91 kg)

9. WARRANTY AND SUPPORT

For detailed warranty information, technical support, or service inquiries regarding your Antari Z-10 wired remote control, please contact your authorized Antari dealer or visit the official Antari website. Please have your purchase receipt and product model number available when seeking support.