

[Manuals.plus](#) /

> [Skullcandy](#) /

> Skullcandy Dime True Wireless Earbuds (Model S2DMW-P750) Instruction Manual

Skullcandy S2DMW-P750

Skullcandy Dime True Wireless Earbuds Instruction Manual

Model: S2DMW-P750

INTRODUCTION

Thank you for choosing Skullcandy Dime True Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earbuds. Please read this manual carefully to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

- Skullcandy Dime True Wireless Earbuds
- Charging Case
- Micro USB Charging Cable
- Ear Gels (various sizes)
- User Manual

PRODUCT OVERVIEW

The Skullcandy Dime True Wireless Earbuds offer a compact design with essential features for on-the-go audio. They provide a secure, noise-isolating fit and are resistant to sweat and water.



Image: Skullcandy Dime True Wireless Earbuds in Dark Blue/Green, shown with their compact charging case.



Image: Diagram illustrating key features including 12 hours total battery, automatic connection, secure noise-isolating fit, and IPX4 water resistance. (Note: Earbuds shown in black variant).

SETUP

Charging Your Earbuds

Before first use, fully charge your Skullcandy Dime earbuds and charging case. The earbuds provide up to 3.5 hours of

listening time, and the charging case holds an additional 8.5 hours, totaling 12 hours of battery life.

- Place the earbuds into the charging case.
- Connect the micro USB charging cable to the charging case and a power source.
- The LED indicators on the case will show charging status.



Image: Diagram showing the battery distribution: 8.5 hours from the case and 3.5 hours from the earbuds, totaling 12 hours. (Note: Earbuds shown in black variant).

Pairing with Your Device

The Skullcandy Dime earbuds feature automatic connection for ease of use.

1. Remove both earbuds from the charging case. They will automatically enter pairing mode.
2. On your device (smartphone, tablet, computer), open Bluetooth settings.
3. Select "Skullcandy Dime" from the list of available devices.
4. Once connected, you will hear an audio prompt, and the earbuds are ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case.

OPERATING INSTRUCTIONS

The Skullcandy Dime earbuds feature physical buttons for control, offering tactile feedback.

Basic Controls

- **Play/Pause:** Press the button on either earbud once.
- **Next Track:** Press the button on the right earbud twice.
- **Previous Track:** Press the button on the left earbud twice.
- **Volume Up:** Press and hold the button on the right earbud.
- **Volume Down:** Press and hold the button on the left earbud.

Call Management

- **Answer/End Call:** Press the button on either earbud once.
- **Reject Call:** Press and hold the button on either earbud.

Activate Voice Assistant

- **Activate:** Press the button on either earbud three times.

MAINTENANCE

To ensure the longevity and optimal performance of your Skullcandy Dime earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IPX4 sweat and water resistant. This means they can withstand splashes and light rain, but they are not designed for submersion. Do not expose them to excessive moisture or liquids.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) as this can affect battery life and overall performance.

TROUBLESHOOTING

If you encounter issues with your Skullcandy Dime earbuds, try the following steps:

- **No Power:** Ensure both earbuds and the charging case are fully charged.
- **Pairing Issues:**
 - Turn off Bluetooth on your device, then turn it back on.
 - Forget "Skullcandy Dime" in your device's Bluetooth settings and attempt to pair again.
 - Place both earbuds back in the charging case, close the lid, wait a few seconds, then remove them to re-initiate pairing mode.
- **One Earbud Not Working:**
 - Ensure both earbuds are charged.
 - Try resetting the earbuds by placing them in the case, closing the lid, and then removing them.
- **Poor Sound Quality:**
 - Ensure the earbuds are properly seated in your ears for a secure, noise-isolating fit. Try different ear gel sizes.
 - Clean any debris from the earbud speakers.
 - Ensure your device's volume is not too low or too high, causing distortion.

If these steps do not resolve the issue, please refer to the Support section for further assistance.

SPECIFICATIONS

Brand	Skullcandy
Model Name	Dime True Wireless
Model Number	S2DMW-P750

Color	Dark Blue/Green (Gris frío)
Ear Placement	In-Ear
Impedance	32 Ohms
Bluetooth Version	5.0
Bluetooth Range	10 Meters
Total Battery Life	Up to 12 Hours (3.5 hours earbuds + 8.5 hours case)
Water Resistance	IPX4 (Sweat and Water Resistant)
Noise Control	Acoustic Isolation
Item Weight	32 Grams
Compatible Devices	Phones, tablets, desktop computers, laptops

WARRANTY INFORMATION

Skullcandy Dime True Wireless Earbuds come with a **3-year warranty** against manufacturing defects. Please retain your proof of purchase for warranty claims. For more details on warranty terms and conditions, visit the official Skullcandy support website.

SUPPORT

For additional support, frequently asked questions, or to contact customer service, please visit the official Skullcandy website or their Amazon store page:

- [Skullcandy Official Store on Amazon](#)
- Refer to the included user manual PDF for detailed diagrams and instructions.