

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PowerXL](#) /

› [PowerXL Air Fryer Steamer Combo 7 QT 10-in-1 XL User Manual](#)

PowerXL VES116

PowerXL Air Fryer Steamer Combo 7 QT User Manual

Model: VES116

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The PowerXL Air Fryer Steamer Combo is a versatile 10-in-1 appliance designed for air frying, steaming, baking, roasting, broiling, dough proofing, warming, and defrosting. It combines air crisp technology with commercial steaming capabilities for a wide range of cooking options.



Front view of the PowerXL Air Fryer Steamer Combo, showing the digital control panel and handle.



The PowerXL Air Fryer Steamer Combo placed on a kitchen counter, with a plate of cooked food next to it, demonstrating its use in a home environment.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials, stickers, and labels.
2. **Cleaning:** Wash the basket, rack, and any removable accessories in warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the appliance on a stable, level, heat-resistant surface, away from water sources and other heat-generating appliances. Ensure adequate air circulation around the unit.
4. **Pre-heating (Optional):** For first use, it is recommended to run the appliance empty for 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. A slight odor may be present, which is normal.

OPERATING INSTRUCTIONS

Control Panel Overview

The digital display features 10-in-1 one-touch cooking presets for various functions. Temperature control is available up to 400°F (200°C)

with an auto shut-off feature.



Close-up of the digital control panel showing temperature, time, and various cooking function icons like Steam, Air Fry, and Combo.

Cooking Functions

- **Air Fry:** For crisping foods with hot air. Use the 7-qt fry basket.
- **Steam:** For steaming vegetables, seafood, and other items.
- **Steam / Crisp Combo:** Combines steaming with air frying for tender interiors and crispy exteriors, ideal for baked goods like pretzels and bread.



The PowerXL Air Fryer Steamer Combo with freshly baked pretzels visible inside the cooking basket, demonstrating the Steam/Crisp Combo function.


- **Bake:** For baking various dishes.
- **Dough Proofing:** Provides an optimal environment for dough to rise.
- **Roast:** For roasting meats and vegetables.
- **Broil:** For broiling foods.
- **Reheat:** For warming up leftovers.
- **Defrost:** For thawing frozen items.

General Operation Steps

1. Place ingredients into the appropriate accessory (fry basket, rack).



A hand is shown pouring a mix of cooked vegetables, including broccoli, bell peppers, and onions, from the PowerXL Air Fryer Steamer's cooking basket, illustrating the ease of serving.

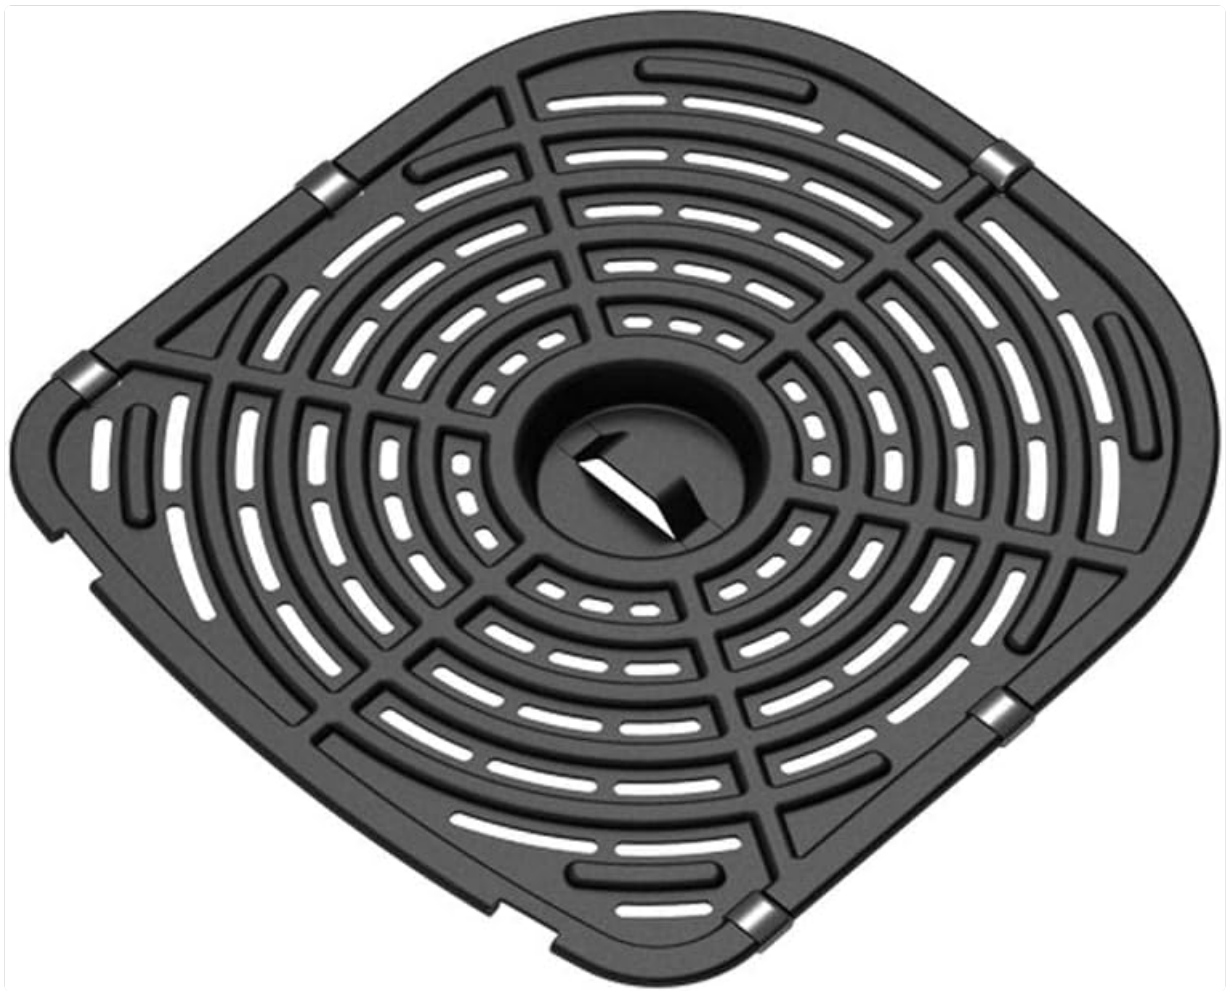

A close-up view of the PowerXL Air Fryer Steamer's rack accessory, designed for steaming or air frying, showing its grid pattern.

2. Insert the basket/rack into the main unit.
3. Plug the appliance into a power outlet.
4. Select the desired cooking function using the digital display.
5. Adjust time and temperature as needed.
6. Press the Start button to begin cooking.
7. The appliance will automatically shut off when the cooking cycle is complete.
8. Carefully remove cooked food.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your PowerXL Air Fryer Steamer Combo.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Dishwasher Safe Parts:** The 7-qt fry basket and steam/air fryer rack are dishwasher safe for easy cleanup.
3. **Main Unit Cleaning:** Wipe the exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Interior Cleaning:** For the interior, wipe with a damp cloth and mild detergent if necessary. Ensure no water enters the electrical components.
5. **Stubborn Residue:** For stubborn food residue, soak the basket and rack in warm, soapy water before cleaning. Do not use abrasive cleaning materials or metal scouring pads.
6. **Storage:** Store the appliance in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Appliance malfunction.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. Contact customer support if issue persists.
Food is not cooked evenly.	Basket overloaded; Temperature too low; Cooking time too short.	Do not overload the basket. Shake or flip food halfway through cooking. Increase temperature or cooking time as needed.
White smoke coming from appliance.	Grease residue from previous use; High fat content food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; Not enough oil; Basket overloaded.	Pat food dry before air frying. Lightly coat with oil. Cook in smaller batches.

SPECIFICATIONS

Model Number: VES116

Capacity: 7 Quarts

Power/Wattage: 1700 Watts

Material: Aluminum

Special Features: Temperature Control

Item Weight: 9.12 kg (approx. 20.1 lbs)

Parcel Dimensions: 46.35 cm x 43.81 cm x 43.18 cm (approx. 18.25 in x 17.25 in x 17 in)

Recommended Uses: Bake, Broil, Defrost, Reheat, Roast, Steam

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official PowerXL website. Warranty terms and conditions may vary.

Manufacturer: PowerXL

Date First Available: March 7, 2021

