



Manuals.plus /

› Maxblue /

› Maxblue RF-U8 Replacement Water Filter Instruction Manual

Maxblue RF U8

Maxblue RF-U8 Replacement Water Filter Instruction Manual

Model: RF U8

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Maxblue RF-U8 Replacement Water Filter. Designed for use with Maxblue U8-ST and U8-FC Under Sink Water Filtration Systems, this filter ensures access to purified water.

- **Carefully Selected Materials:** The Maxblue under sink water filter is free of harmful heavy metals, ensuring safe and clean drinking water.
- **Efficient Filtration:** Premium activated carbon block and PP cotton effectively reduce chlorine, odor, large particles, silt, rust, fluoride, heavy metals, and VOCs.
- **Ultra-High Capacity:** The filter's design provides extended protection for household filtration with a lifespan of up to 2 years.
- **Extensive Water Flow:** Provides a smooth and fast water flow with a stable rate of up to 1.3 gallons per minute.

SETUP AND INSTALLATION

The Maxblue RF-U8 filter is designed for effortless replacement within compatible Maxblue U8-ST and U8-FC systems. No need to turn off the main water valve during replacement, as the system automatically cuts off water supply.

Effortless Replacement

Quick Twist-off and Twist-in



Figure 1: Effortless twist-off and twist-in replacement process.

To install or replace the filter:

1. Ensure the system is compatible with Maxblue RF-U8 filters (compatible with MB-U8-ST/MB-U8-FC).
2. Locate the existing filter cartridge within your under-sink system.
3. Twist the old filter cartridge counter-clockwise to unlock and remove it. The system will automatically shut off water flow.
4. Remove any protective packaging from the new Maxblue RF-U8 filter.
5. Align the new filter with the system head and insert it.
6. Twist the new filter clockwise until it locks securely into place.
7. After installation, slowly turn on the water supply to the system (if it was manually turned off) and check for any leaks.
8. Flush the new filter by running water through the faucet for approximately 5-10 minutes to remove any carbon fines and air from the system.

Compatible with

MB-U8-ST/MB-U8-FC

MB-U8-ST



MB-U8-FC



Figure 2: Maxblue RF-U8 filter compatibility with MB-U8-ST and MB-U8-FC systems.

OPERATING INSTRUCTIONS

Once installed and flushed, your Maxblue RF-U8 filter operates automatically with your under-sink water filtration system. Simply turn on your dedicated filtered water faucet to dispense purified water.

- For optimal performance, ensure the water flow rate is consistent.
- If water flow significantly decreases, it may indicate that the filter is nearing the end of its lifespan and requires replacement.

MAINTENANCE AND FILTER REPLACEMENT

Regular replacement of your Maxblue RF-U8 filter is crucial to maintain water quality and system performance. The filter has an ultra-long lifespan of up to 2 years, depending on water quality and usage.





Figure 3: Maxblue RF-U8 filter with operating specifications.

Replacement Schedule:

- Replace the filter every 2 years or when the flow rate noticeably decreases.
- The replacement process is designed to be effortless, as detailed in the Setup and Installation section.

2x Filter Materials

 Chlorine	 Fluoride
 Bad taste	 Particles
 Bad odor	 Heavy metals
 Sediments	 more



*The test data is based on the experiment from third party.

Figure 4: Multi-stage filtration materials within the Maxblue RF-U8 filter.

High Catalytic Carbon Block

Better Than Better



Figure 5: Filtration performance comparison over time.

TROUBLESHOOTING

If you encounter issues with your Maxblue RF-U8 filter or filtration system, refer to the following common troubleshooting steps:

- **Reduced Water Flow:** This is often an indication that the filter is clogged and needs replacement. Ensure the filter is installed correctly and flush the system.
- **Leaks:** Check all connections to ensure they are tight. Verify that the O-rings on the filter are properly seated and not damaged.
- **Unusual Taste or Odor:** If you notice an unusual taste or odor in your filtered water, it may be time to replace the filter. Ensure the filter is properly flushed after installation.
- **No Water Flow:** Confirm that the main water supply to the system is turned on. Check if the filter is correctly installed and locked into place.

SPECIFICATIONS

Feature	Detail
Material	Activated Carbon, Cotton
External Testing Certification	NSF
Product Benefits	Removes impurities and harmful substances, enhances water taste, ensures long-lasting filtration, and simplifies replacement
Brand	Maxblue
Set Name	U8
Unit Count	1 Count
Number of Items	1
Item Model Number	RF U8
Item Weight	2.97 pounds
Package Dimensions	17.01 x 5.55 x 5.43 inches

WARRANTY INFORMATION

For detailed warranty information regarding your Maxblue RF-U8 Replacement Water Filter, please refer to the documentation included with your original Maxblue Under Sink Water Filtration System or contact Maxblue customer support directly. The product is noted to have an EU Spare Part Availability Duration of 2 Years.

CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact Maxblue customer support. Visit the official Maxblue website or refer to your product packaging for contact details.