

[Manuals.plus](#) /

› [ZenStyle](#) /

› ZenStyle Wood Console Table Instruction Manual

ZenStyle 0744

ZenStyle Wood Console Table Instruction Manual

Brand: ZenStyle

Model: 0744

INTRODUCTION

Thank you for choosing the ZenStyle Wood Console Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: ZenStyle Wood Console Table (Cappuccino/Dark Brown)

IMPORTANT SAFETY INFORMATION

WARNING: This product requires assembly. Always follow the included instructions for safe assembly. Do not exceed the maximum weight limit of 66 pounds per shelf to prevent tip-over. Secure the table to the wall using the included hardware to prevent tip-over. Keep the table away from heat sources and do not place heavy objects on the top shelf to prevent tip-over.

- Ensure all parts are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws, as this may damage the material.
- Keep small parts away from children during assembly.
- Regularly check all connections and tighten as necessary.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are included in your package:

- Top Panel (1)
- Middle Shelf (1)
- Bottom Panel (1)
- Curved Side Legs (2)
- Assembly Hardware (screws, dowels, Allen key)
- Assembly Guide (this manual)
- Anti-tilt hardware (wall anchor strap)

ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. Please follow these steps carefully. An Allen key is provided for your convenience.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Identify each part according to the included parts list in your assembly guide.
2. **Attach Curved Legs to Bottom Panel:** Secure the two curved side legs to the bottom panel using the provided screws and dowels. Ensure the curved sides face inward as shown in the diagram.
3. **Attach Middle Shelf:** Connect the middle shelf to the curved side legs. Align the pre-drilled holes and secure with screws.
4. **Attach Top Panel:** Place the top panel onto the assembled structure, aligning it with the top of the curved legs. Secure firmly with the remaining screws.
5. **Install Anti-Tilt Hardware:** For safety, attach the anti-tilt strap to the back of the console table and secure it to a wall stud using appropriate wall anchors (not always included, but recommended for stability). This is crucial to prevent accidental tip-over, especially in households with children or pets.
6. **Final Check:** Ensure all screws are tightened and the table is stable. Do not overtighten.



Figure 2: Key features including 3-tier storage and anti-tilt mechanism.

Assembly Video Guide



Video 1: Official ZenStyle guide demonstrating the assembly and features of the console table.

OPERATING INSTRUCTIONS

The ZenStyle Wood Console Table is designed for versatile use in various living spaces. Its three-tier design offers ample space for display and storage.

- **Top Surface:** Ideal for decorative items such as vases, photo frames, lamps, or small plants.
- **Middle Shelf:** Provides additional space for books, small decorative objects, or media devices.
- **Bottom Shelf:** Suitable for larger items like storage baskets, magazines, or additional decor.

This table can function as a console table, sofa table, tea table, entryway/hallway table, or even a compact TV stand. Its

modern design complements various home decors.



Figure 3: The console table used in a living room, showcasing its functional design.

MAINTENANCE

To ensure the longevity and appearance of your ZenStyle Wood Console Table, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the table surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood finish.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or warping of the wood.
- **Heat Protection:** Use coasters or protective pads under hot items to prevent heat damage to the surface.



Figure 4: Easy to clean surface of the console table.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table wobbles after assembly.	Screws are not fully tightened or uneven floor surface.	Ensure all screws are securely tightened. If the floor is uneven, place shims under the legs to stabilize.
Damage to parts upon arrival (e.g., chipped finish, misaligned holes).	Manufacturing defect or shipping damage.	Do not attempt to force assembly. Contact ZenStyle customer service immediately for replacement parts or assistance.
Table feels unstable or prone to tipping.	Anti-tilt hardware not installed or improperly secured. Exceeding weight limits.	Ensure the anti-tilt hardware is correctly installed and anchored to a wall stud. Do not exceed the maximum weight capacity of 66 pounds per shelf. Distribute weight evenly.

SPECIFICATIONS

Feature	Detail
Brand	ZenStyle
Model Name	Sofa Tables
Model Number	0744
Product Dimensions (D x W x H)	47.3"D x 11.4"W x 32.1"H
Color	Brown (Cappuccino)
Material Type	Engineered Wood (MDF)
Maximum Weight Recommendation (per shelf)	66 Pounds
Number of Shelves	3

Feature	Detail
Item Weight	31.3 Pounds
Assembly Required	Yes (Recommended 1 person)
Product Care Instructions	Wipe with Damp Cloth

WARRANTY AND CUSTOMER SUPPORT

ZenStyle is committed to providing high-quality products and excellent customer service. If you encounter any issues with your ZenStyle Wood Console Table, including missing parts, damaged components, or assembly difficulties, please contact our customer service team directly.

Your satisfaction is our first priority. We are dedicated to resolving any product-related concerns you may have. For support, please refer to the contact information provided with your purchase or visit the official ZenStyle website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question