

Indesit XWE 81283X S EU

Indesit XWE 81283X S EU Washing Machine User Manual

Model: XWE 81283X S EU | Brand: Indesit

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your new Indesit XWE 81283X S EU washing machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

IMPORTANT SAFETY INFORMATION

- Ensure the appliance is properly installed and grounded by a qualified technician before use.
- Do not allow children to play with or operate the washing machine.
- Never force the door open during a cycle. Wait until the cycle is complete and the door lock disengages.
- Do not wash items that have been cleaned in, washed with, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance from the power supply before performing any cleaning or maintenance.
- Keep packaging materials out of reach of children.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Indesit washing machine.



Figure 1: Front view of the Indesit XWE 81283X S EU washing machine. This image shows the front of the silver Indesit XWE 81283X S EU washing machine. Visible features include the control panel at the top, the detergent dispenser drawer on the left, the central program selector knob, and the digital display on the right. The large circular door for the front-load drum is prominent in the center.

Control Panel Features:

- **Detergent Dispenser Drawer:** For adding detergent and fabric softener.
- **Program Selector Knob:** To choose the desired wash program.
- **Function Buttons:** For additional options like temperature, spin speed, or special features.
- **Digital Display:** Shows program duration, error codes, and selected options.

- **Start/Pause Button:** To begin or temporarily stop a wash cycle.

SETUP AND INSTALLATION

1. Unpacking

- Remove all packaging materials, including the polystyrene base and any inserts from the drum.
- Remove the transport bolts from the rear of the machine. These bolts secure the drum during transit and must be removed before operation to prevent damage. Keep them for future transport.

2. Positioning

- Place the washing machine on a flat, stable surface.
- Adjust the leveling feet to ensure the machine is perfectly balanced. Use a spirit level to verify.

3. Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or secure it over the edge of a sink, ensuring it is not kinked or submerged in water.

4. Electrical Connection

- Plug the appliance into a grounded electrical outlet (220-240V, 50Hz).
- Do not use extension cords or multiple adapters.

OPERATING INSTRUCTIONS

1. Loading Laundry

- Open the washing machine door.
- Load laundry into the drum, ensuring not to overload. The maximum capacity is 8 kg.
- Close the door firmly until it clicks shut.

2. Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the recommended amount of detergent to the main wash compartment.
- If using fabric softener, add it to the designated compartment, ensuring it does not exceed the MAX level.
- Close the dispenser drawer gently.

3. Selecting a Program

- Turn the Program Selector Knob to choose the desired wash program (refer to the "Programs" section for details).
- Adjust temperature and spin speed using the corresponding function buttons if needed.
- For quick and easy operation, use the **Push & Wash** function for cotton and synthetic garments. Simply

press and hold the Push & Wash button for 2 seconds to start a daily cycle without manual program selection.

4. Starting the Wash Cycle

- Press the Start/Pause button to begin the cycle. The indicator light will illuminate.
- The digital display will show the remaining time.

5. End of Cycle

- At the end of the cycle, the display will indicate "End" or similar, and the door lock will disengage.
- Open the door and remove your laundry.
- Leave the door slightly ajar to allow the drum to air dry and prevent odors.

WASH PROGRAMS

Your Indesit washing machine offers 16 programs designed for various fabric types and soil levels. Below are some of the key programs:

- **Push & Wash:** A convenient program for daily mixed loads (cotton and synthetics), activated by a single button press.
- **Eco Cycle:** Optimized for energy and water efficiency.
- **Anti Stain:** Designed to effectively remove common stains.
- **Antiodor:** Helps eliminate unpleasant odors from garments.
- **Auto Clean:** A self-cleaning cycle for the machine drum.
- **Dark:** Specifically for dark-colored garments to help preserve their color.
- **Delicates:** Gentle wash for fragile items.
- **Duvet:** Suitable for washing duvets and other large, bulky items.
- **Refresh 9':** A quick refresh cycle for lightly soiled items.
- **Sport Light:** For lightly soiled sportswear.
- **Golden Woolmark:** A program for wool garments, ensuring gentle care.
- Additional standard cycles include Cotton, Synthetics, Rinse, Spin, and Drain.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

1. Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water to remove detergent residue.
- Clean the housing of the dispenser drawer with a brush.
- Reinsert the drawer.

2. Cleaning the Door Seal

- Wipe the rubber door seal after each wash to remove lint and moisture, preventing mold and odors.

3. Cleaning the Filter

- Periodically clean the drain pump filter, usually located at the bottom front of the machine. Refer to the diagram in your full product manual for exact location and procedure.
- Place a shallow container beneath the filter to catch any residual water.
- Unscrew the filter, clean it of lint and debris, and then screw it back in securely.

4. External Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer service, try these solutions for common issues:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, Start/Pause button not pressed.	Check power connection, ensure door is latched, select a program, press Start/Pause.
Water not filling	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check household water supply.
Water not draining	Drain hose kinked or blocked, drain pump filter clogged.	Straighten drain hose, clean drain pump filter.
Excessive vibration/noise	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry in the drum.
Detergent residue in dispenser	Insufficient water pressure, clogged dispenser.	Check water pressure, clean detergent dispenser.

TECHNICAL SPECIFICATIONS

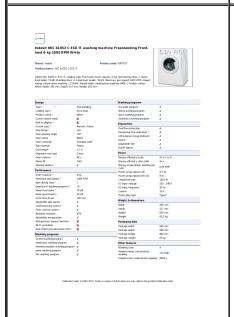
Brand	Indesit
Model	XWE 81283X S EU
Capacity	8 Kilograms
Max Spin Speed	1200 RPM
Energy Class	A+++
Washing Noise Level	52 dBA
Spin Noise Level	80 dBA

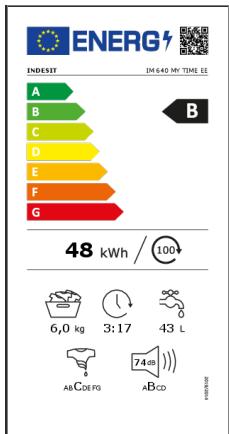
Number of Programs	16
Installation Type	Freestanding
Access Location	Front Load
Control Console	Push Button
Dimensions (H x W x D)	85 x 59.5 x 60.5 cm
Item Weight	55 Kilograms
Material	Metal
Supply Voltage	220-240V
Supply Frequency	50 Hz
Absorbed Power	1850 W

WARRANTY AND CUSTOMER SUPPORT

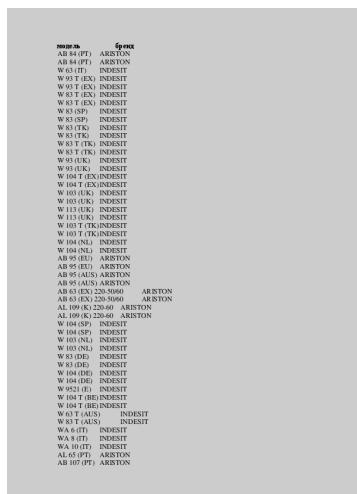
For information regarding your product's warranty, please refer to the warranty card included with your purchase or visit the official Indesit website. For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support in your region. Ensure you have your model number (XWE 81283X S EU) and serial number ready when contacting support.

Related Documents

	<p>Indesit XWE 91483 Washing Machine: Instructions for Use Comprehensive user manual for the Indesit XWE 91483 washing machine, covering installation, operation, care, maintenance, troubleshooting, and technical specifications.</p>
	<p>Indesit IWC 61052 C ECO IT Washing Machine Specifications Detailed specifications for the Indesit IWC 61052 C ECO IT freestanding front-load washing machine, featuring 6 kg capacity, 1000 RPM spin speed, and energy-efficient operation.</p>

	<p>Indesit IM 640 MY TIME EE Washing Machine Energy Label</p> <p>Detailed energy efficiency information for the Indesit IM 640 MY TIME EE washing machine, including energy consumption, capacity, noise levels, and program duration.</p>
	<p>Indesit Washing Machine Instructions for Use</p> <p>Comprehensive guide for Indesit washing machines, covering installation, operation, maintenance, and troubleshooting. Learn about various wash cycles, options, and detergent usage for optimal performance.</p>

Documents - Indesit – XWE 81283X S EU



[pdf]

Aleksander модель пром ст EWE 81484 B EU INDESIT 71083 W 71252 EWD TH 71483

FBWG71485BSE BE Whirlpool amortizator indesit c00309597 модели storage ua 1101713 |||

AB 84 PT ARISTON AB 84 PT ARISTON W 63 IT INDESIT W 93 T EX INDESIT W 93 T EX INDE ... IWS 61082 C ECO EU INDESIT XWE 81283X WWGG PL INDESIT NWS 6105 INDESIT XWE 71252 W PL INDESIT **XWE 81283X S EU INDESIT XWE 91483X S EU INDESIT IWB 61451 C ECO EU INDESIT IWD 61451 C ECO EU IND...**

lang:i-klingon **score:17** filesize: 328.68 K page_count: 69 document date: 2018-03-19

[pdf]

Aleksander модель Завод бренд WISL 102 CSI Lipetsk Washing INDESIT EWE 81484 B EU Radomsko Z1083 W TH Z1483 modeli mashin storage ua prom st 1116322 III

WISL 102 CSI IWME 8 EU ARSL 108 IT WIUN 81 CSI WIUN 102 CSI WISN 82 CSI
WISN 82 CSI A ... NWS 7105 L B NSL 705 L S AQ94F 29D EU ADS9D 297 AUS
NWS 7105 L UZ XWE 71252 W PL AQ92F 297 EX.60HZ **XWE 81283X S EU XWE**
91483X S EU WITL 1251 EU IWB 61451 C ECO EU IWD 61451 C ECO EU AQ92D
497X EX AQD...

lang:tl score:14 filesize: 1.33 M page_count: 73 document date: 2018-04-14