

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ATA](#) /

› [ATA 58 Inch 4K Ultra HD Smart TV A124 User Manual](#)

## ATA A124

# ATA 58 Inch 4K Ultra HD Android Smart TV A124 User Manual

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using your ATA Smart TV. Keep this manual for future reference.

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Use only the power cord supplied with the TV.
- Unplug the TV during lightning storms or when unused for long periods.
- Do not open the TV casing. Refer all servicing to qualified personnel.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- ATA 58 Inch 4K Ultra HD Smart TV (Model A124)
- TV Stand (2 pieces)
- Remote Control
- Power Cord
- User Manual (this document)
- Screws for Stand Assembly



Image 2.1: Front view of the ATA 58 Inch 4K Ultra HD Smart TV A124.

## 3. SETUP

### 3.1 Attaching the Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stand pieces using the provided screws. Ensure they are tightened firmly.
4. Carefully lift the TV and place it on a stable, level surface.



Image 3.1: Side view of the TV with the stand attached.

### 3.2 Wall Mounting (Optional)

If you choose to wall mount your TV, please ensure you use a VESA-compatible wall mount kit (not included) that supports the TV's weight and size. Follow the instructions provided with your wall mount kit. It is recommended to seek professional installation for wall mounting.

### 3.3 Connecting Peripherals

Your ATA Smart TV offers various connectivity options:

- **HDMI Ports (2):** Connect Blu-ray players, gaming consoles, or set-top boxes.
- **USB 2.0 Ports (2):** Connect USB flash drives for media playback or external devices.
- **VGA Video In:** Connect a computer or laptop.
- **RJ45 (LAN) Port:** Connect an Ethernet cable for wired internet access.
- **Antenna/Cable Input:** Connect an antenna or cable for broadcast TV.



Image 4.1: The ATA Smart TV remote control.

- **Power Button:** Turns the TV on or off.
- **Number Buttons:** Select channels directly.
- **Volume Up/Down:** Adjust the sound level.
- **Channel Up/Down:** Change channels sequentially.
- **Input/Source:** Select input source (HDMI, AV, USB, etc.).
- **Navigation Buttons (Up/Down/Left/Right) & OK:** Navigate menus and confirm selections.
- **Back/Exit:** Return to the previous screen or exit a menu.
- **Home:** Access the Smart TV home screen.

## 4.2 Basic Functions

To perform basic operations:

- **Turning On/Off:** Press the **Power** button.
- **Changing Channels:** Use the **CH+/-** buttons or number buttons.
- **Adjusting Volume:** Use the **VOL+/-** buttons.
- **Selecting Input:** Press the **Input/Source** button and navigate to your desired source.

## 4.3 Smart TV Features

Your ATA Smart TV runs on Android 9 Pie, providing access to a variety of smart features and applications:

- **Home Screen:** Access pre-installed apps, settings, and connected devices from the customizable home screen.
- **App Store:** Download and install additional applications from the integrated app store.
- **Streaming Services:** Enjoy popular streaming platforms such as Netflix, YouTube, and Amazon Instant Video.
- **Web Browser:** Browse the internet directly on your TV.

## 4.4 Connecting to Wi-Fi

1. Press the **Home** button on your remote.
2. Navigate to **Settings**.
3. Select **Network & Internet**.
4. Turn on **Wi-Fi**.
5. Select your desired Wi-Fi network from the list.
6. Enter the network password if prompted and select **Connect**.

# 5. MAINTENANCE

## 5.1 Cleaning the Screen

To clean the TV screen:

- Turn off the TV and unplug it from the power outlet.
- Gently wipe the screen with a soft, dry, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (ensure it's safe for

LED screens) and wipe gently. Do not spray liquid directly onto the screen.

## 5.2 General Care

- Keep the TV away from direct sunlight, heat sources, and excessive dust.
- Ensure adequate airflow around the TV to prevent overheating.
- Avoid placing heavy objects on top of the TV.

## 6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	Check if the power cord is securely connected to the TV and the power outlet. Ensure the outlet is working.
No Picture, but Sound is Present	Check the input source. Ensure the connected device is powered on and functioning correctly.
No Sound, but Picture is Present	Check the volume level. Ensure mute is not activated. Check audio cables for external devices.
Remote Control Not Working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the password carefully. Try restarting the TV and router.

## 7. SPECIFICATIONS

Key technical specifications for the ATA 58 Inch 4K Ultra HD Smart TV A124:



- **Model:** A124
- **Screen Size:** 58 Inches
- **Resolution:** 3840 x 2160 (4K Ultra HD)
- **Display Technology:** LED
- **Operating System:** Android 9 Pie
- **Aspect Ratio:** 16:9
- **Connectivity:** 2 x HDMI, 2 x USB 2.0, VGA Video In, RJ45 (LAN), Wi-Fi
- **Supported Internet Services:** Amazon Instant Video, Netflix, YouTube
- **Manufacturer:** ATA
- **Approximate Package Dimensions:** 138 x 85 x 16 cm
- **Approximate Package Weight:** 20 kg


## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact ATA customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, visit the official ATA website or contact your retailer.


### Related Documents - A124

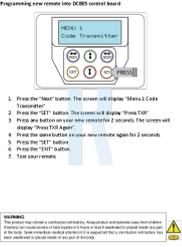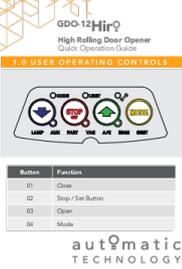	<p><a href="#">ATA BT81 Bluetooth Stereo Headset User Manual</a></p> <p>User manual for the ATA BT81 Bluetooth Stereo Headset by ATA, covering introduction, package contents, charging, appearance, operations, important information, LED guide, and warranty details.</p>
	<p><a href="#">ATA Gate Motor Instructions: Programming Remote to DCB05 Control Board</a></p> <p>Step-by-step guide for programming a new remote control into the ATA DCB05 gate motor control board. Includes instructions and safety warnings regarding coin-cell batteries.</p>
	<p><a href="#">ATA GDO-12Hir High Rolling Door Opener Quick Operation Guide</a></p> <p>Concise guide for the ATA GDO-12Hir High Rolling Door Opener, covering user controls, manual operation, remote coding, battery replacement, smartphone control, and troubleshooting. Learn how to operate and maintain your garage door opener.</p>
	<p><a href="#">ATA Remote Control Programming and Deletion Instructions</a></p> <p>A guide detailing how to program and delete ATA PTX-4 SecuraCode remote controls for garage and gate door motors, including step-by-step instructions for various programming methods.</p>

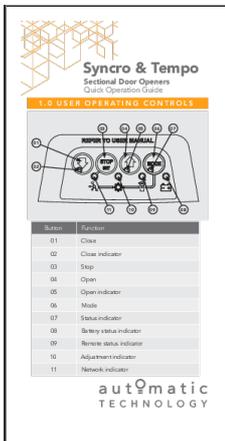

[Syncro & Tempo Sectional Door Openers Quick Operation Guide](#)

Quick operation guide for ATA Syncro & Tempo sectional door openers, covering user controls, manual operation, remote coding, battery replacement, smartphone control, and troubleshooting. Includes safety warnings and maintenance tips.

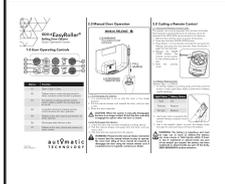

[GDO-6 EasyRoller Garage Door Opener Quick Operation Guide](#)

A concise guide for operating the ATA GDO-6 EasyRoller garage door opener, covering manual door operation, remote control coding and battery replacement, smartphone control setup, and common troubleshooting steps.