

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ariston](#) /

› [Ariston Cooker A9GG1FC \(X\)/EX.1 User Manual](#)

Ariston A9GG1FC (X)/EX.1

Ariston Cooker A9GG1FC (X)/EX.1 User Manual

Model: A9GG1FC (X)/EX.1

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and efficient use of your Ariston Cooker A9GG1FC (X)/EX.1. Please read it thoroughly before installation, operation, or maintenance. Keep this manual for future reference.

Important Safety Warnings:

- **Gas Safety:** Ensure proper ventilation. Do not store flammable materials near the appliance. In case of gas leak, turn off the main gas supply, open windows, and do not operate electrical switches.
- **Electrical Safety:** Ensure the appliance is properly earthed. Do not use adapters or extension cords. Disconnect from power before cleaning or maintenance.
- **Burn Hazard:** Surfaces become hot during use. Use oven mitts. Keep children and pets away.
- **Installation:** Installation must be performed by a qualified technician in accordance with local regulations.
- **Cleaning:** Always allow the appliance to cool before cleaning.
- **Supervision:** Never leave the appliance unattended during operation.

2. PRODUCT OVERVIEW

The Ariston Cooker A9GG1FC (X)/EX.1 is a 90x60 cm freestanding gas cooking range featuring a gas hob with 5 burners and a 119-liter gas oven. It is designed for efficient and versatile cooking.



Figure 2.1: Front view of the Ariston A9GG1FC (X)/EX.1 gas cooker. This image shows the full appliance with its glass lid open, revealing the five gas burners on the hob and the control panel above the oven door. The cooker has a stainless steel finish.

Key Features:

- 90x60 cm Full Gas Cooking Range
- 5 Gas Burners, including a Triple Ring burner for high heat cooking
- Cast Iron Pan Supports for stability and durability
- Automatic Ignition for easy burner lighting
- Hob & Oven Flame Failure Device for safety, automatically cutting off gas supply if the flame extinguishes
- Mirror Glass Oven Door
- Minute Minder for timing cooking tasks
- 119 Liter Gas Oven
- Grill Power 2500W
- Stainless Steel Material



Figure 2.2: Close-up view of the control panel and gas hob. This image highlights the control knobs for the burners and oven, along with the cast iron pan supports and the five gas burners.

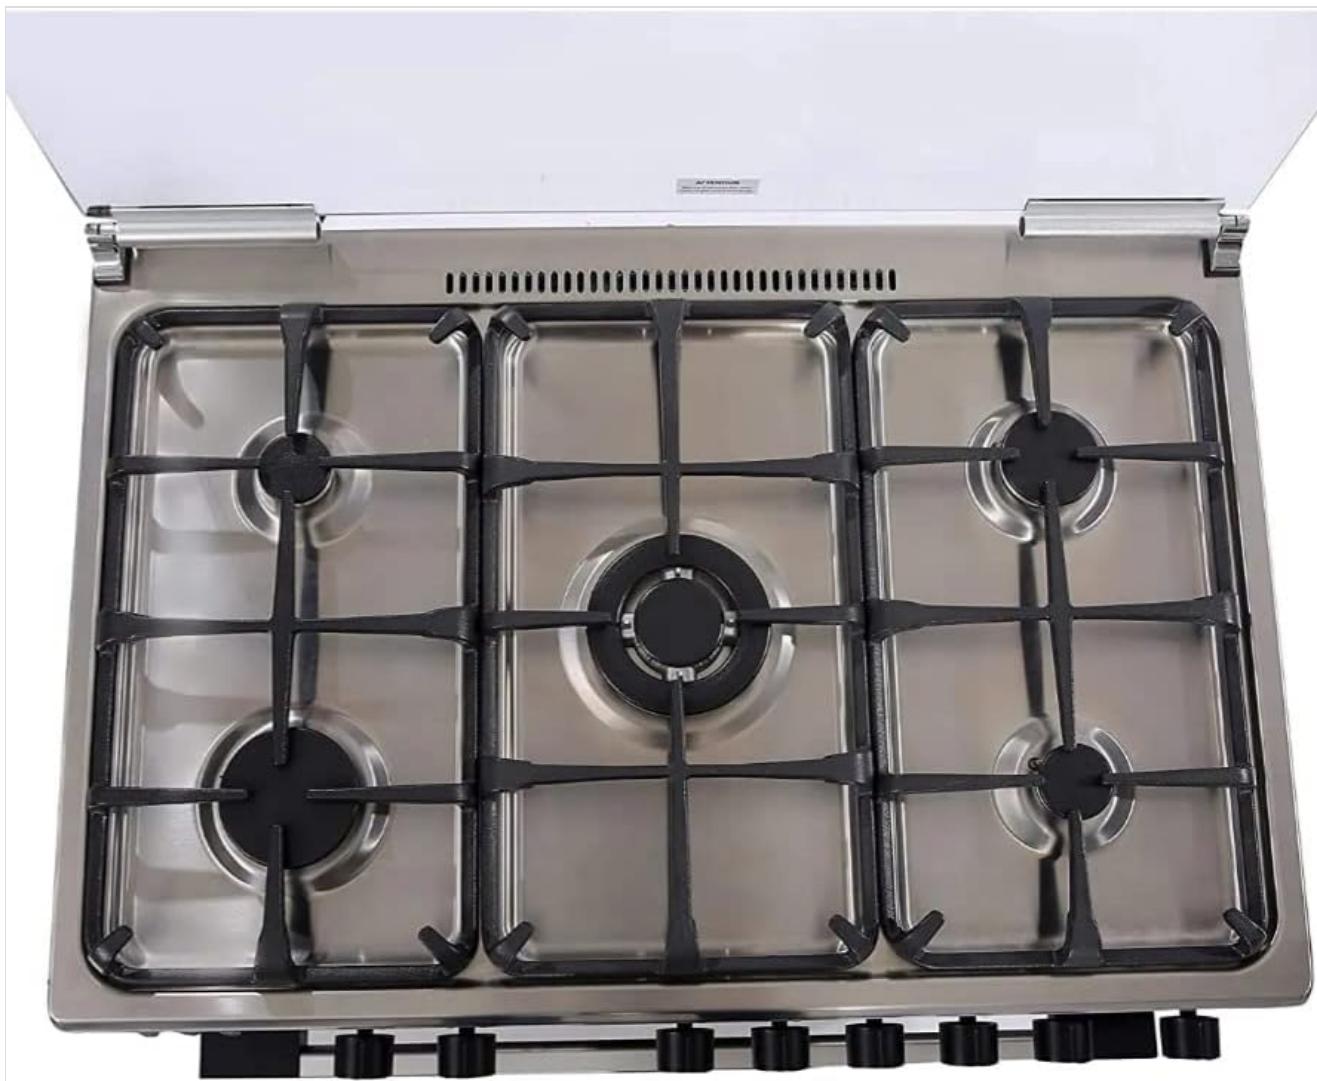


Figure 2.3: Top-down view of the gas hob. This perspective clearly shows the layout of the five gas burners and the robust cast iron pan supports, including the central triple-ring burner.

3. SETUP AND INSTALLATION

Installation of this appliance must be carried out by a qualified and authorized technician in accordance with all local regulations and safety standards. Incorrect installation can lead to serious injury or damage.

3.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the cooker for any damage incurred during transit. Report any damage to your retailer immediately.
- Keep packaging materials away from children.

3.2 Positioning and Leveling

- Place the cooker on a flat, stable surface.
- Adjust the leveling feet at the bottom of the cooker to ensure it is perfectly level. This is crucial for even cooking and stability.
- Ensure adequate clearance from adjacent walls and cabinets as specified in local building codes.

3.3 Gas Connection

The gas connection must be performed by a certified gas technician. Ensure the gas type (Natural Gas or LPG) matches the appliance's specifications. A flexible gas hose suitable for the gas type and pressure should be used, and all connections must be tested for leaks.

3.4 Electrical Connection

Connect the appliance to a properly earthed electrical outlet. The electrical supply must match the voltage and frequency specified on the appliance's rating plate. Do not use extension cords or multi-sockets.

4. OPERATING INSTRUCTIONS

4.1 Using the Gas Hob



Figure 4.1: Detail of the control knobs. This image shows the individual knobs used to control the gas burners and the oven functions, indicating their positions and markings.

- 1. Igniting a Burner:** Place a suitable pan on the cast iron support. Push and turn the corresponding control knob counter-clockwise to the maximum flame setting. The automatic ignition will spark.
- 2. Flame Failure Device:** Keep the knob pressed for a few seconds after the flame ignites. This allows the thermocouple to heat up and activate the flame failure safety device. Release the knob; if the flame goes out, repeat the process.
- 3. Adjusting Flame:** Once ignited, turn the knob to adjust the flame size. Turn clockwise for a smaller flame, counter-clockwise for a larger flame.
- 4. Turning Off:** Turn the knob clockwise until it clicks into the "off" position.
- 5. Triple Ring Burner:** Use for large pots and high-heat cooking. Ensure the pan covers the entire burner area for optimal efficiency.

4.2 Using the Gas Oven

- 1. Preheating:** Turn the oven control knob to the desired temperature. Allow the oven to preheat for approximately 10-15 minutes.
- 2. Igniting the Oven:** The oven also features automatic ignition and a flame failure device. Push and turn the oven control knob to the desired temperature, hold for a few seconds until the flame is stable.

- 3. Grill Function:** To use the grill, select the grill setting on the oven control knob. Ensure the oven door is slightly ajar during grilling to prevent overheating.
- 4. Minute Minder:** Set the minute minder by turning its dedicated knob. It will sound an audible alarm when the set time expires, but it does not turn off the oven.
- 5. Oven Light:** The oven light can be turned on/off via a dedicated switch or by turning the oven function knob to the light symbol.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Ariston cooker. Always ensure the appliance is cool and disconnected from the power supply before cleaning.

5.1 Cleaning the Hob

- Remove the cast iron pan supports and burner caps/crowns. Wash them in warm soapy water or a dishwasher (if suitable).
- Wipe the stainless steel hob surface with a soft cloth and a mild detergent. Avoid abrasive cleaners or scourers that can scratch the surface.
- Ensure burner ports are clear of food debris. Use a small brush if necessary.
- Dry all parts thoroughly before reassembling.

5.2 Cleaning the Oven

- Remove oven racks and trays. Clean them in warm soapy water.
- Wipe the interior of the oven with a damp cloth and a non-abrasive oven cleaner. Follow the cleaner manufacturer's instructions.
- Clean the mirror glass door with a glass cleaner and a soft cloth.
- Do not use steam cleaners.

5.3 Exterior Cleaning

Wipe the exterior stainless steel surfaces with a soft cloth and a mild stainless steel cleaner. Polish in the direction of the grain to avoid streaks. Clean control knobs with a damp cloth; do not immerse them in water.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply, power outage (for ignition), clogged burner port, ignition electrode dirty/wet.	Check gas supply. Ensure cooker is plugged in. Clean burner ports and ignition electrode. Hold knob longer after ignition.
Flame goes out after releasing knob.	Flame failure device not activated (knob not held long enough), thermocouple faulty.	Hold the knob pressed for 5-10 seconds after ignition. If problem persists, contact service.
Oven not heating.	No gas supply, oven igniter faulty, thermostat issue.	Check gas supply. Ensure oven knob is correctly set. If problem persists, contact service.

Problem	Possible Cause	Solution
Uneven cooking in oven.	Oven not level, incorrect rack position, faulty thermostat.	Ensure cooker is level. Use appropriate rack position. If problem persists, contact service.
Oven shuts off by itself.	Flame failure device activating prematurely, gas supply fluctuations, faulty oven safety valve.	Ensure stable gas supply. This issue may require professional inspection and repair. Contact service.

For issues not listed here or if solutions do not resolve the problem, please contact Ariston customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Ariston
Model Info	A9GG1FC (X)/EX.1
Product Dimensions (W x D x H)	90 x 60 x 85 cm
Item Weight	74 kg
Installation Type	Freestanding
Hob Type	Gas
Number of Heating Elements (Burners)	5
Oven Type	Gas
Oven Capacity	119 Liters
Grill Power	2500W
Control Console	Knob
Material Type	Stainless Steel
Included Components	1 grid, 1 standard tray

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card provided with your appliance or contact your retailer. In case of technical issues, repairs, or to order spare parts, please contact Ariston customer support. Ensure you have your model number (A9GG1FC (X)/EX.1) and purchase date available when contacting support.

Note: Any repairs must be carried out by authorized service personnel. Unauthorized repairs may void your warranty.

	<p>Ariston Hob Operating Instructions and Installation Guide</p> <p>Comprehensive operating instructions, installation guide, safety precautions, maintenance, and troubleshooting for Ariston gas hobs, including models PH640MT NG, PH640MST NG, PH640MT PR, PH640MST PR.</p>
	<p>Руководство пользователя электрического водонагревателя Ariston</p> <p>Данное руководство содержит подробные инструкции по установке, эксплуатации и обслуживанию электрических водонагревателей Ariston. Включает важные указания по безопасности, технические характеристики и информацию для устранения неполадок.</p>
	<p>Ariston Electric Water Heaters: Energy Efficient Comfort and Advanced Technology</p> <p>Explore the comprehensive range of Ariston electric water heaters, featuring innovative technologies like ECO EVO and Nanomix for energy savings, enhanced comfort, and reliable performance. Find detailed specifications and product information.</p>
	<p>Ariston Electric Water Heaters - Installation, Use, and Maintenance Manual</p> <p>Comprehensive guide for Ariston electric water heaters, covering installation, operation, maintenance, and safety precautions. Includes model information and warranty details.</p>
	<p>Ariston Electric Water Heater User Manual and Warranty Information</p> <p>Comprehensive guide for Ariston electric water heaters, detailing installation, operation, safety, maintenance, and warranty. Includes technical specifications for models like SLIM series, PRO R, LYDOS R ABS, and more.</p>
	<p>Руководство пользователя и гарантийный талон для электрических водонагревателей Ariston</p> <p>Подробное руководство пользователя и гарантийный талон для электрических водонагревателей Ariston. Содержит инструкции по установке, эксплуатации, технике безопасности и гарантийным условиям.</p>

