

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Upgraded 5 FT Black Wooden Porch Swing User Manual

VINGLI VL-ClassicSwing

VINGLI Upgraded 5 FT Black Wooden Porch Swing User Manual

MODEL: VL-CLASSICSWING

Brand: VINGLI

[Contents](#) [Assembly](#) [Introduction](#) [Safety Information](#) [Package](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. Introduction

Thank you for choosing the VINGLI Upgraded 5 FT Black Wooden Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new porch swing. Please read it thoroughly before use and retain it for future reference.

This heavy-duty porch swing is designed for outdoor use in courtyards and gardens, offering a comfortable seating solution with a robust 880 lbs weight capacity. Its ergonomic design and durable construction ensure a pleasant and long-lasting experience.



Figure 1: VINGLI 5 FT Black Wooden Porch Swing, showcasing its classic design and black finish.

2. Safety Information

WARNING: Failure to follow these safety instructions may result in injury or product damage.

- The maximum weight capacity for this swing is 880 lbs (approximately 3 persons of normal body types). Do not exceed this limit.
- Ensure the swing is securely assembled and properly installed before each use.
- Regularly inspect all components, including chains, fasteners, and wooden parts, for any signs of damage, wear, or loosening. Do not use the swing if any part is damaged.
- Keep children and pets away from the swing during assembly and ensure they are supervised during use.
- Install the swing on a stable, level surface.
- Avoid sudden or excessive swinging motions.

3. Package Contents

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact VINGLI customer support.

- Wooden Seat and Backrest (pre-assembled sections)
- Wooden Armrests (2 pieces)
- Hanging Chains (2 sets, with carabiner design)
- Assembly Hardware (screws, bolts, washers, nuts)
- Instruction Manual

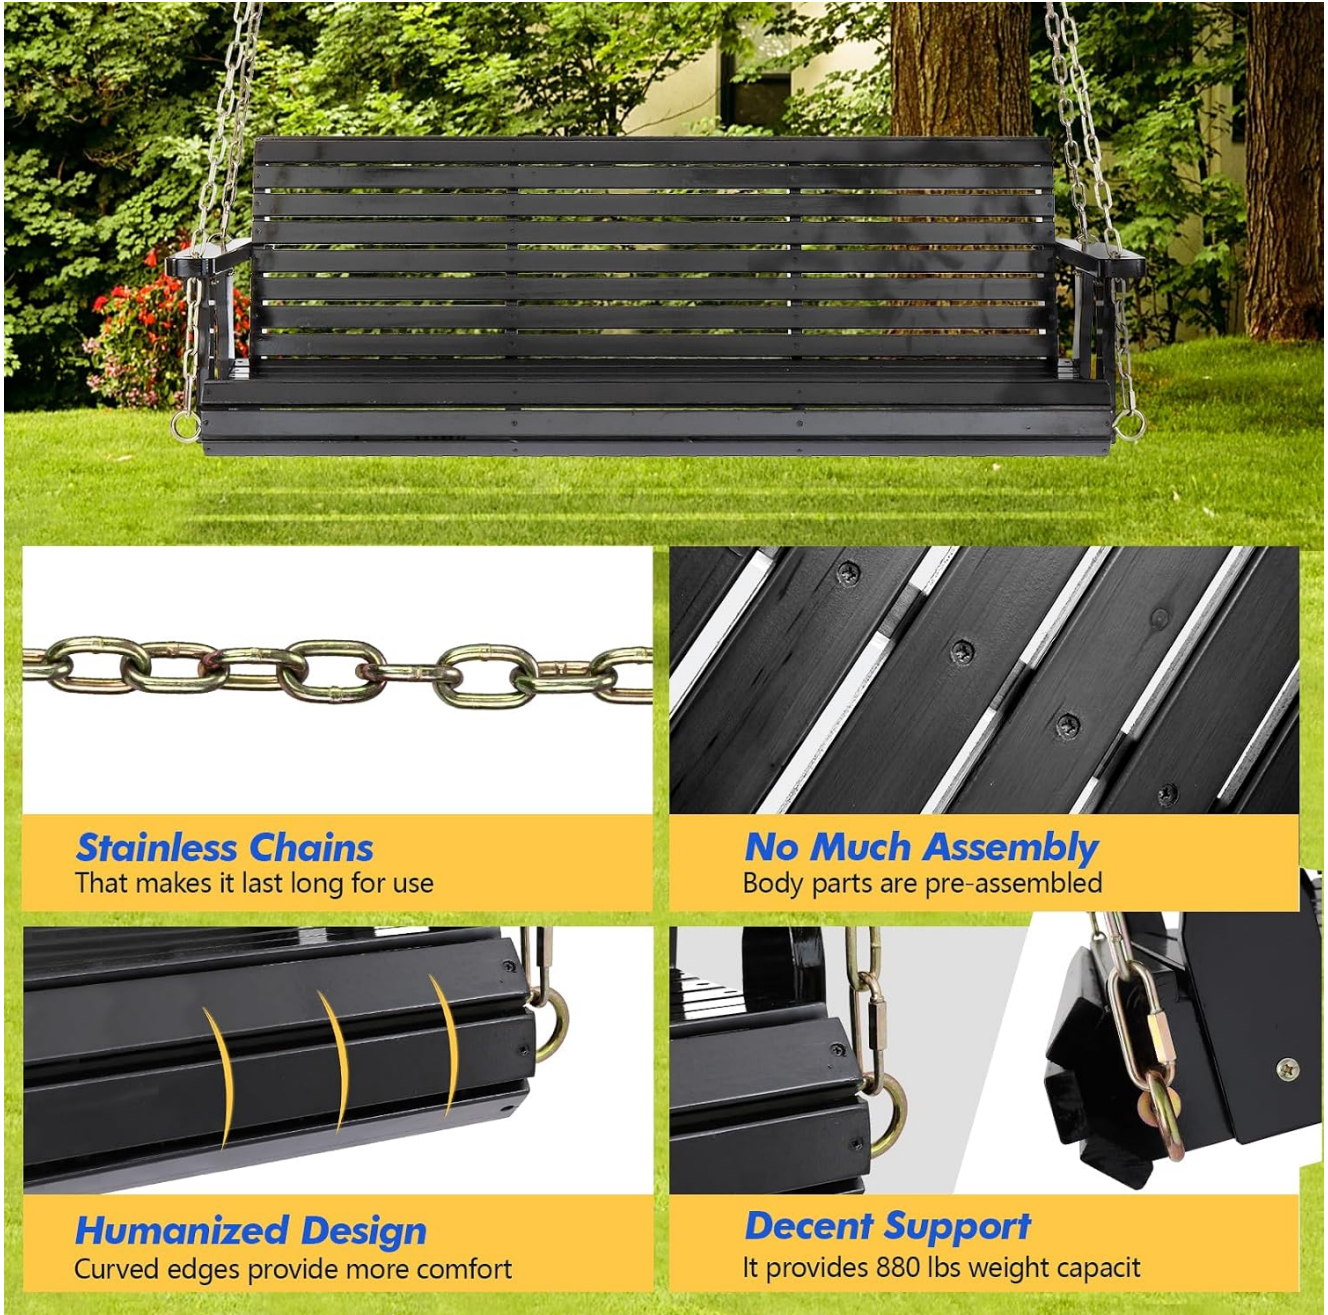


Figure 2: Key components of the VINGLI porch swing, including stainless chains and humanized design elements.

4. Assembly Instructions

Assembly typically takes about 20 minutes with two people. Follow these steps carefully:

1. Unpack all components and lay them out on a clean, flat surface. Verify all parts against the package contents list.
2. Attach the wooden armrests to the pre-assembled seat and backrest sections using the provided hardware. Ensure the curved knee area of the seat is facing forward.

3. Securely fasten all screws and bolts. **Important:** Do not fully tighten screws until all components are loosely assembled. Once all parts are in place, tighten all fasteners firmly.
4. Attach the hanging chains to the designated points on the armrests and the underside of the seat using the loop-locked connections and carabiner design.
5. Hang the assembled swing from a sturdy support structure (e.g., a porch ceiling or a dedicated swing stand). Ensure the hanging hardware (not included) is rated for the swing's weight capacity and dynamic load.


Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing and initial assembly steps of the VINGLI Wooden Porch Swing, highlighting the ease of setup.

Your browser does not support the video tag.

Video 2: An overview of the VINGLI Porch Swing, including assembly tips and feature highlights.

Better Flexibility & Security

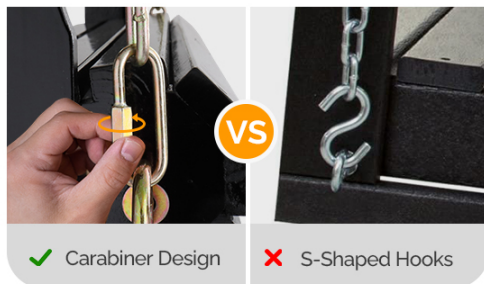

Easy to adjust the tilt angle to as your actual needs

Figure 3: Close-up of the carabiner design for safe and easy adjustment of the swing's tilt angle.

5. Operating Instructions

- **Seating:** The swing is designed to comfortably seat up to three individuals, with a maximum weight capacity of 880 lbs.
- **Adjusting the Angle:** The upgraded chains feature a carabiner design, allowing you to easily adjust the angle of the swing to your preference. Simply open the carabiner, select the desired chain link, and re-secure the carabiner.
- **Smooth Movement:** The swing is designed for a smooth, gentle motion. Avoid standing on the swing or engaging in aggressive swinging that could compromise stability or safety.



Figure 4: A person enjoying the ergonomic comfort of the VINGLI porch swing.

6. Maintenance

Proper maintenance will extend the life and appearance of your VINGLI porch swing.

- **Cleaning:** The swing features a well-coated surface, making it easy to clean. Wipe down the wooden surfaces with a soft, damp cloth and mild soap as needed. Avoid harsh chemicals or abrasive cleaners.
- **Regular Inspection:** Periodically check all nuts, bolts, and chain connections to ensure they remain tight and secure. Tighten any loose fasteners immediately.
- **Weather Protection:** While the swing is designed for outdoor use with a durable finish, prolonged exposure to extreme weather conditions (heavy rain, snow, intense sun) can affect its lifespan. Consider covering the swing or storing it indoors during harsh weather.
- **Wood Care:** The swing is made from high-quality cedar. If the finish shows signs of wear over time, re-apply a suitable outdoor wood sealant or paint to protect the wood.

Well-Coated Surface

Easy to clean whenever it gets dirty.



Figure 5: Demonstrating the easy maintenance of the swing's well-coated surface.

7. Troubleshooting

Problem	Possible Cause	Solution
Swing feels unstable or wobbly	Loose fasteners; uneven hanging points.	Check and tighten all bolts and screws. Ensure hanging points are level and secure.
Wood finish appears chipped or worn	Normal wear and tear; environmental exposure.	Clean the affected area and apply an appropriate outdoor wood paint or sealant.
Discomfort during seating	Incorrect swing angle; personal preference.	Adjust the chain length to modify the swing's tilt angle for optimal comfort. Consider adding cushions.
Missing parts during assembly	Packaging error.	Contact VINGLI customer support with your purchase details for replacement parts.

8. Specifications

Feature	Detail
Brand	VINGLI
Model Number	VL-ClassicSwing
Color	Black
Material	Cedar Wood
Product Dimensions (D x W x H)	24.4"D x 60.6"W x 18.9"H
Item Weight	44 Pounds
Maximum Weight Recommendation	880 Pounds
Maximum Compatible Number of Seats	3
Required Assembly	Yes

Feature	Detail
UPC	810158423916

9. Warranty & Support

For warranty information, product support, or to purchase replacement parts, please visit the official VINGLI store or contact their customer service directly. Keep your purchase receipt for warranty claims.

Visit the VINGLI Store: [VINGLI Official Store](#)

© 2026 VINGLI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question