

[Manuals.plus](#) /

> [INSIGNIA](#) /

> INSIGNIA 32" Class F20 Series Smart HD 720p Fire TV User Manual

INSIGNIA NS-32F201NA22

INSIGNIA 32" Class F20 Series Smart HD 720p Fire TV

Model: NS-32F201NA22

INTRODUCTION

Welcome to your new INSIGNIA 32" Class F20 Series Smart HD 720p Fire TV. This manual provides essential information for setting up, operating, and maintaining your television. With integrated Fire TV experience, you can enjoy a vast library of streaming content, live TV, and smart features powered by Alexa Voice Remote.



Image: Front view of the Insignia 32-inch Fire TV displaying streaming content, showcasing its smart capabilities.

SAFETY INFORMATION

Please read all safety instructions carefully before using your new TV. Failure to follow these instructions may result in fire, electric shock, personal injury, or damage to your TV.

- Do not expose the TV to rain or moisture.
- Do not block ventilation openings.
- Do not place the TV on an unstable cart, stand, tripod, bracket, or table.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

WHAT'S IN THE BOX

Verify that all components are present before proceeding with setup.

- INSIGNIA 32" Class F20 Series Smart HD 720p Fire TV
- Fire TV Voice Remote with Alexa
- TV Stand (2 pieces)
- Screws for TV Stand
- Power Cord
- Quick Setup Guide
- Batteries (AAA) for remote



Image: The retail packaging for the Insignia Fire TV, indicating included accessories.

SETUP

1. Unpacking

Carefully remove the TV and all accessories from the box. It is recommended to keep the original packaging for future transport or servicing.

2. Attaching the Stand

Place the TV face-down on a soft, clean surface. Align the stand pieces with the screw holes on the bottom of the TV and secure them with the provided screws.



Image: Angled front view of the Insignia Fire TV, showing the attached table stands.

3. Connecting Power

Plug the power cord into the AC IN jack on the back of the TV, then plug the other end into a power outlet.

4. Connecting External Devices

Your TV offers various ports for connecting external devices. Refer to the images below for port locations.





HDMI 3



HDMI 2



HDMI 1 (ARC)



USB
DC 5V 0.9A



DIGITAL
OPTICAL OUTPUT



AUDIO
OUT



Image: Detailed view of the side input panel, showing HDMI, USB, and digital optical audio output ports.



Image: Detailed view of the bottom input panel, showing Ethernet, AV (composite), and antenna/cable input ports.

- **HDMI:** Connect Blu-ray players, game consoles, or cable/satellite boxes. Your TV has three HDMI ports.
- **USB:** Connect USB drives for media playback.
- **Digital Optical Output:** Connect to a soundbar or home theater system for digital audio.
- **AV (Composite):** Connect older devices using RCA cables (yellow for video, red/white for audio).
- **Antenna/Cable:** Connect an antenna for over-the-air broadcasts or a cable TV connection.
- **Ethernet:** Connect an Ethernet cable for a wired internet connection.

5. Initial Fire TV Setup

After connecting power and turning on the TV, follow the on-screen instructions to complete the initial Fire TV setup. This includes connecting to Wi-Fi, signing in to your Amazon account, and pairing the Alexa Voice Remote.

OPERATING

Remote Control Overview

The Alexa Voice Remote allows you to navigate your Fire TV and control your television. Insert the included AAA batteries into the remote.



Image: The Insignia Fire TV Voice Remote, highlighting its buttons for navigation, voice control, and quick access to streaming services.

- **Power Button:** Turns the TV on or off.
- **Voice Button (Microphone icon):** Press and hold to activate Alexa voice commands.
- **Navigation Ring:** Use to move through menus.
- **Select Button:** Confirms selections.
- **Home Button:** Returns to the Fire TV home screen.
- **Back Button:** Goes back to the previous screen.
- **Menu Button (three horizontal lines):** Accesses contextual menus.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Channel Up/Down:** Changes channels (for antenna/cable input).
- **App Buttons:** Quick access to popular streaming services like Prime Video, Netflix, Disney+, and Hulu.

Basic TV Functions

- **Power On/Off:** Press the Power button on the remote.
- **Adjusting Volume:** Use the Volume Up/Down buttons.
- **Changing Inputs:** Press the **Input** button (often represented by an arrow in a box or a rectangle with an arrow) on the remote to cycle through connected devices (HDMI 1, HDMI 2, AV, etc.).

Using Fire TV Features

- **Home Screen:** The central hub for all your content. Browse recommended movies, TV shows, and apps.
- **Apps:** Access streaming services like Netflix, Prime Video, YouTube, and more. Download new apps from the Appstore.
- **Alexa Voice Control:** Press and hold the Voice button on your remote and speak commands. For example, "Alexa, open Netflix," "Alexa, play The Office," or "Alexa, switch to HDMI 1."
- **Live TV:** If you have an antenna connected, access live over-the-air channels through the Live TV section.

MAINTENANCE

Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, dampen the cloth lightly with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, waxes, or solvents.

Remote Control Care

- Keep the remote dry and away from direct sunlight.
- Replace batteries when the remote's performance degrades.
- Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into the TV and a working outlet. Try a different outlet.
No picture, but sound is present	Check the input source. Ensure the connected device is powered on and functioning correctly.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV. Re-pair the remote if necessary (hold Home button for 10 seconds).
Cannot connect to Wi-Fi	Check your Wi-Fi password. Restart your router and modem. Ensure the TV is within range of your Wi-Fi network.

SPECIFICATIONS

Feature	Detail
Brand	INSIGNIA
Model Number	NS-32F201NA22
Screen Size	32 Inches
Display Type	LCD with LED Backlight
Resolution	720p HD
Aspect Ratio	16:9

Feature	Detail
Smart TV Platform	Fire TV
Voice Assistant	Alexa (via Voice Remote)
HDMI Ports	3
USB Ports	1
Audio Output	Digital Optical, Headphone Jack
Connectivity	Wi-Fi, Ethernet, Bluetooth
Speaker Output Power	5 Watts
Dimensions (with stand)	17.03 x 48.33 x 73 cm (approx. 6.7 x 19.0 x 28.7 inches)
Model Year	2021

SUPPORT

For additional assistance, product registration, or to view frequently asked questions, please visit the official INSIGNIA support website or contact customer service.

- **Online Support:** Visit insigniaproducts.com/support (example link, actual link may vary).
- **Customer Service:** Refer to your Quick Setup Guide for regional contact numbers.

WARRANTY INFORMATION

Your INSIGNIA TV is covered by a limited warranty. The duration and terms of the warranty may vary by region. Please refer to the warranty card included with your product or visit the INSIGNIA support website for detailed warranty information.

This warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or external causes.

© 2024 INSIGNIA. All rights reserved.

Fire TV, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.