

AVERA FE01


AVERA FE01 4.5L Digital Air Fryer User Manual

Model: FE01

[Instructions](#) [Introduction](#) [Safety Instructions](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the AVERA FE01 4.5L Digital Air Fryer. This appliance is designed to cook a variety of foods using rapid air circulation technology, offering a healthier alternative to traditional frying with significantly less oil. Please read this manual thoroughly before use to ensure safe and optimal operation.

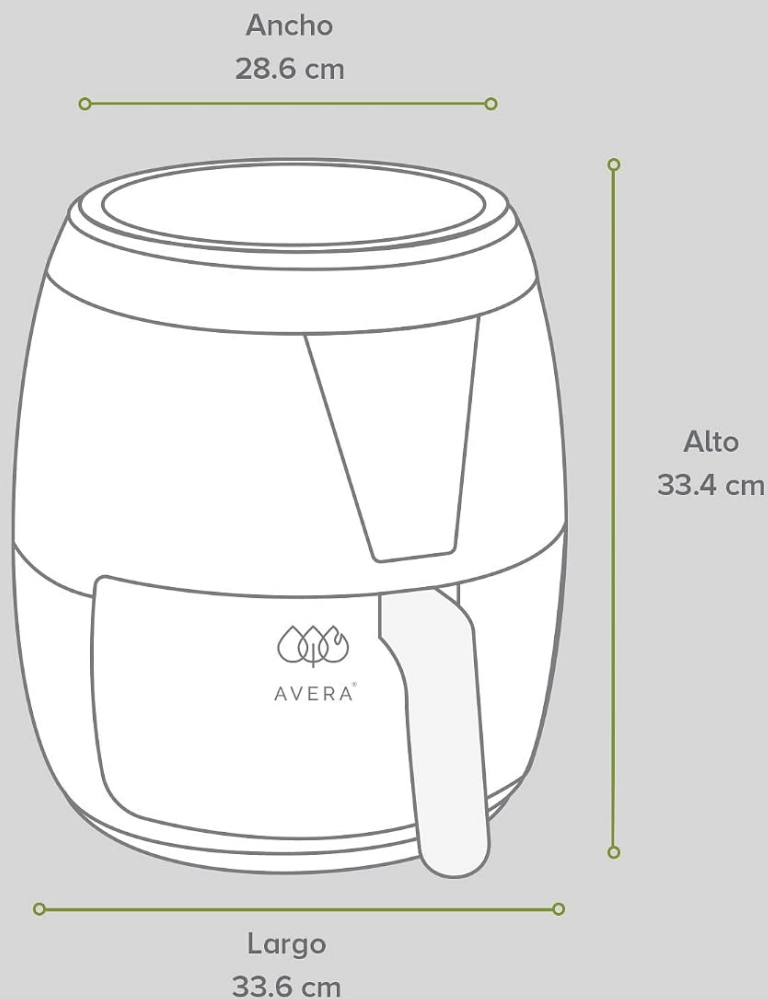

Dimensiones

Freidora de aire digital de 4.5 L | FE01

Image 1.1: Front view of the AVERA FE01 4.5L Digital Air Fryer. The appliance features a sleek black design with a digital touch control panel and a pull-out basket handle.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance's casing is made of polypropylene, resistant up to 137°C. Internal plastic parts are resistant up to 280°C.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Keep packaging for future storage or disposal.
2. **Cleaning:** Before first use, clean the basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm / 4 inches) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.



FREIDORA DE AIRE DIGITAL 4.5 L | FE01



1 año de garantía



Tiene 8 funciones
preestablecidas



Soportes antideslizantes y
revestimientos antiadherentes



Con carcasa y mango
de tacto frío para evitar
quemaduras



Capacidad de 5 a
6 porciones



Cocina con hasta
98% menos aceite



Certificación oficial de
eficiencia energética

Image 3.1: The AVERA FE01 Air Fryer showcasing its features, including 8 preset functions, anti-slip supports, and a cool-touch handle for safe operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The AVERA FE01 features a digital touch control panel for easy operation. It includes controls for temperature, time, and preset cooking functions.

4.2 Basic Operation

- 1. Prepare Food:** Place the food you wish to cook into the air fryer basket. Do not overfill the basket to ensure even cooking.
- 2. Insert Basket:** Slide the basket back into the air fryer until it clicks into place.
- 3. Power On:** Plug the appliance into a power outlet. The power indicator will light up.

4. Set Temperature and Time:

- Use the temperature control buttons (up/down arrows) to set the desired cooking temperature (minimum 80°C).
- Use the timer control buttons (up/down arrows) to set the desired cooking time (up to 30 minutes).

5. **Use Preset Functions:** The air fryer includes 8 preset cooking functions for common dishes. Select the desired preset, and the appliance will automatically set the optimal temperature and time. You can adjust these settings manually if needed.

6. **Start Cooking:** Press the start button to begin the cooking process. The appliance will preheat and then start cooking.

7. **Shake Basket (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking time to ensure even browning. Carefully pull out the basket using the cool-touch handle, shake, and reinsert. The appliance will pause and resume cooking once the basket is reinserted.

8. **Completion:** The air fryer will beep when the cooking time is complete. Carefully pull out the basket and remove the cooked food.



Características

Freidora de aire digital de 4.5 L | FE01

Image 4.1: The AVERA FE01 Air Fryer showing the 30-minute timer and indicating that its parts are dishwasher safe for easy cleaning.

4.3 Digital Recipe Book

Your AVERA FE01 Air Fryer includes access to a digital recipe book. Refer to the included documentation or the manufacturer's website for details on how to access this resource for cooking inspiration and specific recipes.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Basket and Pan:** The air fryer basket and pan are dishwasher safe. Alternatively, they can be cleaned with hot water, dish soap, and a non-abrasive sponge. For stubborn food residues, soak the basket and pan in hot water with some dish soap for about 10 minutes.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. Avoid using abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.



Partes de plástico resistente a altas temperaturas al interior hasta 280 °C.



Circuitos de doble protección para vigilar la fritura en cualquier momento.



Sistema de circulación de aire rápido para freír los alimentos en poco tiempo y ahorrar energía.



Dimensiones

Freidora de aire digital de 4.5 L | FE01

Image 5.1: The AVERA FE01 Air Fryer illustrating its internal plastic parts, which are resistant to high temperatures up to 280°C, and the double protection circuits for enhanced safety.

6. TROUBLESHOOTING

If you encounter issues with your AVERA FE01 Air Fryer, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
The air fryer does not turn on.	The appliance is not plugged in, or the power outlet is not working.	Ensure the power cord is securely plugged into a working grounded outlet.
Food is not cooked evenly.	Basket is overcrowded, or food was not shaken.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke comes out of the appliance.	Fat residues from previous use, or cooking fatty food.	Clean the basket and pan thoroughly after each use. For fatty foods, ensure excess oil is drained.

Problem	Possible Cause	Solution
The air fryer emits an unusual smell during first use.	Residual manufacturing oils.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.
Food is not crispy.	Not enough oil, or temperature/time settings are incorrect.	Lightly brush or spray food with oil. Adjust temperature and time as needed.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	FE01
Brand	AVERA
Capacity	4.5 Liters
Output Wattage	1500 Watts
Control Method	Touch (Digital)
Minimum Temperature Setting	80 Degrees Celsius
Maximum Timer	30 Minutes
Special Features	Temperature Control, 8 Preset Functions, Nonstick Coating, Dishwasher Safe Parts, Anti-slip Supports, Cool-touch Handle, Double Protection Circuits, Rapid Air Circulation System
Material	Plastic (Polypropylene casing resistant up to 137°C; internal plastic parts resistant up to 280°C)
Dimensions (Approx.)	Width: 28.6 cm, Height: 33.4 cm, Length: 33.6 cm



Image 7.1: Diagram illustrating the dimensions of the AVERA FE01 4.5L Digital Air Fryer: Width 28.6 cm, Height 33.4 cm, Length 33.6 cm.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The AVERA FE01 Digital Air Fryer comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact AVERA customer support. We are committed to your satisfaction. In case of any issues, please reach out to us before initiating a return.

- **Technical Service:** National technical service coverage is available.
- **Contact Information:** Please refer to the product packaging or AVERA's official website for the most current contact

details (phone, email, or support portal).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question