

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Taurus](#) /

› [Taurus Top Cuisine Food Processor Instruction Manual 925014000](#)

Taurus 925014000

Taurus Top Cuisine Food Processor Instruction Manual

Model: 925014000

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Taurus Top Cuisine Food Processor, Model 925014000. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The Taurus Top Cuisine Food Processor is designed to simplify your cooking process with its versatile features, including 12 pre-set cooking programs, a 5-liter non-stick removable pot, a digital display, and a 24-hour programming function.

SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- This appliance is for household use only.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Taurus Top Cuisine Food Processor.



Figure 1: Front view of the Taurus Top Cuisine Food Processor, showing the digital display and control buttons.



Figure 2: Top view of the food processor, highlighting the integrated carrying handle for portability.

Main Components:

- **Main Unit:** Houses the heating element and control panel.
- **Removable Pot:** 5-liter capacity, non-stick coating.

- **Lid:** With steam vent and sealing mechanism.
- **Control Panel:** Digital display, program selection buttons, timer, and start/stop.
- **Carrying Handle:** For safe transport of the appliance.

Included Accessories:

- **Steamer Basket:** For steaming vegetables, fish, etc.
- **Measuring Cup:** For precise ingredient measurements.
- **Spoon:** For stirring and serving.
- **Spatula:** For mixing and scraping.
- **Recipe Book:** Contains over 50 recipes to get started.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the removable pot, lid, steamer basket, measuring cup, spoon, and spatula with warm, soapy water. Rinse thoroughly and dry all parts. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the appliance on a stable, flat, heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation around the unit.
4. **Insert Pot:** Place the clean, dry removable pot into the main unit. Ensure it is seated correctly.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet (240 VAC). The digital display will illuminate.



Figure 3: Demonstrating the placement of the steamer basket inside the removable cooking pot.

OPERATING INSTRUCTIONS

Basic Operation:

1. **Add Ingredients:** Place your desired ingredients into the removable pot.
2. **Close Lid:** Securely close the lid. Ensure it is properly locked to prevent steam from escaping.
3. **Select Program:** Use the "MENU" button to cycle through the 12 available cooking programs. The selected program will be displayed on the digital screen.
4. **Adjust Time/Temperature (if applicable):** For some programs, you may be able to adjust cooking time or temperature using the dedicated buttons. Refer to the recipe book for specific program settings.
5. **Start Cooking:** Press the "START" button to begin the cooking process. The appliance will automatically maintain the set temperature and time.
6. **Keep Warm:** Once cooking is complete, the appliance may automatically switch to a "Keep Warm" function.

7. **Stop:** To stop cooking at any time, press the "STOP" button.



Figure 4: Close-up of a user interacting with the control panel, demonstrating button presses for program selection or adjustment.

24-Hour Programming (Delay Start):

The 24-hour programming feature allows you to set a delayed start time for your cooking.

1. **Prepare Ingredients:** Place all ingredients into the pot and close the lid.
2. **Select Program:** Choose your desired cooking program using the "MENU" button.
3. **Set Delay Time:** Press the "PRESET/DELAY" button. Use the hour and minute adjustment buttons to set the desired delay time (up to 24 hours). This is the time until cooking *starts*.
4. **Confirm:** Press the "START" button to confirm the delay setting. The timer will count down, and cooking will begin automatically once the delay time expires.

Using the Steamer Basket:

To steam food, place water in the bottom of the removable pot (ensure water level is below the steamer basket). Place ingredients in the steamer basket and insert it into the pot. Select the appropriate steaming program or a

manual setting.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your food processor.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Pot and Accessories:** The removable pot, lid, steamer basket, measuring cup, spoon, and spatula are dishwasher safe. Alternatively, wash them by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
4. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store in a cool, dry place.



Figure 5: User closing the lid, indicating the appliance is ready for storage or next use after cleaning.

If you encounter issues with your Taurus Top Cuisine Food Processor, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Food not cooking evenly.	Too much food; insufficient liquid; incorrect program selection.	Reduce food quantity. Add more liquid if necessary. Ensure the correct cooking program is selected for the type of food.
Lid is difficult to close or open.	Food debris or residue on the sealing ring; lid not aligned correctly.	Clean the lid and sealing ring thoroughly. Ensure the lid is aligned properly before attempting to close.
Error code on display.	Specific internal issue.	Unplug the appliance for 5 minutes, then plug it back in. If the error persists, contact customer support.

If the problem persists after attempting these solutions, please contact Taurus customer support.

SPECIFICATIONS

Brand	Taurus
Model Number	925014000
Power/Wattage	900 watts
Voltage	240 VAC
Volume Capacity	5 Liters
Product Dimensions (L x W x H)	40.5 x 30 x 26 cm
Weight	5.2 kg
Material	Alloyed steel
Special Features	Programmable, 12 cooking programs, 24-hour delay start
Dishwasher Safe Parts	Removable pot, lid, and accessories

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Taurus website. Keep your proof of purchase for any warranty claims.

Manufacturer: Taurus

Website: www.taurus.es (Example link, actual link may vary by region)

© 2024 Taurus. All rights reserved.