#### Manuals+

#### Q & A | Deep Search | Upload

#### manuals.plus /

- > CHiQ /
- > CHiQ 32P625Q 32-inch QHD IPS LED Monitor User Manual

#### **CHiQ 32P625Q**

## CHiQ 32P625Q 32-inch QHD IPS LED Monitor User Manual

Model: 32P625Q

#### 1. Introduction

Thank you for purchasing the CHiQ 32P625Q 32-inch QHD IPS LED Monitor. This manual provides essential information for the safe and efficient operation of your new monitor. Please read this manual thoroughly before use and retain it for future reference.

#### **Safety Information**

- Do not expose the monitor to rain or moisture to prevent fire or shock hazards.
- Do not open the monitor casing. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.
- Place the monitor on a stable, flat surface to prevent it from falling.
- Ensure proper ventilation around the monitor. Do not block ventilation openings.
- Use only the power adapter supplied with the monitor.
- Unplug the monitor from the power outlet during lightning storms or when unused for extended periods.

#### 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- CHiQ 32P625Q 32-inch QHD IPS LED Monitor
- Monitor Stand (Base and Neck)
- Power Adapter
- HDMI Cable
- User Manual (this document)

#### 3. PRODUCT OVERVIEW

#### **Monitor Front View**



**Figure 3.1:** Front view of the CHiQ 32P625Q monitor, showcasing its 32-inch IPS QHD display with sRGB 100% color coverage and ultra-thin bezels.

# **Monitor Rear and Side Views (Illustrative)**



Figure 3.2: Side view of the CHiQ 32P625Q monitor, highlighting its slim profile and metal stand design.

# 6.9mm super slim design & frameless design&Metal bezel



Figure 3.3: Close-up illustrating the 6.9mm super slim design and frameless metal bezel of the monitor.

#### **Control Buttons and Ports**

The monitor features intuitive control buttons, typically located on the rear or bottom right side, and various input ports on the rear panel.

- Power Button: Turns the monitor on or off.
- OSD Menu Buttons: Navigate and select options within the On-Screen Display menu.
- HDMI Port(s): Connect to devices using an HDMI cable.
- DP (DisplayPort) Port: Connect to devices using a DisplayPort cable.
- VGA Port: Connect to older devices using a VGA cable.
- Audio Out (Headphone Jack): Connect headphones or external speakers.
- DC Power Input: Connect the power adapter.

#### 4. SETUP

#### 4.1 Assembling the Stand

- 1. Carefully remove the monitor from its packaging, keeping it protected on a soft surface.
- 2. Attach the stand neck to the monitor panel.
- 3. Attach the stand base to the stand neck and secure it with the provided screws.
- 4. Place the assembled monitor on a stable, flat desk.



Figure 4.1: Illustration of the monitor's minimalist design, including the metal stand, frameless design, and ultra-slim profile (6.9mm).

#### 4.2 VESA Mounting

The CHiQ 32P625Q monitor is VESA compatible, allowing it to be mounted on a wall or an articulating arm (sold separately). Ensure your VESA mount is compatible with the monitor's VESA pattern (typically 100x100mm, though specific details should be confirmed with the product's physical specifications or packaging).

- 1. Remove the stand from the monitor if it is already attached.
- 2. Follow the instructions provided with your VESA mount to attach it to the monitor and then to your desired surface.

#### 4.3 Connecting to Devices

Connect your computer or other devices to the monitor using the appropriate cables.

- **HDMI:** Connect one end of the HDMI cable to the HDMI port on your computer/device and the other end to an HDMI port on the monitor.
- **DisplayPort (DP):** Connect one end of the DP cable to the DP port on your computer/device and the other end to the DP port on the monitor.
- VGA: Connect one end of the VGA cable to the VGA port on your computer/device and the other end to the VGA port on the monitor.
- Audio Out: If you wish to use external speakers or headphones, connect them to the 3.5mm audio out jack on the monitor.

#### **4.4 Power Connection**

- 1. Connect the power adapter cable to the DC power input port on the monitor.
- 2. Plug the power adapter into a power outlet.

#### 5. OPERATING THE MONITOR

#### 5.1 Power On/Off

Press the power button on the monitor to turn it on or off. The power indicator light will illuminate when the monitor is on.

#### 5.2 OSD Menu Navigation

The On-Screen Display (OSD) menu allows you to adjust various monitor settings. Use the control buttons (usually located on the rear or bottom right) to navigate the menu.

- Press a menu button to open the OSD menu.
- Use the navigation buttons (up/down/left/right or joystick) to move through menu options.
- Press the select/enter button to confirm a selection or enter a sub-menu.
- Press the exit button to close the OSD menu.

#### 5.3 Picture Settings

Adjust display characteristics for optimal viewing.

- Brightness: Adjust the overall luminance of the screen.
- Contrast: Adjust the difference between light and dark areas.
- Color Temperature: Select predefined color temperature modes (e.g., Warm, Cool, User) or adjust RGB values manually.
- Low Blue Light Mode: Reduces blue light emission to minimize eye strain, especially during prolonged use.
- Flicker-Free Technology: This monitor incorporates flicker-free technology to reduce eye fatigue.

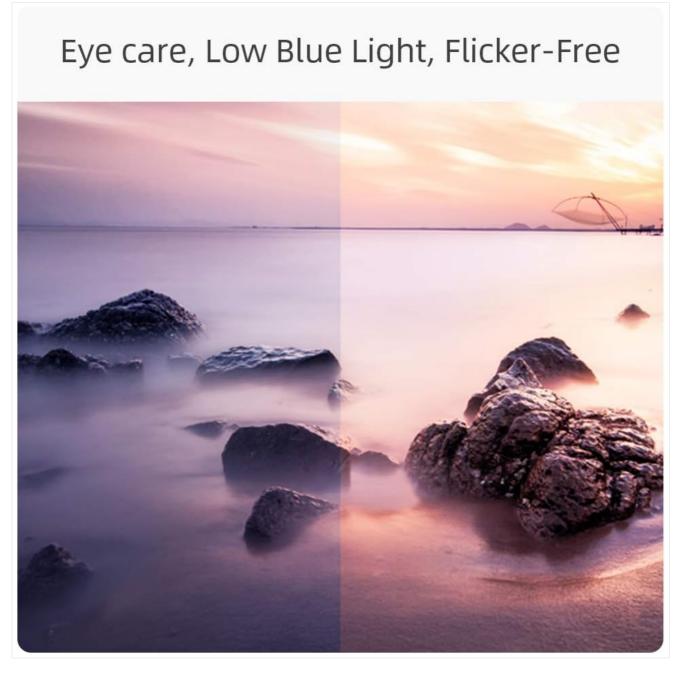


Figure 5.1: Visual representation of the monitor's eye care features, including Low Blue Light and Flicker-Free technology, designed to reduce eye strain.

#### **5.4 Input Selection**

If multiple devices are connected, you can switch between input sources via the OSD menu or a dedicated input select button.

#### **5.5 Audio Settings**

Adjust the volume for connected headphones or external speakers.

### **5.6 Gaming Features**

- FreeSync: This monitor supports AMD FreeSync technology, which synchronizes the monitor's refresh rate with your GPU's frame rate to eliminate screen tearing and stuttering. Enable FreeSync in the OSD menu and on your graphics card settings.
- Response Time: The monitor features a 5ms response time for smooth motion.
- Refresh Rate: The monitor supports a 75Hz refresh rate for smoother visuals compared to standard 60Hz displays.

# 75Hz



**Figure 5.2:** Visual comparison demonstrating the smoother motion provided by a 75Hz refresh rate, ideal for dynamic content and gaming.

#### 6. MAINTENANCE

#### **Cleaning the Monitor**

- Always unplug the monitor before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen. For stubborn marks, dampen the cloth with a small amount of water or a mild, non-abrasive screen cleaner.
- Wipe the monitor casing with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or solvents.

#### **Storage**

If storing the monitor for an extended period, unplug it and store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

#### 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image on screen	Power cable not connected.  Video cable not connected or loose.  Incorrect input source selected.  Monitor is off.	Ensure power cable is securely connected to monitor and outlet.  Check video cable (HDMI, DP, VGA) connections at both monitor and device.  Select the correct input source via the OSD menu.  Press the power button to turn on the monitor.
Image is blurry or distorted	Incorrect resolution setting.  Video cable quality or damage.	Set the display resolution to 2560x1440 (QHD) in your computer's display settings.  Try a different video cable.
No sound from audio out	Volume too low or muted. Incorrect audio output device selected on computer. Headphones/speakers not connected properly.	Adjust volume in OSD menu and on your computer.  Ensure the monitor is selected as the audio output device in your computer's sound settings.  Check connections of headphones/speakers.
Flickering or unstable image	Refresh rate mismatch. Faulty video cable.	Ensure refresh rate is set to 75Hz in your computer's display settings.  Try a different video cable.

# 8. SPECIFICATIONS


Feature	Detail
Model Number	32P625Q
Screen Size	32 Inches
Panel Type	IPS LED
Resolution	QHD (2560 x 1440 Pixels)
Aspect Ratio	16:9
Response Time	5 ms
Refresh Rate	75 Hz
Brightness	250 cd/m2
Contrast Ratio	1000:1 (Static), 1M:1 (Dynamic)
Viewing Angle	178°/178°
Color Gamut	sRGB 100% (10-bit panel)
Connectivity	HDMI, DisplayPort (DP), VGA, Audio Out (Headphone Jack)

Feature	Detail
Special Features	Low Blue Light, Flicker-Free, FreeSync, Ultra-thin bezels, VESA Compatible
Power Consumption	34 Watt (Typical), 26 kWh/1000h (Energy Label)
Dimensions (with stand)	712 x 180 x 495 mm (LxWxH)
Tilt Adjustment	5° to -15°



Figure 8.1: Detailed dimensions of the CHiQ 32P625Q monitor with its stand.



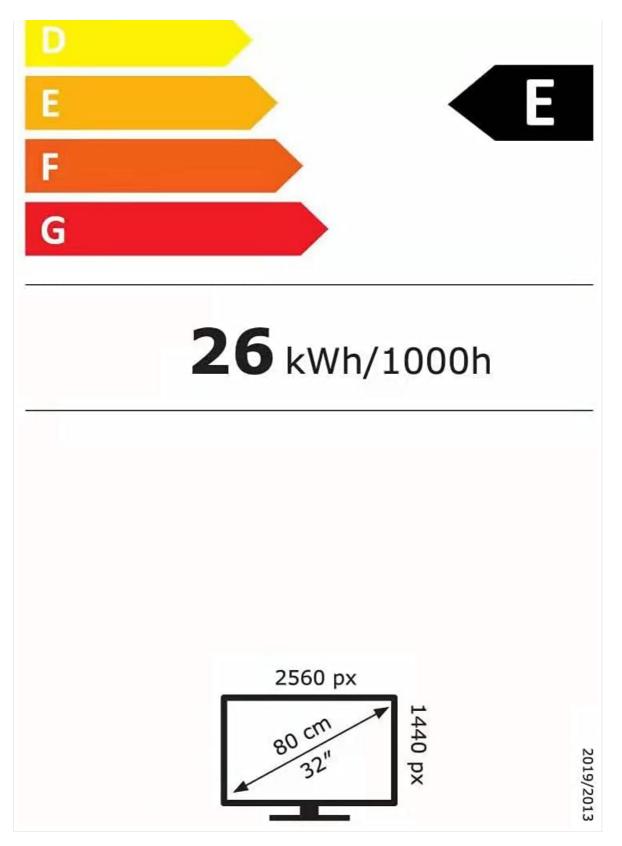

**Figure 8.2:** EU Energy Label for the CHiQ 32P625Q monitor, indicating an energy efficiency class E and 26 kWh/1000h consumption. For more details, visit the EPREL database.

#### 9. WARRANTY AND SUPPORT

CHiQ products are designed and manufactured to the highest quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official CHiQ website. Please have your model number (32P625Q) and purchase information ready when contacting support.

#### Related Documents - 32P625Q



#### CHiQ CBM230NS Bottom Mount Fridge | 231L VCM Silver | Features & Specs

Discover the CHiQ CBM230NS Bottom Mount Fridge, a 231-litre refrigerator in VCM Silver. This appliance features Frost Free technology, Multi Air Flow, Electronic Temperature Control, Fast Cool, a Reversible Door, and Interior LED Lighting for optimal food preservation and convenience. It is rated 4 stars for energy efficiency and received Canstar Blue recognition in 2020. View detailed specifications and warranty information.



#### CHiQ WDFL85T48B5 Washer & Dryer Clean User Manual

Comprehensive user manual for the CHiQ WDFL85T48B5 washing machine, covering operation, features such as 'Dryer Clean', maintenance, and troubleshooting. Provided by CHiQ Australia.



#### CHiQ 8.5kg Front Load Washer WFL85PL48W1 User Manual

User manual for the CHiQ 8.5kg Front Load Washer, Model WFL85PL48W1. Provides comprehensive instructions on safety, installation, operation, maintenance, and troubleshooting for optimal use.



#### CHiQ 8.5Kg Washer Dryer Combo User Manual: Operation, Care, and Troubleshooting

Detailed user manual for the CHiQ 8.5Kg Washer Dryer Combo (Gun Metal). Find instructions on wash cycles, appliance operation, maintenance, and troubleshooting solutions.



#### CHiQ WDFL85PL48W2 Washer & Dryer Combo User Manual

Comprehensive user manual for the CHiQ WDFL85PL48W2 Washer & Dryer Combo, covering cycles, functions, operation, maintenance, and troubleshooting. Get detailed instructions, cycle explanations, maintenance tips, and troubleshooting guides for your CHiQ WDFL85PL48W2 Washer & Dryer Combo. This official user manual ensures you get the most out of your appliance.



#### CHiQ CTM255NW5E 255L Top Mount Fridge - Features, Specifications & Energy Rating

Explore the CHiQ CTM255NW5E, a 255L white top mount fridge. Features include inverter system, frost-free operation, multi-air flow, electronic control, door alarm, humidity control crisper, fast cooling, reversible door, and interior LED lighting. View specifications and energy rating.