

[Manuals.plus](#) /

> [KIDDERY TOYS](#) /

> KIDDERY TOYS Wooden Play Kitchen Instruction Manual - Model B08XBJGR7D

## KIDDERY TOYS B08XBJGR7D

# KIDDERY TOYS Wooden Play Kitchen Instruction Manual

Model: B08XBJGR7D

## INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your KIDDERY TOYS Wooden Play Kitchen. Please read thoroughly before use to ensure a safe and enjoyable experience for your child.



**Image Description:** An overview of the fully assembled KIDDERY TOYS Wooden Play Kitchen, featuring a young child in chef attire, highlighting its realistic design and interactive elements.

## SAFETY INFORMATION

- Adult assembly is required.
- Recommended for children aged 36 months to 6 years.
- Ensure all screws and fasteners are securely tightened before initial use and periodically thereafter.
- Regularly inspect the playset for any loose parts, sharp edges, or damage. Discontinue use if damaged.
- Do not allow children to climb on the playset, as this may cause it to tip over.
- Keep small parts, such as screws and accessories, away from children under 3 years of age to prevent choking hazards.
- This product is designed for indoor use only. Avoid exposure to moisture or extreme temperatures.

## **PARTS LIST**

Please verify that all components are present and undamaged before beginning assembly. Refer to the assembly video for visual identification of each part.

- Wooden panels for the main structure (refrigerator, oven, sink, microwave sections)
- Countertop with integrated stovetop and sink cutouts
- Plastic sink basin and faucet assembly
- Plastic stove burners and clickable knobs
- Oven door with clear viewing panel and internal rack
- Refrigerator doors (upper freezer and lower fridge)
- Microwave door with clear panel
- Towel holder and utensil hanging hooks
- Pretend play phone
- Included accessories: 2 salt shakers, 1 pot with lid, 1 pan, 3 wooden utensils, 1 cup
- Assorted screws, hinges, dowels, and other fasteners for assembly

# TACTILE FUN!

With knobs that twist, and doors that open and shut, it's almost as if the kitchen is real!



**Image Description:** A visual representation of the various accessories included with the play kitchen, such as pots, pans, utensils, salt and pepper shakers, a mug, and a toy phone.

## SETUP AND ASSEMBLY

Adult assembly is required. Please follow the steps carefully. An official 3D assembly video is provided below for visual guidance, which can greatly assist in the construction process.

Your browser does not support the video tag.

**Video Description:** A detailed 3D animated video demonstrating the step-by-step assembly of the KIDDERY TOYS Wooden Play Kitchen, showing how each component fits together.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and identify each part using the provided labels or the assembly video.
2. **Assemble Base Structure:** Begin by connecting the main base panels using the designated screws and connectors. Ensure a stable foundation.
3. **Install Side Panels:** Attach the side panels for the refrigerator and oven sections, aligning them with the base.

4. **Assemble Refrigerator Section:** Secure the top (freezer) and bottom (refrigerator) doors. Ensure hinges are correctly aligned for smooth opening and closing.
5. **Assemble Oven/Dishwasher Section:** Attach the oven and dishwasher doors. Install the internal oven rack.
6. **Install Countertop:** Carefully place the countertop onto the assembled base, ensuring the stovetop and sink cutouts align perfectly. Secure with screws.
7. **Attach Faucet and Sink:** Insert the plastic sink basin into its cutout and install the faucet assembly.
8. **Assemble Upper Structure:** Attach the back panel and the upper shelf for the microwave.
9. **Install Microwave:** Secure the microwave unit and its door to the upper structure.
10. **Add Accessories:** Attach the towel holder, utensil hooks, and place the pretend phone in its holder.
11. **Final Check:** Ensure all screws are tightened, and all doors and drawers open and close smoothly. Confirm the playset is stable and secure before allowing children to play.

## OPERATING INSTRUCTIONS

The KIDDERY TOYS Wooden Play Kitchen is designed to encourage imaginative and role-playing activities. All features are for pretend play.

- **Stovetop:** Turn the clickable knobs to simulate cooking. Place the included pot and pan on the burners.
- **Oven:** Open the oven door to place pretend food inside. The internal rack can be pulled out for easy access.
- **Refrigerator/Freezer:** Open the top (freezer) and bottom (refrigerator) doors to store play food items. The top door features a chalkboard surface for writing notes or grocery lists.
- **Microwave:** Open the microwave door to place items inside for pretend heating. The buttons are for imaginative play and do not function electronically.
- **Sink:** The faucet handles can be turned, and the sink basin is removable for easy cleaning.
- **Dishwasher:** Open the dishwasher door to place pretend dishes inside for cleaning.
- **Phone:** Use the pretend phone for role-playing conversations and taking orders.

# 9 ACCESSORIES

Cook up a feast with the included accessories.



**Image Description:** This image highlights the tactile features of the play kitchen, showing a child interacting with the microwave door and the clickable stove knobs.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe down all surfaces with a soft, damp cloth and a mild, non-toxic soap. Avoid using abrasive cleaners, harsh chemicals, or excessive water, which can damage the wood finish.
- **Drying:** Ensure all wooden parts are thoroughly dried immediately after cleaning to prevent warping, swelling, or mold growth.
- **Inspection:** Periodically check all screws, hinges, and connections for tightness. Tighten any loose hardware using an appropriate screwdriver to maintain structural integrity.
- **Storage:** Store the playset in a dry, indoor environment away from direct sunlight, heat sources, or areas with high humidity.
- **Chalkboard:** Use only standard chalk on the chalkboard surface. Wipe clean with a damp cloth or a chalkboard eraser. Avoid permanent markers or crayons.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors do not close properly	Loose hinges or misaligned panels.	Check and tighten all hinge screws. Ensure panels are correctly assembled according to the instructions.
Knobs are stiff or do not turn smoothly	Debris or manufacturing tolerance.	Ensure no foreign objects are obstructing the knobs. If necessary, apply a small amount of food-grade lubricant to the rotating mechanism.
Playset feels wobbly or unstable	Loose fasteners or uneven assembly.	Inspect all screws and connectors throughout the playset. Tighten any loose hardware. Ensure the playset is on a flat, level surface.
Missing or damaged parts upon arrival	Shipping damage or an oversight during packaging.	Contact KIDDERY TOYS customer support immediately for replacement parts. Refer to the Warranty and Support section for contact information.

## SPECIFICATIONS

- **Product Dimensions:** 41.5 x 12 x 41.5 inches (Length x Width x Height)
- **Item Weight:** 45 pounds
- **Recommended Age:** 36 months - 6 years
- **Materials:** MDF wood (countertop), durable wood construction, BPA-free plastic (accessories)
- **Model Number:** B08XBJGR7D
- **Manufacturer:** KIDDERY TOYS

# BUILT STRONG




Instruction  
Booklet  
Included



Assembly  
Required



Made from  
Wood & BPA  
free plastic

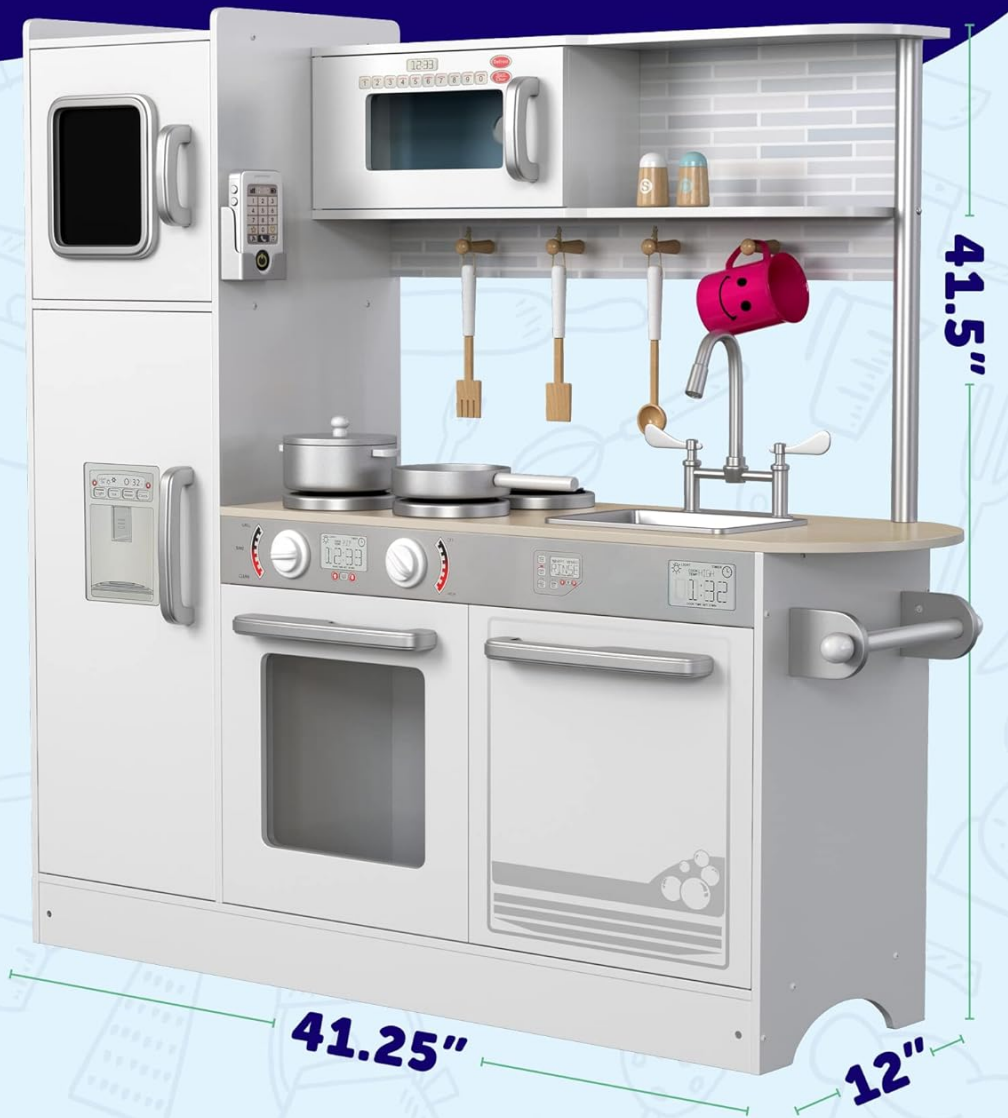

**Image Description:** A clear diagram illustrating the overall dimensions of the play kitchen, including its height, width, and depth, for reference.

## WARRANTY AND SUPPORT

KIDDERY TOYS is committed to providing high-quality and safe products for children.

- **Replacement Parts:** If you require replacement parts, please contact KIDDERY TOYS customer support directly with all necessary details and shipping instructions.
- **Safety Standards:** Our toys have successfully passed the rigorous ASTM 963/17 test, ensuring they meet all necessary safety standards according to USA laws for children's toys.
- **Contact:** For any questions, concerns, or support, please visit the [KIDDERY TOYS Store on Amazon](#) or contact us through the platform.

