

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### Manuals.plus /

> [Alltro](#) /

> Alltro Replacement Remote Control for Telefunken TV Models D32H285R4, D32H287M4, D32H287Q4, D32H289N3C, D39F185M3W, D39F185N3C

## Alltro D32H285R4, D32H287M4, D32H287Q4, D32H289N3C, D39F185M3W, D39F185N3C

# Alltro Replacement Remote Control User Manual

For Telefunken TV Models: D32H285R4, D32H287M4, D32H287Q4, D32H289N3C, D39F185M3W, D39F185N3C

## INTRODUCTION

---

Thank you for choosing the Alltro Replacement Remote Control. This remote is designed to be a direct replacement for your original Telefunken TV remote, offering full functionality without the need for complex programming. Simply insert batteries, and it's ready to use.

This manual provides instructions for setting up and operating your new remote control. Please read it carefully to ensure proper use and to maximize your viewing experience.

## SETUP

---

### 1. Battery Installation

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote will not be used for an extended period.





Image: The Alltro replacement remote control. This image shows the front of the remote with its various buttons,

## OPERATING INSTRUCTIONS

---

This remote control is designed to function identically to your original Telefunken TV remote. No programming is required. Point the remote directly at your TV's infrared receiver.

### Basic Functions

- **Power Button:** Press to turn the TV on or off.
- **Number Buttons (0-9):** Use to directly select channels.
- **Channel Up/Down (CH+/CH-):** Press to navigate through channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the TV's audio volume.
- **Mute Button:** Silences the TV audio. Press again to restore sound.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).

### Navigation and Menu Functions

- **Arrow Buttons (Up, Down, Left, Right):** Navigate through on-screen menus and options.
- **OK/Enter Button:** Confirms selections in menus.
- **Menu Button:** Opens the TV's main menu.
- **Exit Button:** Closes the current menu or on-screen display.
- **Back Button:** Returns to the previous menu or screen.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA alkaline batteries.
  - Make sure there are no obstructions between the remote control and the TV's infrared receiver.
  - Ensure you are within the effective operating range (up to 10 meters).
- **Some buttons not working:**
  - Check for sticky buttons. Gently press and release the button multiple times.
  - If the issue persists, the remote may be damaged.
- **Remote works intermittently:**
  - This often indicates low battery power. Replace batteries.
  - Ensure a clear line of sight to the TV.

## SPECIFICATIONS

---

<b>Brand</b>	Alltro
<b>Compatible Devices</b>	Telefunken TV
<b>Connectivity Technology</b>	Infrared (IR)
<b>Special Feature</b>	No Programming Required, Comfortable Design
<b>Maximum Supported Devices</b>	1

<b>Number of Buttons</b>	48
<b>Controller Type</b>	Button Control
<b>Maximum Range</b>	10 meters (approx. 33 feet)
<b>Battery Type</b>	2 x AAA Alkaline Batteries (not included)

## MAINTENANCE

---

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- Remove batteries if the remote is not used for an extended period to prevent leakage.

## WARRANTY AND SUPPORT

---

This Alltro replacement remote control is designed for reliability and durability. For specific warranty information, please refer to the packaging or contact your retailer. For further assistance or support, please reach out to the customer service provided by your point of purchase.