

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Exost](#) /

› [Exost Lightning Dash RC Race Car User Manual](#)

Exost 20630

Exost Lightning Dash RC Race Car User Manual

Model: 20630

INTRODUCTION

This manual provides essential instructions for the safe and proper operation, setup, and maintenance of your Exost Lightning Dash RC Race Car. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Exost Lightning Dash RC Race Car, featuring a sleek black body with vibrant green graphic details and wheels, emitting a green glow from its undercarriage.

SAFETY INFORMATION

Warning: This product contains small parts which may pose a choking hazard. Not suitable for children under 3 years. Adult supervision is recommended during operation.

- Keep fingers, hair, and loose clothing away from the wheels and moving parts.
- Do not operate the vehicle near people, pets, or obstacles.
- Avoid operating in wet conditions or on public roads.
- Always remove batteries from the vehicle and remote control when not in use for extended periods.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x Exost Lightning Dash RC Race Car
- 1 x Remote Control

Note: Batteries are not included and must be purchased separately.

SETUP

1. Battery Installation (Vehicle)

1. Locate the battery compartment on the underside of the Exost Lightning Dash RC Race Car.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 6 AA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Using a screwdriver, open the battery compartment cover.
3. Insert the required batteries (typically 2-4 AA or AAA, not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

OPERATING INSTRUCTIONS

1. Power On and Pairing

1. Turn on the power switch located on the Exost Lightning Dash RC Race Car. The car's lights may flash.
2. Turn on the power switch on the remote control.
3. The car and remote control will automatically pair using 2.4GHz anti-interference technology. A successful pairing is indicated when the car's lights stop flashing and remain steady.

2. Driving the Vehicle

- **Forward/Backward:** Use the throttle trigger/lever on the remote control to move the car forward or backward.
- **Steering:** Use the steering wheel/directional buttons on the remote control to turn the car left or right.
- The vehicle is designed for both indoor and outdoor use, including wetlands and grasslands, due to its durable materials and flexible wheels.

3. Lights and Sound Effects

- The Lightning Dash RC Race Car features LED lights and dynamic sound effects.
- These effects enhance the driving experience, especially in low-light conditions.
- Refer to your remote control for specific buttons to activate or deactivate sound effects, if available.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to wipe down the vehicle and remote control. Do not use water or chemical cleaners, as this may damage electronic components.
- Storage:** Store the vehicle and remote control in a cool, dry place away from direct sunlight when not in use. Remove all batteries before long-term storage.
- Inspection:** Periodically check for loose screws, damaged wires, or worn parts. Replace any damaged components as necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not respond to remote control.	<ul style="list-style-type: none">Batteries are low or incorrectly installed.Vehicle or remote control is not powered on.Pairing failed.Out of range.	<ul style="list-style-type: none">Check and replace batteries in both vehicle and remote control. Ensure correct polarity.Ensure both vehicle and remote control power switches are in the "ON" position.Turn off both devices, then turn them back on to re-attempt pairing.Move the vehicle closer to the remote control (maximum range approximately 25 meters).
Vehicle moves slowly or inconsistently.	<ul style="list-style-type: none">Low batteries in the vehicle.Obstruction in wheels or drivetrain.	<ul style="list-style-type: none">Replace vehicle batteries with fresh ones.Inspect wheels and axles for debris and clear any obstructions.
Lights or sounds are not working.	<ul style="list-style-type: none">Low batteries.Feature may be turned off.	<ul style="list-style-type: none">Replace vehicle batteries.Check remote control for a dedicated button to activate lights/sounds.

SPECIFICATIONS

- Model Number:** 20630
- Brand:** Exost
- Product Dimensions:** 12.99 x 5.91 x 3.94 inches
- Item Weight:** 2 pounds
- Manufacturer Recommended Age:** 5 years and up
- Vehicle Batteries:** 6 AA batteries (not included)
- Remote Control Batteries:** Not specified, typically 2-4 AA or AAA (not included)
- Control Frequency:** 2.4 GHz
- Maximum Control Range:** Approximately 25 meters

- **Features:** LED lights, sound effects, durable construction, flexible wheels
- **Manufacturer:** Silverlit
- **Release Date:** January 1, 2022

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Exost website. Keep your purchase receipt as proof of purchase.