

- Manuals.plus /
- > Pyle /
 - > Pyle Portable Mini Lightweight Collapsible Washing Machine User Manual

Pyle PUCWM33

Pyle Portable Mini Lightweight Collapsible Washing Machine User Manual

Model: PUCWM33 | Brand: Pyle

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pyle Portable Mini Lightweight Collapsible Washing Machine, model PUCWM33. Designed for convenience and portability, this foldable washing machine is ideal for small spaces, travel, and light laundry needs. It features a semi-automatic cleaning function with high-frequency vibration for effective and energy-saving performance.



Figure 1: Pyle Portable Mini Lightweight Collapsible Washing Machine.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Unplug the appliance when not in use or before cleaning.
- Do not operate with a damaged cord or plug.
- Avoid washing heavy or bulky items that exceed the machine's capacity (2 kg).
- Do not use harsh chemicals or abrasive cleaners.
- Ensure the drain hose is properly positioned before draining water to prevent spills.

WHAT'S IN THE BOX

Verify that all components are present upon unpacking:

- Pyle Portable Washing Machine (PUCWM33)
- Pulsator
- Drain Hose
- Timer Knob (integrated)



Figure 2: Included Components - Portable Washing Machine, Pulsator, and Drain Hose.

SETUP

1. **Unpack the Unit:** Carefully remove the washing machine and all accessories from the packaging.
2. **Expand the Washer:** The machine is designed to be collapsible for storage. To expand, gently pull the top rim upwards until the bucket is fully extended and locked into place. Avoid pressing on the agitator during this process.

3. **Positioning:** Place the washing machine on a stable, flat surface near a water source and a drain. Ensure there is enough space for operation and drainage.
4. **Connect Drain Hose:** Attach the provided drain hose to the drain outlet located at the bottom of the unit. Ensure it is securely fastened. Position the other end of the hose into a sink or suitable drainage area.
5. **Power Connection:** Plug the power cord into a standard 110V electrical outlet.



Figure 3: Expanding the Portable Washing Machine for use.



Figure 4: Drain and Power Cord Connections.

OPERATING INSTRUCTIONS

Follow these steps for effective washing:

1. **Add Water:** Fill the washing machine with the appropriate amount of water. Ensure the water level covers the clothes but does not exceed the maximum fill line.
2. **Add Detergent:** Add a small amount of liquid detergent suitable for delicate or small loads. Avoid excessive sudsing.
3. **Load Clothes:** Place light clothing items such as underwear, socks, baby clothes, or small towels into the washer. Do not overload the machine; the maximum capacity is 2 kg.
4. **Set Timer:** Turn the timer knob to select the desired washing time, up to 15 minutes. The machine will begin agitating.
5. **Washing Cycle:** The machine will perform a high-frequency vibration wash. Monitor the process to ensure proper agitation.
6. **Drain Water:** Once the washing cycle is complete, turn the timer knob to '0' or unplug the unit. Remove the drain plug and allow the dirty water to drain completely through the hose.
7. **Rinse Cycle (Optional):** For rinsing, refill the machine with clean water (without detergent), place the clothes back in, and run a shorter cycle (e.g., 3-5 minutes). Drain the rinse water. Repeat if necessary.
8. **Remove Clothes:** After draining, remove the washed and rinsed clothes. Wring them out manually as the machine does not have a spin-dry function.

2 KG LOAD CAPACITY

PERFECT FOR WASHING LIGHT CLOTHES
THAT REQUIRE SEPARATE CLEANINGS



UNDERWEAR



TOWELS



BABY CLOTHES



UNDIES



DOLLS



SOCKS



Figure 5: Recommended Load Capacity for Light Clothes.



EASY TO OPERATE

FEATURES A SEMI-AUTOMATIC CLEANING FUNCTION
AND IS EQUIPPED WITH A 15-MINUTE TIMER KNOB

Figure 6: Easy-to-Operate Timer Knob.



SILK FABRIC



BABY CLOTHES



WOOLEN SWEATER



TOWEL



UNDERWEAR



HAT SCARF

Figure 7: Suitable Fabric Types for Washing.

MAINTENANCE

Proper maintenance ensures the longevity of your washing machine:

- **Cleaning:** After each use, drain all water and wipe the interior and exterior surfaces with a soft, damp cloth. Ensure the machine is completely dry before collapsing and storing to prevent mold or mildew.
- **Storage:** Collapse the machine by gently pushing down on the top rim until it folds flat. Store in a cool, dry place away from direct sunlight.
- **Pulsator Care:** Periodically check the pulsator for any lint or debris and clean as needed.
- **Drain Hose:** Ensure the drain hose is clear of blockages.

FOLDABLE DESIGN

FEATURES A FOLDABLE AND PORTABLE
BUCKET TYPE DESIGN FOR EASY STORAGE



Figure 8: Collapsing the Washing Machine for Storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start.	Not plugged in; power outage; timer not set.	Ensure power cord is securely plugged in. Check power supply. Turn timer knob to desired wash time.
Water does not drain.	Drain plug not removed; drain hose kinked or blocked.	Remove the drain plug. Straighten the drain hose and check for obstructions.
Machine is noisy or vibrates excessively.	Uneven surface; overloaded; clothes tangled.	Place machine on a stable, flat surface. Reduce load size. Untangle clothes.
Poor washing results.	Insufficient detergent; overloaded; too little water.	Use appropriate amount of detergent. Do not overload. Ensure adequate water level.

SPECIFICATIONS

Feature	Detail
Brand Name	Pyle
Model Info	PUCWM33
Item Weight	12.68 pounds
Product Dimensions (Expanded)	11.64"D x 11.64"W x 12.46"H (approx.)
Product Dimensions (Collapsed)	11.64"D x 11.64"W x 6.4"H (approx.)
Capacity	2 Kilograms
Rated Wash Power	180 Watts
Voltage	110V
Control Console	Knob (Timer)
Access Location	Top Load
Material Type	Engineered ABS, TPE & TPR
Special Features	Foldable, Semi-Automatic, High-Frequency Vibration

COMPACT & EASY TO CARRY

Space-Saving Design for Effortless Mobility



Figure 9: Product Dimensions (Expanded and Collapsed).

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Pyle website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact Pyle customer service through their official channels.

© 2025 Pyle. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08XDJQ3XC>

More documents and user manuals: **<https://manuals.plus/>**