

RYOBI PAD01

RYOBI 18V ONE+ Bluetooth Speaker Instruction Manual

Model: PAD01

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your RYOBI 18V ONE+ Bluetooth Speaker. Please read this manual thoroughly before use and retain it for future reference.

Safety Information

Always follow basic safety precautions when using electrical devices. This speaker is designed for use with RYOBI 18V ONE+ batteries. Do not expose the speaker to rain or wet conditions. Do not disassemble the unit. Refer to the battery pack's operator's manual for specific safety instructions regarding battery use and charging.

2. PACKAGE CONTENTS

- 1 x RYOBI 18V ONE+ Bluetooth Speaker (Model: PAD01)
- 1 x Operator's Manual (this document)

Note: Battery and charger are sold separately and are not included with this speaker.

3. PRODUCT FEATURES

- Smart Amplifier Technology for dynamic highs and lows.
- Dual 3-inch speakers for powerful, rich sound.
- Over 125 ft. Bluetooth range for extended connectivity.
- Integrated handle for portability.
- 2.1 Amp USB charging port for mobile devices.
- Voice prompts for power on/off and Bluetooth connection status.
- Compatible with all RYOBI 18V ONE+ batteries.

4. COMPONENTS AND CONTROLS

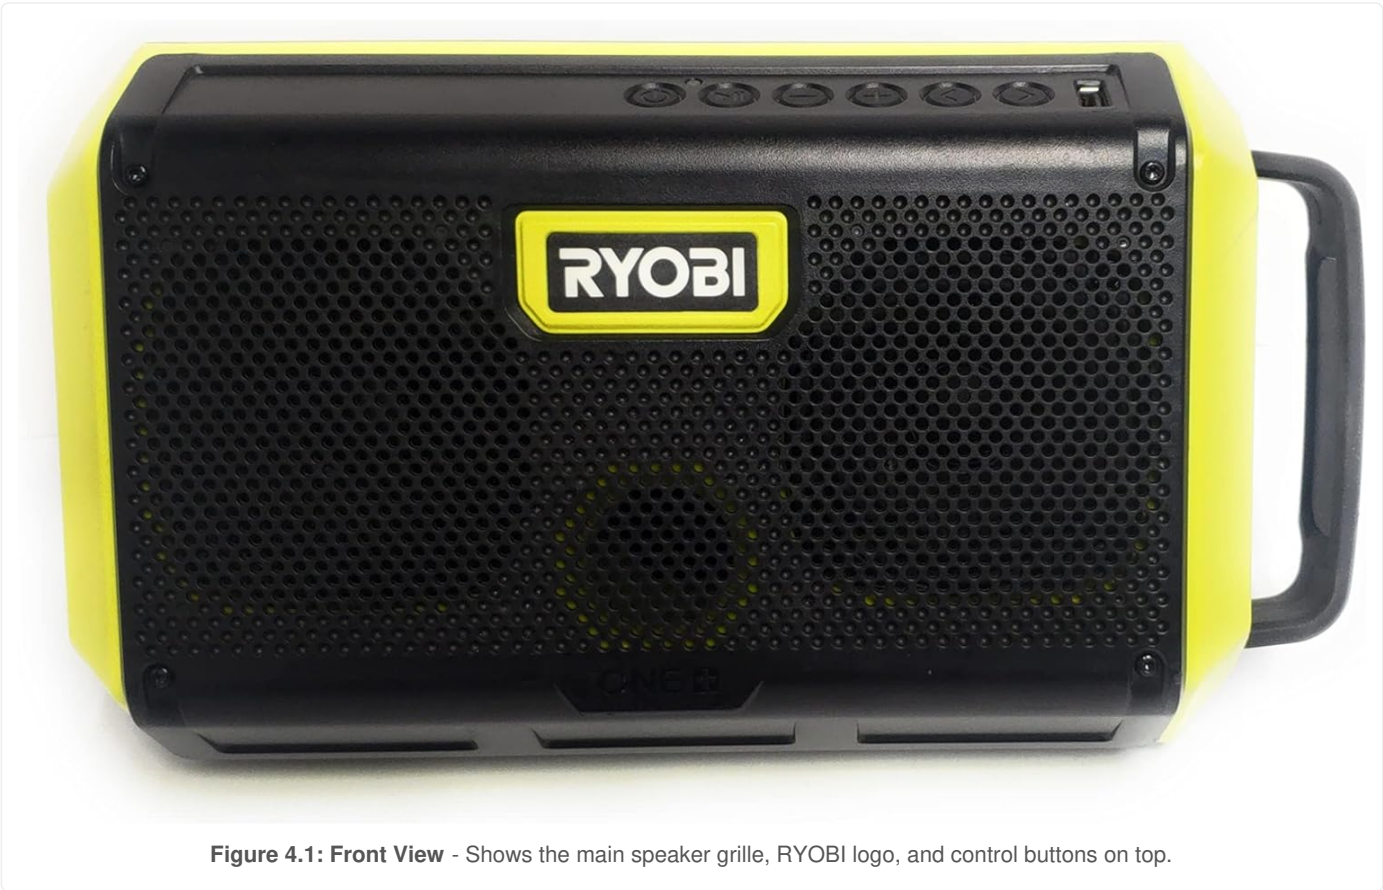


Figure 4.1: Front View - Shows the main speaker grille, RYOBI logo, and control buttons on top.



Figure 4.2: Angled Top View - Highlights the top panel with control buttons and the integrated handle on the right side.



Figure 4.3: Bottom View - Displays the battery compartment where the 18V ONE+ battery is inserted.



Figure 4.4: Back Label - Provides important regulatory information, model number (PAD01), and USB charger specifications.



Figure 4.5: Product Dimensions - Illustrates the speaker's approximate measurements: 7" H x 11.75" L x 6.25" W.

Control Buttons

The top panel of the speaker features several control buttons:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Bluetooth Pairing Button:** Press to initiate Bluetooth pairing mode.
- **Volume Up/Down Buttons:** Adjust the speaker's output volume.
- **Play/Pause Button:** Control media playback.
- **USB Charging Port:** Located on the side, provides 2.1 Amp output for charging devices.

5. SETUP

5.1 Battery Installation

1. Ensure the speaker is turned off.

2. Locate the battery compartment on the bottom of the speaker (refer to Figure 4.3).
3. Align a charged RYOBI 18V ONE+ battery pack with the battery port.
4. Slide the battery pack into the compartment until it clicks securely into place.
5. To remove the battery, press the release latches on the battery pack and slide it out.

5.2 Initial Power On

Once the battery is installed, press and hold the Power Button on the top panel until you hear a voice prompt indicating the speaker is powering on.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Turn on the RYOBI 18V ONE+ Bluetooth Speaker. It will automatically enter pairing mode if no device is connected, indicated by a voice prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. The speaker will appear as "RYOBI Speaker" or similar.
4. Select the speaker from the list to connect. A voice prompt will confirm successful pairing.
5. If the speaker does not automatically enter pairing mode, press the Bluetooth Pairing Button to activate it.

6.2 Playing Audio

Once paired, audio played on your connected device will stream through the speaker. Use the Volume Up/Down buttons on the speaker or your device to adjust the volume. The Play/Pause button can control media playback directly from the speaker.

6.3 USB Charging

The speaker features a 2.1 Amp USB charging port. Connect your mobile device's USB charging cable to this port to charge your device while the speaker is powered on. This feature is useful for maintaining charge on your phone or tablet during extended use.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the speaker is dry before storing or using.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery pack if storing for extended periods.
- **Battery Care:** Follow the battery manufacturer's instructions for charging, storage, and disposal of RYOBI 18V ONE+ battery packs.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery not installed correctly or discharged.	Ensure battery is fully seated. Charge or replace battery.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device too far; interference.	Press Bluetooth button to enter pairing mode. Move device closer. Reduce interference sources.

Problem	Possible Cause	Solution
No audio output.	Volume too low; device not connected; incorrect audio source.	Increase volume on speaker and device. Re-pair Bluetooth. Check audio output settings on device.
USB charging not working.	Speaker not powered on; cable faulty; device incompatible.	Ensure speaker is on. Try a different USB cable. Verify device compatibility with 2.1A charging.

9. SPECIFICATIONS

Feature	Detail
Model Number	PAD01
Power Source	18V ONE+ Battery (sold separately)
Speaker Size	Dual 3-inch speakers
Bluetooth Range	Up to 125 feet
USB Charging Output	2.1 Amps
Dimensions (L x W x H)	11.75 x 6.25 x 7 inches
Weight	3.9 pounds (without battery)
Color	Yellow, Black

10. WARRANTY AND SUPPORT

The RYOBI 18V ONE+ Bluetooth Speaker (Model PAD01) is backed by the RYOBI 3-Year Manufacturer's Warranty. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official RYOBI website.

11. PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual. For additional visual information, please refer to the product page where this manual was obtained.