

## eufy T2262

# eufy Anker RoboVac X8 Robot Vacuum Instruction Manual

Model: T2262

[Introduction](#)

[Safety Instructions](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

The eufy Anker RoboVac X8 is an advanced robotic vacuum cleaner designed to provide efficient and thorough cleaning for your home. Featuring Twin-Turbine Technology for powerful suction, iPath Laser Navigation for precise mapping, and AI. Map 2.0 Technology for intelligent cleaning, the RoboVac X8 is ideal for maintaining clean floors, especially in homes with pets.

This manual provides essential information on how to set up, operate, and maintain your RoboVac X8 to ensure optimal performance and longevity.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Before using this product, read all safety instructions and operating instructions. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use the power adapter supplied by the manufacturer.

- Do not use the appliance on wet surfaces or in environments with standing water.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the RoboVac in a room where an infant or child is sleeping.
- Do not use the RoboVac to pick up large objects, sharp objects, or burning/smoking materials.
- Ensure the charging base is placed against a wall on a level surface and clear of obstacles.
- Unplug the appliance from the outlet before cleaning or performing maintenance.

### 3. PACKAGE CONTENTS

---

Verify that all components are present in your package:

- 1 x Robotic vacuum cleaner
- 1 x Charging base
- 1 x Charging Adapter
- 1 x Cleaning tool
- 1 x Side Brush
- 1 x Warranty Information

### 4. PRODUCT OVERVIEW

---

The eufy RoboVac X8 is equipped with several advanced features for superior cleaning performance.

#### 4.1. Twin-Turbine Technology

The RoboVac X8 features dual turbines, each generating 2000 Pa of suction power. This design creates up to 80% more airflow compared to single-turbine robotic vacuums, significantly improving dust, debris, and pet hair pickup.



Image: Internal view of the RoboVac X8 highlighting its Twin-Turbine Technology.

#### 4.2. iPath Laser Navigation & AI.Map 2.0 Technology

Utilizing iPath Laser Navigation, the RoboVac X8 accurately scans your home to build virtual maps within minutes. AI.Map 2.0 Technology allows the RoboVac to memorize multi-floor maps, enabling it to clean effectively whether it's on the first floor, in the basement, or in the attic. This technology also facilitates real-time obstacle avoidance and cleaning in low-light conditions.

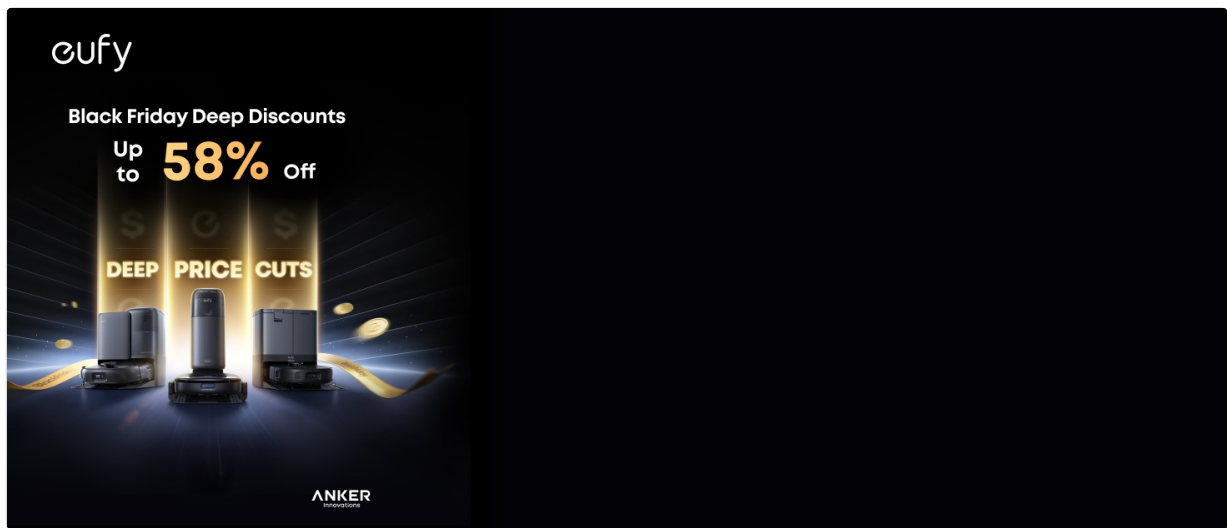


Image: RoboVac X8 demonstrating multi-floor mapping with AI.Map 2.0 Technology.

### 4.3. App Control & Voice Activation

Control your RoboVac X8 conveniently through the dedicated mobile app. The app allows you to customize cleaning areas, set no-go zones, initiate zone cleaning or spot cleaning, and view real-time maps. The RoboVac also supports voice-activated control via Amazon Alexa and Google Assistant for hands-free operation.

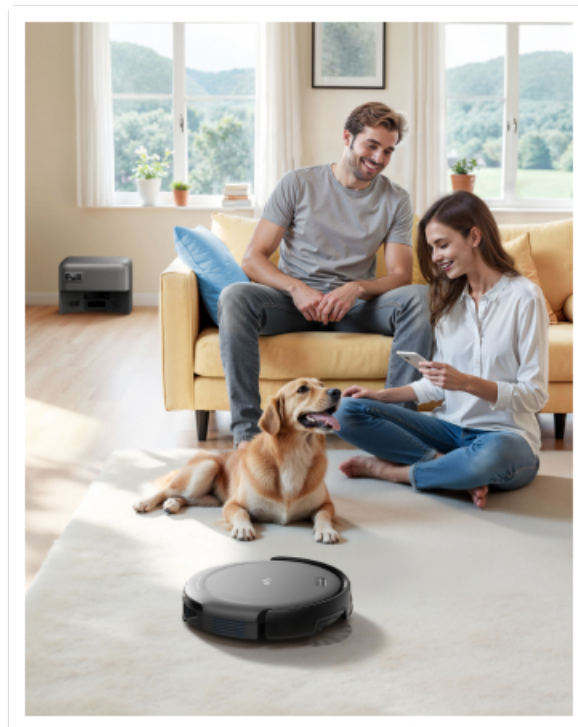


Image: Smartphone app interface for controlling the RoboVac X8.



Image: RoboVac X8 demonstrating voice control compatibility.

#### **4.4. UltraPack Dust-Compression**

The RoboVac X8's powerful suction tightly packs dust into the dust box, increasing volume utilization by 127%. This reduces the frequency of emptying the dust box.



Image: RoboVac X8 with its 600ml dust box capacity highlighted.

## 5. SETUP

### 5.1. Charging Base Placement

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 3 feet (0.9 meters) of clear space to each side and 6 feet (1.8 meters) in front of the charging base for optimal navigation and docking.

# Pet Hair Magnet

Pick Up 57.6%\* More Pet Hair



\*When compared with RoboVac 30C.

Image: RoboVac X8 docked at its charging base.

## 5.2. Initial Charge

Connect the charging adapter to the charging base and plug it into a power outlet. Place the RoboVac X8 onto the charging base to charge fully before first use. The indicator lights on the RoboVac will show charging status.

## 5.3. App Download and Wi-Fi Connection

Download the eufy Clean app from your smartphone's app store. Follow the in-app instructions to connect your RoboVac X8 to your home Wi-Fi network. **Important:** The RoboVac X8 only supports 2.4GHz Wi-Fi networks. Ensure your router is configured to support a 2.4GHz frequency band.

## 5.4. Initial Mapping

After connecting to the app, initiate the first cleaning cycle. The RoboVac will use its iPath Laser Navigation to create a detailed map of your home. Clear any obstacles from the floor to ensure accurate mapping. Once the map is complete, you can customize it within the app by defining rooms, no-go zones, and virtual boundaries.

## 6. OPERATING YOUR ROBOVAC X8

---

### 6.1. Starting a Cleaning Cycle

- **Via App:** Open the eufy Clean app, select your RoboVac, and choose a cleaning mode (Auto, Room, Zone, Spot) or tap 'Start' for a full clean.
- **Via Voice Command:** Use Amazon Alexa or Google Assistant. For example, say "Alexa, ask RoboVac to start cleaning."
- **Manually:** Press the 'Start' button on the RoboVac itself.

# Control The Action






-  No-Go Zones
-  Real-Time Mapping
-  Recharge & Resume
-  Zone Cleaning
-  Spot Cleaning
-  Tap N Go



Image: RoboVac X8 cleaning a carpeted area.

## 6.2. Cleaning Modes

- **Auto Clean:** The RoboVac cleans your entire home automatically.
- **Room Clean:** Select specific rooms to clean via the app.
- **Zone Clean:** Define a specific area on the map for the RoboVac to clean.
- **Spot Clean:** Direct the RoboVac to clean a concentrated area of dirt.

## 6.3. Suction Power Adjustment

Adjust the suction power through the eufy Clean app to suit different floor types and cleaning needs. Higher suction provides deeper cleaning but may increase noise levels and reduce battery life.

## 6.4. Recharge & Resume

If the battery level becomes low during a cleaning cycle, the RoboVac will automatically return to its charging base. Once fully charged, it will resume cleaning from where it left off.



Image: RoboVac X8 demonstrating its cleaning coverage and battery life.

## 7. MAINTENANCE

Regular maintenance is crucial for the optimal performance and longevity of your RoboVac X8. Perform the following tasks regularly:

### 7.1. Emptying the Dust Box

Empty the dust box after each cleaning cycle, especially if you have pets. The UltraPack Dust-Compression feature helps maximize capacity, but regular emptying prevents reduced suction and blockages.

## 7.2. Cleaning the Filter

The RoboVac X8 uses a HEPA filter. Tap the filter against a trash bin to remove loose dirt. Rinse the filter under running water if necessary, but ensure it is completely dry before reinserting. Replace the filter every 3-6 months, or more frequently depending on usage.

## 7.3. Cleaning the Rolling Brush

Periodically remove the rolling brush and use the provided cleaning tool to cut and remove any hair or debris wrapped around it. This prevents tangles and maintains cleaning efficiency.

## 7.4. Cleaning Side Brushes

Check the side brushes for tangled hair or debris. Remove and clean them as needed. Replace worn or damaged side brushes to ensure effective edge cleaning.

## 7.5. Cleaning Sensors and Charging Pins

Wipe the drop sensors, charging pins on the RoboVac and charging base, and the iPath laser sensor with a clean, dry cloth. Keeping these components clean ensures proper navigation and charging.

# 8. TROUBLESHOOTING

If you encounter issues with your RoboVac X8, refer to the following common solutions:

Problem	Solution
RoboVac does not turn on or charge.	Ensure the charging base is plugged in and the RoboVac is properly docked. Clean the charging pins on both the RoboVac and the base. Check the power adapter connection.
RoboVac gets stuck frequently.	Clear obstacles from the cleaning path. Use the app to set 'No-Go Zones' around problem areas. Clean the drop sensors.
Poor cleaning performance.	Empty the dust box. Clean or replace the filter. Clean the rolling brush and side brushes. Increase suction power via the app.
Cannot connect to Wi-Fi.	Ensure your Wi-Fi network is 2.4GHz. Move the RoboVac closer to the router. Restart your router and the RoboVac. Re-attempt the connection process in the app.
Mapping errors or distorted maps.	Ensure the iPath laser sensor is clean. Clear the area during initial mapping. If issues persist, delete the current map in the app and allow the RoboVac to create a new one.
Error 6 message.	This error typically indicates a sensor issue. Thoroughly clean all sensors (drop sensors, iPath laser sensor) with a dry cloth. If the issue persists, contact customer support.

# 9. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	eufy
Model Name	eufy X8
Model Number	T2262
Surface Recommendation	Hard Floor, Tile, Medium Carpet
Special Features	AI. Map 2.0 Technology, HEPA Filtration, Twin-Turbine 2000Pa x2 Suction, iPath Laser Navigation
Color	Black
Controller Type	App Control
Filter Type	Cartridge
Battery Type	Lithium Ion
Dust Box Capacity	600 Milliliters
Power Source	Battery Powered
Control Method	App
Compatible Devices	Amazon Echo (Alexa), Google Assistant
Item Dimensions (L x W x H)	13.58"L x 13.58"W x 3.85"H
Item Weight	7.72 Pounds
Noise Level	50 Decibels
Indoor/Outdoor Usage	Indoor

## 10. WARRANTY & SUPPORT

The eufy RoboVac X8 comes with a limited warranty. Please refer to the 'Warranty Information' document included in your package for details on warranty coverage and terms. For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the official eufy support website or contact their customer service team. Contact information can typically be found on the eufy website or in your warranty documentation.

For the latest information and support resources, please visit: [eufylife.com/support](https://eufylife.com/support)